

Transmitter Operating Instructions

NOTE: The transmitter uses 2 AAA nimh rechargeable batteries. You can also use 2 AAA alkaline or 2 AAA lithium batteries.

Keypad functions

1- To turn the transmitter on, press the shift key (power on key). The gold color power led will turn on and the transmitter will stay powered for 1 minute and then turn off to increase battery life.


2-To play a sound, just enter the exact number of the sound you wish to play on the keypad and then press the play key. To pause a sound press the play/pause key.

3- The volume control has 6 levels of volume. One key press for each volume level of change. To increase volume press the volume + key. To decrease volume press the volume - key. If you press and hold the shift key and then press the volume + key the volume will go to the highest level. If you press and hold the shift key and then press the volume - key the volume will go to the lowest level.

Favorite sounds

You can assign any sound you have to keys 0 to 9. To assign a sound to a numbered key, play the sound you want to be a favorite. While the sound is playing press and hold the shift key and then press the FAV-SET key. Next press one key (0 thru 9) to store that sound. To play one of your favorite sounds first press the FAV key and then the numbered key of the favorite sound you want to play. You can have a total of 10 favorite sounds. You can also change any or all of your favorite sounds at any time using the method described above.

Power on indicator

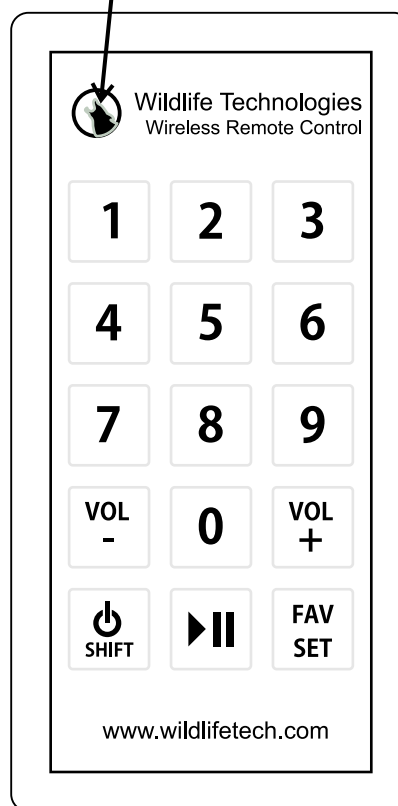

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.