


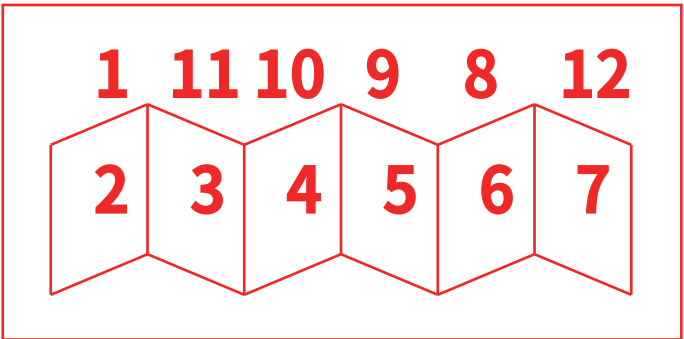

正面

CAUTION

Model: SL01

FCC ID:OXGSL01

CAUTION-Electrically operated product:
Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Warning:

- Do not dispose the Wall Walking Spider into fire.
- Do not disassemble the Wall Walking Spider by yourself.
- Built-in battery specification: 3.7V, 400mAh; input power: 5Vdc 1A, Please pay attention to electrical safety

DOWNLOAD APP

Search "Show Spider" to download the APP.

"Show Spider"

Download on the App Store

Apple App Store

GET IT ON Google Play

Google Play

Or

Scan QR Code to download.

IOS

Android

Compatibility:

- The "Show Spider" App only support IOS 7.0 or Android 4.4 and above.

PRODUCT LIST

DC line 1x

Wall Walking Spider 1x

WORKING MODE

OFF

Ground Walking Mode

Wall Walking Mode

IMPORTANT NOTES

When controlling spiders, make sure keep the distance of your phone APP and spider within 10 meters.Keep the ground and wall clean and smooth.

CHARGING

OFF

Red: Charging, Green: Full charged.

It takes about 30 minutes to make the spider full charged.

5Vdc 1A

USB

背面

CONTROL THE SPIDER VIA APP

Blue light flashing: Disconnected
Blue light on: Connected

Bluetooth Connection Indicator: Blue Light

Turn on Bluetooth

After Opening APP, It will connect automatically.

Switch to the "Ground Walking Mode" or "Wall Walking Mode" postion

Wall Walking Spider Product Description

APP DESCRIPTION

Easy App Interface

How to control spiders?
Just slide the handle in the direction you want it to go, and the spider will follow your movements.

Note:

- 1. When the spider moves forward, both indicator eyes will be lighting on red.
- 2. When the spider moves to left, the left indicator light will be lighting on red.
- 3. When the spider moves to right, the right indicator light will be lighting on red.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

TROUBLESHOOTING

PROBLEM	SOLUTION
Wall walking spider will not start.	1. Power switch is off, turn it on. 2. Phone APP cannot connect to the spider, check your phone setting and turn on Bluetooth. 3. Battery no power, charge spider.
Wall walking spider does not drive straight.	1. Make sure surface is clean and smooth. 2. Make sure surface is neither too rough nor too smooth. 3. Make sure surface is flat.
Wall walking spider slips climbing the walls.	1. Clean the tires with a damp rag. 2. Fold up the fabric skirts for a better seal prior to use.
Wall walking spider falls off the wall.	1. Make sure to recharge after use for about 30 minutes. 2. Clean tires and make sure your wall and floor clean. 3. Check the fabric skirts, if they are pulled loose, tape them back on with flexible tape.

Holiday show»home™

Wall Walking Spider

(Smart Phone Remote Control)

FC Bluetooth®

Product Size: 5.725*1.725*4.575 inch
Product Weight: 52g (Packaging Weight: 107g)

PDF#SL01-P04