
Key Fob Remote INSTRUCTIONS:

AB70TX

Please pull out the insulating tape from the remote control, before starting to use it.

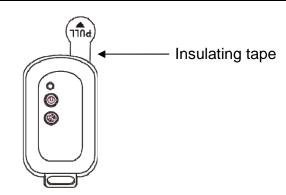

- 1. The first button is for the on/off power switch for the lights and the second button is for choosing different functions.

Function 1: Music Dancing Function 2: Auto Combination

Function 3: Warm White Steady-on, Multi Cascade

Function 4: Warm White Steady-on, Multi Fade-in & Fade-out Function 5: Warm White Fade-in & Fade-out, Multi Steady-on

Function 6: Steady-on

Function 7: Warm White Steady-on

Function 8: Multi Steady-on

Function 9: Warm White Steady-on, Multi Twinkle Function 10: Warm White Twinkle, Multi Steady-on

Function 11: Warm White Steady-on, Multi Random Twinkle

Function 12: Fade-in & Fade-out



If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

- 1. Use phillip screwdriver to open the back cover of the remote control.
- 2. Replace with a new alkaline "A27S" (12 volt) battery (included) into the compartment.

WARNING: This is not a toy and is not intended for use by children.

- (A) Do not dispose of the battery in fire as the battery may leak and explode.
- (B) Do not mix old and new batteries and do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- (C) Exhausted batteries are to be removed from the product.
- (D) Use type "A27S" (12 volt) batteries.

Safe for indoor use.

FCC warning statement:

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.