

USER MANUAL



NOTE: For Spanish users, please go to "Settings", then go to "Language & Input" to change from English to Spanish Language OSD.

7" SupraPad Phone Tablet

To assure the product to work in best status please read the users manual carefully before operation and keep it well for future use



Thank you for purchasing iVIEW products, for more information or to purchase new products, visit us on **WWW.IVIEWUS.COM** or call: **(909) 627-9888**.



iVIEW-1030TPC
(10" Tablet PC)



iVIEW-999TPC
(9.7" Tablet PC with Quad Core)



iVIEW-975TPCII
(9.7" Tablet PC with Dual Core)



iVIEW-920TPC
(9" Tablet PC with Dual Core)



iVIEW-900TPCII
(9" Tablet PC)



iVIEW-785TPC
(7.85" Tablet PC with Quad Core)



iVIEW-797TPC (Color)
(7" Tablet PC with Phone)



iVIEW-788TPC (Color)
(7" Tablet PC with Quad Core)



iVIEW-778TPC
 (7" Tablet PC with Dual Core)



iVIEW-777TPCII
 (7" Tablet PC with Dual Core)



iVIEW-776TPC
 (7" Tablet PC with Dual Core)



iVIEW-650TPC
 (6.5" Tablet PC with Phone)



iVIEW-600TPC
 (6" Tablet PC with Phone)



iVIEW-420TPC
 (4.3" Tablet PC)



Mira Dongle
 (Miracast / WIFI Display on TV)



iVIEW-3500STBII
 (Converter Box)

Content

1. Introduction	3
1.1 Acknowledgement.....	3
1.2 Announcements.....	3
1.3 Safety Instruction.....	4
1.4 Appearance and button.....	5
1.5 Abbreviation/Terminology.....	7
2. MID Introduction	7
2.1 MID Accessories Introduction.....	7
2.2 MID Operation and Preparation	8
2.3 MID Status and Reminder	8
3. Quick Start Guide	9
3.1 Keys Function.....	9
3.2 Startup and Shutdown.....	10
3.3 Open and Close the Screen.....	10
3.4 Usage of Touch Screen.....	11
3.5 Main Interface.....	12
3.6 Visit Application Procedures.....	15
3.7 USB Connection.....	16
3.8 Words Input.....	18
3.9 Application Technique.....	19
4. Basic Setting.....	20
4.1 Wireless and Internet.....	20
4.2 Display.....	21
4.3 FM Transmission.....	22
4.4 Management of Application	23
4.5 SD Card and MID Storage.....	23
4.6 Date and Time	24
4.7 Language Setting.....	26
4.8 USB mode choice	26
4.9 About Tablet.....	27
4.10 Fixed-time Startup and Shutdown.....	28

4.11 Security Setting.....	28
5. Multi-Media.....	30
5.1 Music.....	30
5.2 Video.....	31
5.3 Photo Gallery.....	32
5.4 Camera.....	34
5.5 FM Radio	35
6. Communication Function.....	37
6.1 Phone.....	37
6.2 Text Messaget.....	38
6.3 Contact List.....	39
7. Internet.....	40
7.1 Browser.....	40
7.2 Email.....	41
7.3 3G Internet.....	43
8. GPS Function.....	43
9. Other Application Procedures	44
9.1 Clock.....	44
9.2 Calculator.....	44
9.3 File Manager.....	45
9.4 Recorder.....	47
10. Installation of Procedures.....	48
10.1 Installation.....	48
10.2 Uninstall.....	48
10.3 Update Path.....	49
11. System Upgrade.....	49
11.1 Preparation for System upgrade.....	49
11.2 Restore Factory Setting.....	49
11.3 System Upgrade.....	50
12. Troubles Shooting.....	54
Appendix 1.....	55

1. Introduction

1.1 Acknowledgement

iVIEW's new 7" SupraPad 797TPC is the next-generation tablet PC with 2G/3G Phone and dual SIM Cards and supports frequencies to cover most countries in the world. It features with 7" high resolution screen and strong processors of Dual Core A7 CPU providing access to the web for news, weather, or local business info; downloading thousands of Apps from the Android Play Store to tap your need, such as games, favorite movie clips, music, and YouTube videos. With built-in bluetooth you can connect to Bluetooth speaker system and earphone to listen to music, or connect to a bluetooth keyboard for easy typing, and send files to another tablet or mobile phone with bluetooth function. The GPS feature is another plus that helps with the road navigation. With memory of 8GB, you may store plenty of pictures, movies, and documents. Expansion storage is up to 32GB via Micro Card Reader slot. iVIEW-797TPC SupraPad is your all-in-one tablet that you can't live without.

1.2 Announcements

Preventive maintenance

- Please always keep the MID dry. To avoid the device short trouble, corrosion fault and electric short. Please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance.
- Never shock, throw, prod the MID, or drop, extrude, bend the MID.

 
-
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

1.3 Safety Instruction

Before the operation of the MID, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the MID when driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and regulations. Please shut down the MID when it is near to the medical area.
- To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the MID or using airplane mode when you are boarding a flight.
- To avoid electronic equipment failure, please shut down the MID in the vicinage of high-accuracy electronic equipments.
- Please don't disassemble the MID and accessories. Only authorized agent has access to service the MID.
- Please keep the MID far away from magnetic equipments, the radiation of MID may erase the data stored in the magnetic equipments.
- Never use the MID in the vicinage of high temperature, inflammable gas (gas station)
- Protect the MID and accessories from kids reach scope, and avoid the kids to use the MID without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the MID.
- Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the MID or PC.
- Never use the MID in bathroom or other humid environment, and please protect the MID from liquid wash or wet.

1.4 Appearance and button:

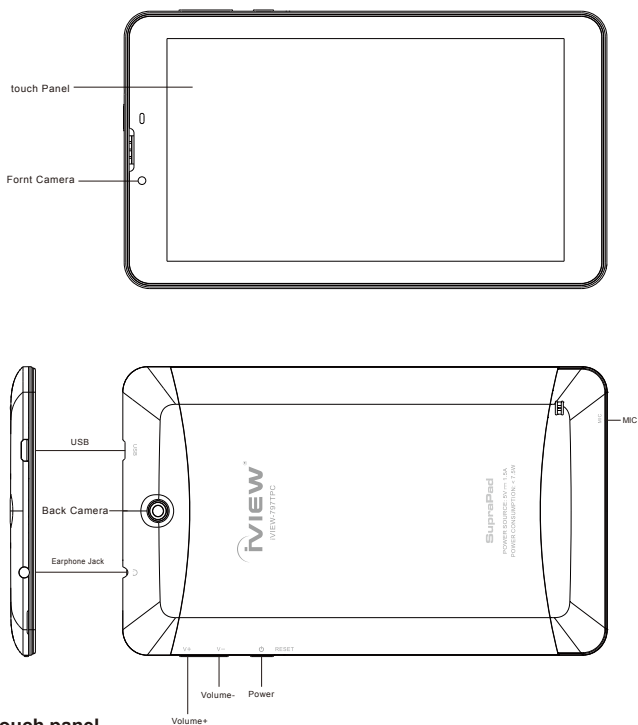

* Touch panel

7" Capacitive touch panel: During the operation, you can click and drag items on the touch panel.

*** POWER**

To power on: Press and hold the power button, the system will enter the main interface.

To power off: In the main menu interface, press the power button for about 5 seconds to power off, the system will appear "power off" option, click "ok" and you can safely power off.

Lock screen: Press power button to lock screen or unlock screen.

【Remark】 : When the power ran out, the system will power off automatically.

*** Volume + / Volume-**

The buttons Volume + / Volume- located on the side of the tablet which allow to adjust volume.

*** Front Camera, back Camera**

Front 0.3MP, Back 2.0MP.

*** SIM Card**

Portable exchangeable memory chip for phone function.

*** Card Reader**

Card Reader Slot: External micro SD card.

*** Earphone jack**

3.5 mm standard earphone jack.

*** Micro USB**

Micro USB Jack: You can use it to connect the computer for data transmission, charging, or use the USB charger to charge.

* Reset

When the tablet fails to respond when buttons are pressed, using a thin small object (such as a paperclip) to press RESET button, the tablet will force to reset.

【Remark】 : Unless it's unable to power off by normal procedure, otherwise don't use the reset option.

1.5 Abbreviation/Terminology

Abbreviation/Terminology	Full Name	Description
MID	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Base on IEEE 802.11b standard wireless LAN
TF	TransFlash	Alternative name Micro SD, super miniature memory card

2. MID Introduction

2.1 MID Accessories Introduction

Package:

Below items are included in your tablet package:

- MID complete device

-
- Power adaptor
 - USB cable
 - OTG cable
 - Earphone
 - SIM card adapter *2
 - User manual

2.2 MID Operation and Preparation

Battery Charging











If this navigator is first used, please use AC adaptor to fully charge it.

1. Apply the power adaptor to charge for MID.
2. Don't pull out the adaptor while charging.

2.3 MID Status and Reminder

Reminder Icons

When some remind message appears in your reminder window, please click column and slip the screen to open the reminder list. Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up. Please refer to below status icons:

	New email		Airplane Mode on
	USB connected		USB adjustment connected
	Return button		Downloading
	Display recently-used application		Home button
	Current electric volume		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails. When WIFI is open, you can open the reminder board to view the detailed information.





Open the reminder board

When the reminder column shows new reminder icon, please hold the column and slip down your finger, then the reminder board is opened.

3. Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long press to startup and Shut down.
Volume + (up)	Increase the volume
Volume - (down)	Decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	Click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Display recently-used application 	Display recently browsed history

3.2 Startup and Shut down

Startup

Long press POWER key for three seconds, you can enter into startup picture. The system enters into screen lock status, please unlock it.

Shut down

1. Long press POWER, it will popup Shut down window.
2. Shut down window contains options: Power off, Reboot, Airplane mode, profiles.
3. Then click Power off.

3.3 Open and Close of the Screen

Screen will be closed on its own when no operation is taking place.

1. Screen will be closed on its own if no operation is taking place for some to save battery power.
2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.



Picture 3.1

3.4 Usage of Touch Screen

MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly Slide or Slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull

Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate

For most pictures, you only need to rotate the MID sidewise to change the screen direction from horizontal to vertical. For instance, when you are typing words, and watching movies.

3.5 Home Page

In the main interface as below picture 3.2, long press the blank and it will pop up windows to set wallpaper, folder, widgets, and shortcut.



Picture 3.2

The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3-2.1.



Picture 3-2.1

The shortcut icons management in desktop application.

The system below Android 2.3 have the function of creating folder in desktop, then put the icons into the folders. Android 4.1 system makes the function of creating new folder become much easier. Operations are as below:

1. Drag the icons need to be put together on one icon (can also overlay several icons) as Picture 3-2.2.
2. Then click the overlayed icons, the applications can be folded, as Picture 3-2.3.




Picture 3-2.2



Picture 3-2.3


Remove the icons in desktop

1. Press and hold the icons need to be remove, then on the right above of the screen,  icon will appear.
2. Drag the icon to the above of the removed icon till the icon becomes red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will pop up a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.


Voice search

1. Touch microphone icon .
2. Choose in the Google selection according to your own need.
3. Set the language you need in voice search window, and click confirm.
4. Speak to the microphone you need to search, the browser will open the search result list.

Note:

Before voice searching, please make sure your internet is well connected.

3.6 Visit Application Procedures

Click  in Picture 3.2, enter into main interface as Picture 3.3, choose the application procedure you want to visit.



Return to
home page

Picture 3.3

3.7 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 3.4, then click “open USB storage configuration”.
4. Now the USB is connected successfully.



Picture 3.4

Copy the document into memory card

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open "My computer" in your computer, check the items in "removable disc".
4. Copy the documents you need into "removable disc".
5. After copying finish, click "shut down the USB storage configuration" to uninstall.

Notice:

1. *When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.*
2. *Before copying, please confirm there is SD card in MID and it can be read.*

3.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers, it will show the screen keyboard. The keyboard contains below typing options:

1. Android keyboard
2. Google Pinyin

Choose the typing method you want

1. Click Setting pocedure application.
2. Click Language and Keyboard.
3. In the text setting area will reveal all the installed words-typing methods in your MID.
4. Choose the typing method you want.

Use and switch of input method



Picture 3.5

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to delete all the characters in the left of the cursor.

3.9 Operation Technique

Enter widgets interface

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Press and hold any widget to create its shortcut, then you can enter into the application through the shortcut icon.

Create application shortcut icons in the desktop



Picture 3.6

In the application interface or widgets interface, press and hold any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: System will require you to make more choice and then you can active this widget. If the target position has no space, the widget won't be add in the main screen.

Click the unnamed folder in the black box, it will pop up the hidden keyboard, the folder name can be renamed, the icons position can be changed through press and hold the icon.

4. Basic Setting

4.1 Wireless and Internet

Connect Wi-Fi

1. In the main menu or interface, choose **setting** application procedure.
2. Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.1
3. Choose the Wi-Fi internet you want to connect, if it has password, it will pop up the password window, enter password, click connect.



Picture 4.1

4.2 Display

Adjust the brightness of screen


1. Click **Setting** application procedure.
2. Click **display**, choose brightness.
3. When the brightness setting board pop up, move the cursor to adjust the brightness.
4. Click **OK**.



Picture 4.2

Adjust the screen standby time

 1. Click **Setting** application procedure.
2. Click **Display**.
3. Click **Sleep**
4. Screen standby time setting pop ups, choose the time you want to set.

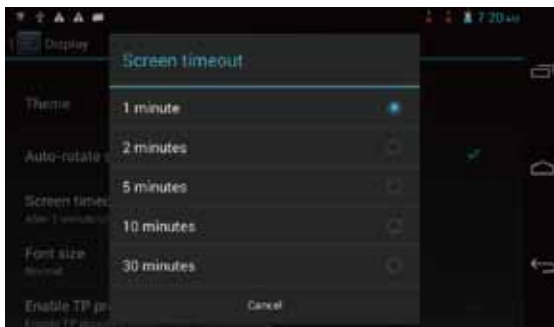


Picture 4.3

4.3 FM Transmission

Adjust the brightness of screen

 
1. Click **Setting** application procedure.
2. Click FM transmitter.
3. Operate as below picture.

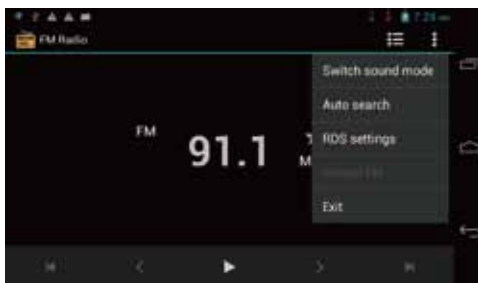

Picture 4.4

4.4 Management of Application Procedure

 1. Choose Setting procedure in the application procedure list.
2. Choose application, after entering, you can manage and delete installed applications.

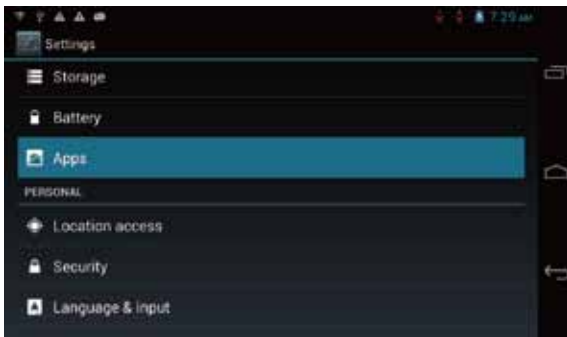

Picture 4.5

4.5 SD Card and MID Storage

 
Check the SD card and MID available space

1. Click Setting application procedure.
2. Click Storage.
3. Check the available space of SD card.
4. Check the MID internal storage space.

Safely remove SD card

Safely remove SD card can protect SD card and extend working life of SD card.

1. Click Setting application procedure.
2. Click Storage.
3. Click Remove SD card.
4. Now it is safe to remove SD card.

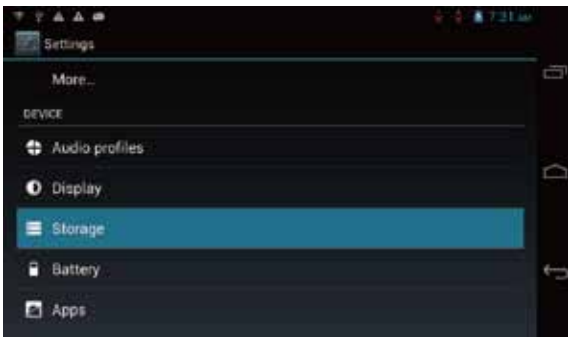

Picture 4.6

 
Remark: Removing SD card safely can protect SD efficiently and extend SD card life time.

4.6 Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

1. Click Setting application procedure.
2. Slide down the screen, then click date and time.

3. Turn off “auto setting of date and time”.
4. Turn off “auto setting zone”.
5. Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
6. Click Date setting, then click upper or down button to adjust date, month, and year, click setting when you finish selection.
7. Click Time setting, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you use 24-hour format). Click Setting to finish.
8. Click 24-hour format, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
9. Click date format setting, then choose the time format you want to show on MID.

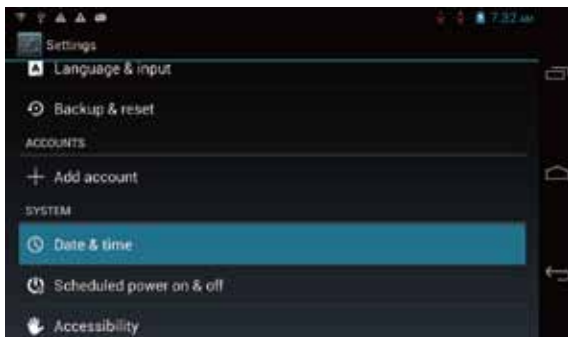


Picture 4.7

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.7 Language Setting

 
1. Click Setting application procedure.
2. Click Language and keyboard.
3. Click Language Selection, then choose the language you want, slide down to view more languages.

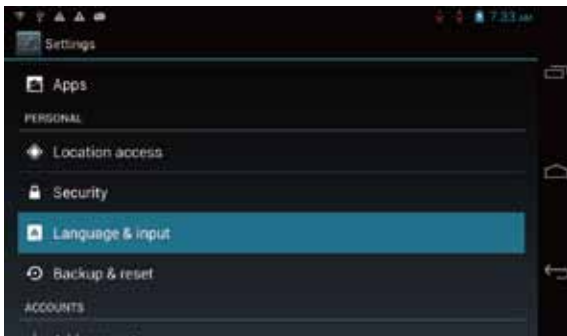

Picture 4.8

4.8 USB mode choice

 Choose the USB work mode: OTG/HOST/SLAVE..... ..

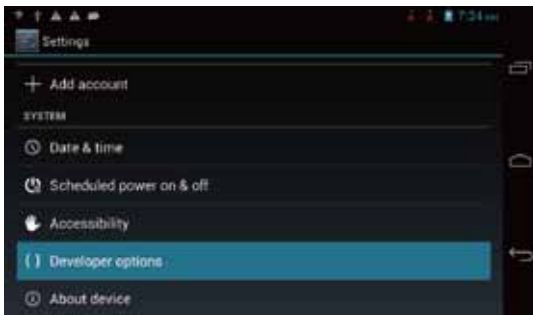

Picture 4.9

USB: Choose USB host mode in work, this mode can be mounted U plate and peripheral equipment

4.9 About Tablet

View the MID Status

1. Click Setting application procedure.
2. Click About Tablet, you can view the electric status messages and version No.

System update

1. Click Setting application procedure.
2. Click About Tablet.
3. Click System update, update as steps. (Please make sure there is new version TF card in device before installation)

View system version

1. Click Setting application procedure.
2. Click About Tablet.
3. You can view model NO., electric volume and internal version.

4.10 Fixed-time Startup and Shutdown

View system version

1. Click Setting application procedure.
2. Click fixed-time startup and shutdown.
3. Operate as below Picture 4.10



4.11 Safety Setting

Set locked screen

 
Lock the touch screen by unlock icon or password to protect your MID.

Note: You should enter the passcode after setting screen locked.

Set unlocked picture

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **locked the screen**.
4. Choose picture in text setting area.
5. Click next following the remind message.

6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As Picture 4.11, move your finger from the screen when finish. The system will record your new unlock pattern.
7. Click **continue**.
8. When you see the reminder, enter the unlock pattern, then click **confirm**.

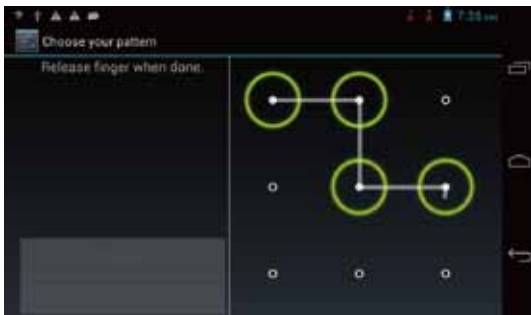

Picture 4.11

Set unlock PIN code


1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Choose **PIN** in text setting area.
5. Enter new PIN code(numbers) and click **continue**.
6. Enter new PIN code again and click **confirm**.

Set unlocked picture

1. Click **setting** application in main interface.
2. Click **safe**.
3. Click **screen locked**.
4. Set password in text setting area.
5. Set new password(letters and numbers) and then click **continue**.
6. Enter the password again and the click **confirm**.


5. Multi-Media

5.1 Music

Enter into music player: in menu or desktop click music  icon to enter into music player, click the music you want to play, as Picture 5.1:



 Picture 5.1

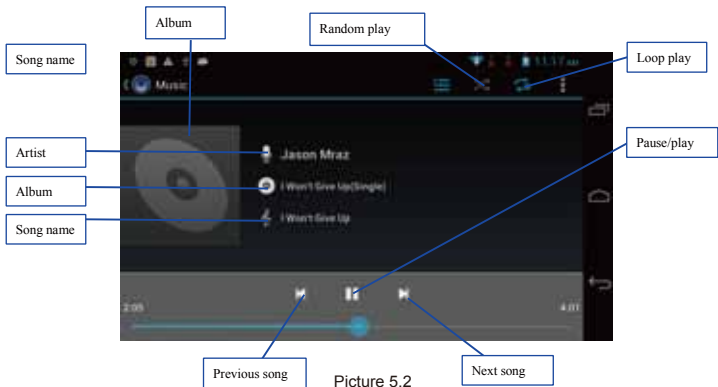

Picture 5.2


1. Drag the progress bar to adjust play progress.
2. Operation of music player button as Picture 5.2

5.2 Video

1. Enter video player: choose application in main menu, choose the video you want to play, as Picture 5.3
2. Operation of video player button as Picture 5.4



 
Picture 5.3

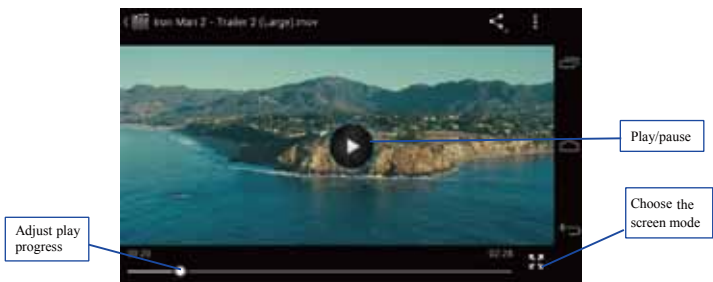

Picture 5.4

5.3 Photo Gallery

 Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

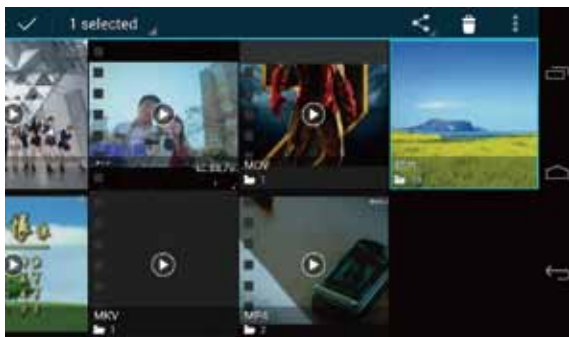

Picture 5.5

View pictures

1. Click **setting** application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view, the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.




Picture 5.6


Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures


When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

- Edit and set pictures
 1. Open a picture, use virtual key to click menu key, display menu selection.
 2. Click slide show, it will auto loop play(or choose  button in picture folder)
- Crop
 1. Click menu key to display menu selection.
 2. Then click crop, click and drag related area to adjust the cropper.
 3. Click cropper and drag it inside and outside to adjust the image.
 4. After adjust the size you want, click crop.
 5. If you wish to give up to crop, click cancel to return to picture browse.
- Edit
 1. Click menu key, display the menu selection.
 2. Click edit.
 3. Adjust the brightness, style, color setting in selection.
 4. Click save.
 5. If you want to give up edit, click return key, click not to return to picture browse.

5.4 Camera

In the main interface or desktop, click camera application procedure  , enter into camera.

 
- Operation of camera button as Picture 5.7
- Switch camera: choose Menu key, click switch front/back camera, as Picture 5.7

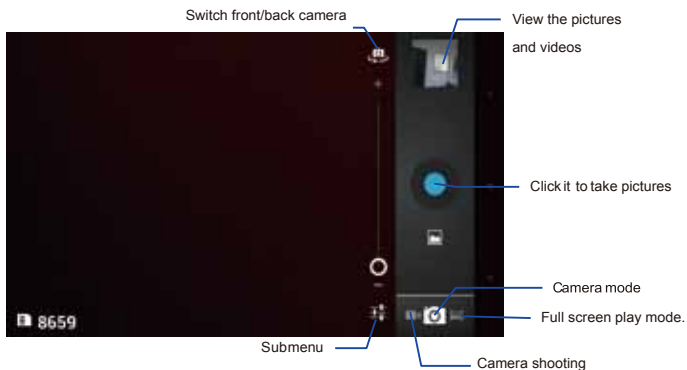


Picture 5.7


5.5 FM Radio

 Click  in the main interface or desktop to enter into FM radio interface:

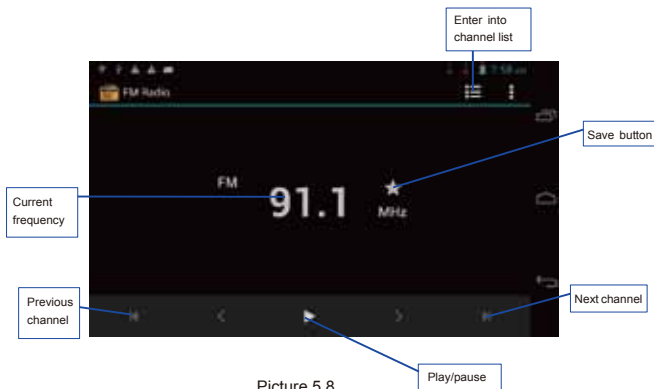


Picture 5.8

 - RDS setting: click Menu key in interface, click  button, enter into RDS setting as Picture 5.9, and choose the selection you want to add

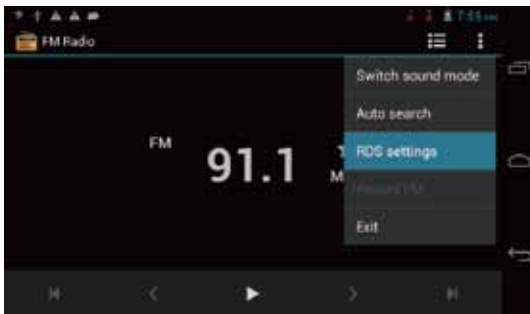


Picture 5.9

- Search channel: Click "Menu" in the main interface, click search button, it will start to auto search channels, the searched channels will be saved in the channels list.
- Save channels: Click  button in the main interface to save the channel, and the channel will be saved in channels list.

6. Communication Function


6.1 Phone

 
- 1 Click Phone application procedure
- 2 Operate as Picture 6.1

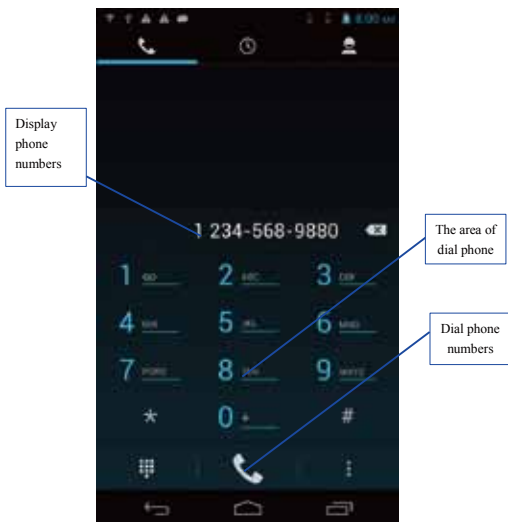

Picture 6.1


6.2 Text Message

 - 1 Enter into main menu, choose  application procedure.

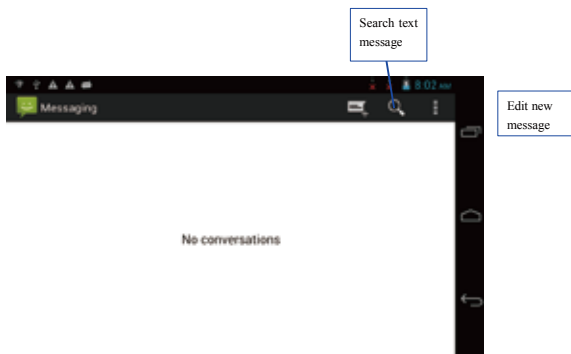

Picture 6.2

 - 2 Click "Edit new message"

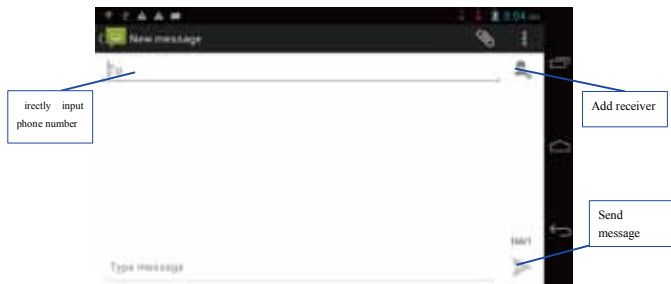


Picture 6.3

6.3 Contact List



 Click Contact list

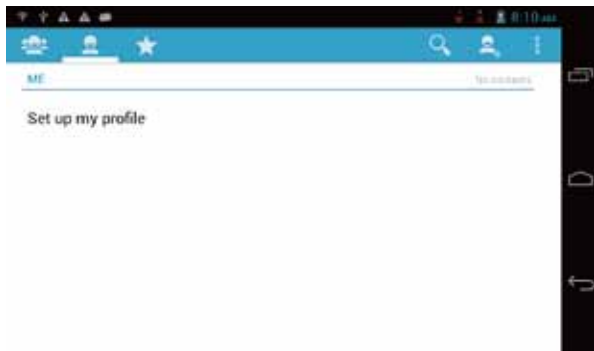

in the main interface, enter into the contact list as Picture 6.4




Picture 6.4


- Search contact: click  button, enter into search function
- Add contact: click  button, enter into add contact interface.

7. Internet

7.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to

 Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 7.1.

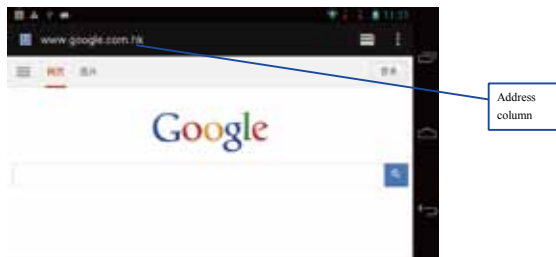

Picture 7.1

Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 7.2



Picture 7.2


7.2 Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163), as Picture 7.3



Picture 7.3

a. Email Setting

1. After you click the sending email icon  , you can see the email setting guide, which can help you to set.
2. Input your email address and password.
3. Click “Next step” button, choose your email type is POP3 or IMAP.
4. Click “Next Step” button to check whether the email box can receive or send emails
5. Input the email account and display the email subject, and click finish.
6. If the email box is available, you will enter into your mail box automatically.


b. Delete the email account

 
You can delete POP3 or IMAP email account from your MID

Click  .

1. Enter into your mail box.
2. Press Menu key.
3. Click Account
4. Press the account you want to delete.
5. Click confirm to remove.

c. Send E-mail

1. Click  to display your mail box.
2. Click the inbox, it will refresh the new emails automatically; click it to read new email.
3. Press Menu key. Menus will pop up.
4. Click Edit to enter into new email editing interface.
5. Input the receiver's email address.
6. Input the subject and email content.
7. If you want to add attachment, click menu key, the menu pop up.
8. Click "Add attachment" (pictures, video).
9. Click "send" to send the email out.

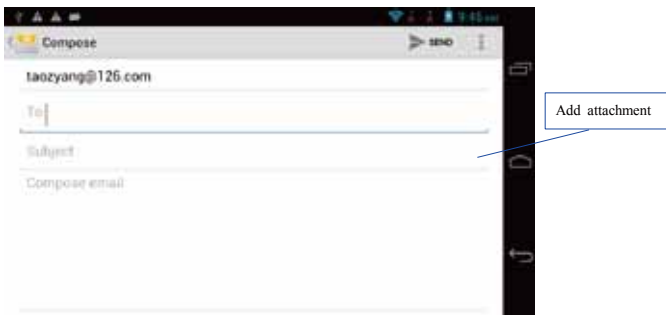

Picture 7.4

7.3 3G Internet

1. Turn off the device and plug in 3G card.
2. Turn on the device.
3. Unlock to enter into system, make sure the MID can search signal.

(Note: 3G internet can't be used with wifi internet at the same time, the system is defaulted to use Wifi internet. If you wish to use 3G internet, please turn off wifi internet.)

8. GPS Function

 
8.1 GPS Navigation

Map of the third parties is required for MID internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

9. Other Application Procedures


9.1 Clock


Click Clock procedure, enter into below interface as Picture 9.1.
There are clock, picture, music and homepage buttons.

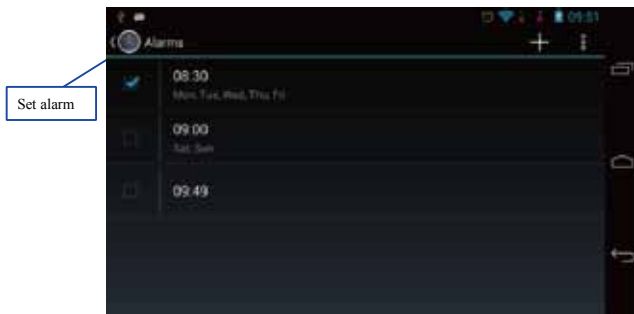

Picture 9.1

9.2 Calculator

 
1. Click .
2. Enter into the basic board of calculator.
3. Soft touch the numbers or operator in calculator to calculate.

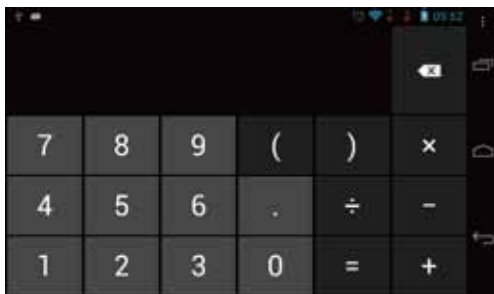

Picture 9.2

9.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

In the main menu or desktop, click the document manager icon  to enter into documents manager.




Picture 9.3

a、 Copy, cut, delete, rename the files and folder: choose the file or folder, Press and hold the file or folder to enter into the interface as Picture 9.4, you can operate the file or folder.



Picture 9.4

 b、 Choose any file, Press and hold it, it will pop up “share”, choose the share way you want in the list

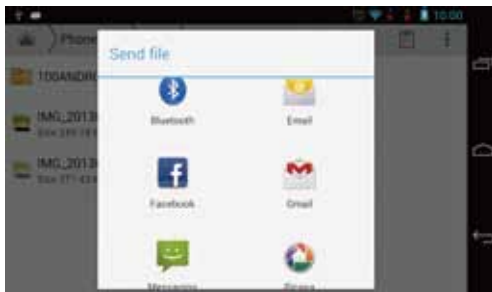






Picture 9.5

c. Install apk file: Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.

d. Build new folder: Choose the menu you want to build the file, click Menu key, choose new folder, you can build new folder as reminder

9.4 Recorder

 In the main interface or desktop, click recorder icon  to enter into record interface, click record key  to start record. Click Stop key  to stop recording. Click Play key  to play the recorded sound. The system will auto remind you to use or abandon this record, please choose it manually. Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.

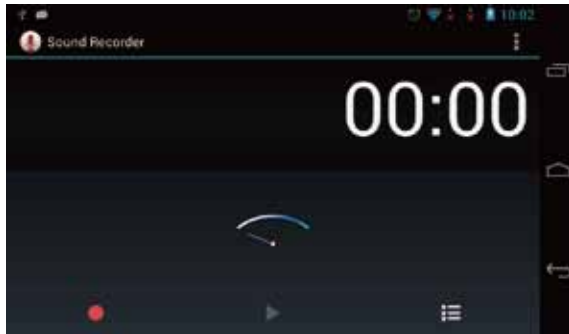

Picture 9.6

10. Installation of Procedures

10.1 Installation

Install the third party application procedure

You can gain the third party application procedure which match the Android system from internet, and install it by yourself in MID. Copy the application procedure into SD card, and insert in the MID.

1. Click “file manager” application procedure; choose the application procedure you need to install.
2. Hold the application procedure you need to install.
3. It pop up install, click install apk.
4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with APK.

10.2 Uninstall

Uninstall application procedure

1. Click setting icon in main interface.
2. Click manage application procedure, list all the application procedures insralled in the system.
3. Click the APK you want to uninstall, click uninstall.
4. Click confirm to finish uninstallation.

Skill: The procedure manager installed by system has many convinient methods to uninstall, after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

10.3 Update Path

Update the application procedures of Android system

1. Download the latest application procedure from appointed website.
2. Download form the Android system related software forum in the internet.

11. System Upgrade

11.1 Preparation for System upgrade

Download the upgrade procedure

You can download the software upgrade pack from website, then use the upgrade pack to upgrade the system version of MID.

Preapration for system upgrade:

1. Download the system upgrade pack to your computer from related websit.
2. Prepare the toolf for system upgrade; one TF card, file sytem FAT or FAT 23 format both ok.

11.2 Restore Factory Setting

When your MID occures some serious mistake or unlocked passwords are forgotten, you can apply restore factory setting to return to factory status. Restore the factory setting will delete all the data such as exisiting application procedures and user's setting, so do remember to backup your data.

-
1. When the device is in shutdown state, hold the Volume up key by one hand, and press Power key into upgrade picture by another hand.
 2. Enter into upgrade picture, the picture is a triangle with a exclamation mark.(As Picture 11-1)
 3. Click Power key when you see the triangle.
 4. The system enter into another picture, recovery status, there are eight items for option.(As Picture 11-2)
 5. The first option: Restart the system. The second option: System upgrade from SD2. The third option: System upgrade from external SD card. The forth option: Ripe caching data. The sixth option: Ripe data/ Factory reset. The seventh option: Backup user's data. The eighth option: Recover user's data.
 6. Now you press Volume down key, the option bar will slide down, press Menu key to execute.
 7. Choose wipe data/factory reset to execute.
 8. Enter into confirmation interface, click Yes to restore factory setting, click No to exit the confirmation interface.

11.3 System Upgrade

Note: Before upgrading, please confirm the electric volume of your MID is more than 30% to ensure the upgrade can be finished. Besides, you need to backup your important data, such as application procedures, emails, etc.


Upgrade steps: (First insert the TF card with update zip upgrade package into MID, the file named update zip, or put this package in the root directory of the MID.)

-
1. First click Volume up key, then press Power key to enter into recovery mode, as Picture 11.1:



Picture 11.1

 2. Click Power key to enter into main menu interface, as Picture 11.2

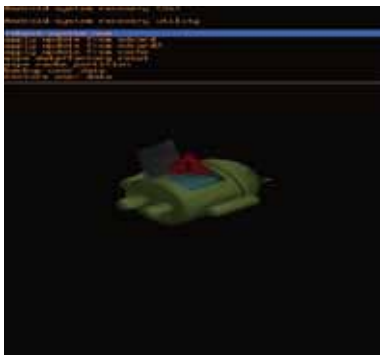

Picture 11.2

3. Move the cursor by volume down, choose apply update from SD card, as Picture 11.3



Picture 11.3

4. Click volume up key enter into this menu, click update.zip, as Picture 11.4



Picture 11.4

12. Troubles Shooting

1. The first startup of MID is slow

After the MID system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. MID can't connect Wi-Fi

- Make sure the wireless router of internet service can work in normal.
- Ensure the MID and wireless router in certain distance, and no wall or other barrier between them.
- Ensure the user name and password both correct.

3. MID feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, MID may feel fever. It is normal.

4. Email can't be set or Registration of application procedure.

- Ensure your internet is well connected.
- Make sure your email setting way is correct.
- Keep your system time and local time consistent.

5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press Reset key(next to power port) to reset the system.

6. The webpage can't be opened

- Please keep the distance between from route to MID in effective range.
- Please restart WIFI and try again.

7. MID works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't need in advanced task management, or uninstall some third party application to release more system resources.

Appendix 1

Product Parameters:

Items	Details	Description
Basic Parameters	MID Model No.	iView-797TPC
	CPU	MediaTek 6577 Cortex A7, Dual Core
	CPU Frequency	1.2 GHz
	DDR-RAM	1GB
	NAND FLASH	8GB
	Operation System	Android 4.1
	Internet Mode	GSM
	Data Service	GPRS
	MHz	2G GSM Phone: 850/900/1800/1900MHz 3G WCDMA Phone: 850/1900/2100MHz
	Camera	Front 0.3MP / Rear 2.0MP
	USB port	Micro USB 2.0
	battery	2500 mAh / 3.7V
	AC adaptor	Input voltage DC 5V, current 1.5A
	Memory card	Micro SD card, Maximum storage 32G
	Main screen	7.0 inch Hi-fi TFT display screen, with resolution of 1024*600

Basic Functions	GPS Navigation	Built-in GPS satellite signal receiver can search the fixed position accurately
	GSM communication	Built-in 3G modules, you can achieve wireless communication function through SIM card
	Bluetooth	Built-in Bluetooth module, support FTP file delivery, you can share various fascinating documents in vicinity.
	G-sensor	Switch from crosswise and erect screen freely and support all kinds of gravity-reacted games, which can experience real game enjoyments.
	FM transmission /receiver	Unique FM transmitter function. The product can transmit navigation voice to FM receiving device through FM, and then play by car speaker; you can enjoy perfect acoustic fun. FM can bring many channels for your option.
Application procedure	Video play	Support 3GP、MP4 format, with maximum resolution of 720*576
	Music play	built-in music player, support MP3/AAC/AMR/WAV format
	Games	support installation of Android third party games
	Input method	Android keyboard, Google Pinyin input method
	Picture view	Support JPG、BMP、PNG、GIF format pictures view
	OFFICE software	Support office (word、excel read and edit),support PDF viewer

Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

SAR tests are conducted using standard operating positions accepted by the FCC/IC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

The SAR limit of (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: BR07 has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for when properly worn on the body is 0.882W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

Use Conditions:

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3 B)/NMB-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Basic Warranty Statement

This product is warranted to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety **(90) DAYS** (parts and labor) and **one (1) YEAR** (parts only) from the date of original purchase. We agree under the warranty period to replace product if it is determined to be defective at "No Charge". This limited warranty does not cover any loss or damages that occur as result of:

- Cosmetic damage.
- Shipping or improper installation or maintenance.
- Misuse.
- Neglect.
- Any cause other than ordinary commercial or industrial application.
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities.
- Accidents, acts of God.

In the United States and Canada contact Customer Service at (909) 627 - 9888.

*** Please note that in order to have your merchandise repaired and replaced by warranty, you must contact our customer service representatives by phone or email, and get RMA number**

To obtain factory service, the original purchaser MUST present the following:

1. A sales receipt/proof of purchase indicating date of purchase
2. Your Name, Place of Purchase, Address, Unit Model, and Description of Problem.
3. Send the unit pre-paid to the address below in the original packaging or reasonable substitute to prevent damage. **No return will be shipped back to a PO BOX.**
4. All of the accessories that came with the product package must be sent along with the main unit.
5. Please include your check or money order in the amount of **\$20.00** to cover handling and return shipping charges. We will not be responsible for delays or unprocessed claims resulting from purchaser's failure to provide any or all of the necessary information.
6. There is Additional Shipping Charge for areas outside of United States. For shipping charge please consult with our customer service.



***Please review your user
guide carefully before
using this product.***

*If you need further assistance
please contact us at:*

(909) 627 - 9888

*Additional troubleshooting information
can also be found on the web at:*

***www.iviewus.com and click on "Support"
or email us at support@iviewus.com***