



NG 001

User Manual



8" Tablet PC

To assure the best performance of the tablet please read the guide carefully before operation and keep it for future reference

Net Generation's new 8" Pad NG001 is a next-generation tablet PC. It features a 8" IPS High Resolution Screen (800x1280) and Quad Core Cortex A53 CPU providing access to the web for news, weather, or local business info; downloading thousands of Apps from the Play Store, such as games, music, and videos. With built-in bluetooth you can connect to Bluetooth speakers or earphones to listen to music, or connect to a bluetooth keyboard for easy typing. Equipped with memory of 32GB, you may store plenty of pictures, movies, and documents. Expansion storage is available via Micro Card Reader slot, up to 128GB. The NG001 is your all-in-one tablet that you can't live without.

 
Notes:

- * This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- * This is a high-density electronic product; please do not attempt to dismantle it.
- * Avoid dropping or banging the tablet.
- * Avoid using this product in the following environments: Extreme temperatures, High Humidity, dusty, with strong magnetic fields.
- * Wipe the product case by using dry cotton cloth, the use of chemical cleaning products is not recommended.
- * Use of headset for long periods of time, at high volume may cause permanent hearing damage.
- * Do not use headphones when crossing a road, driving a motor vehicle or bicycle to avoid possible traffic accidents.
- * Use included battery, charger and accessories only, the use of any third party accessories will VOID tablet warranty, and may be dangerous.
- * Dispose of tablet and accessories according to local environmental regulations.
- * If you have any questions in the process of using of the product, please contact your local dealer or contact TabletKiosk customer service center directly.
- * TabletKiosk shall not be responsible for any file or data loss caused by product malfunction, tablet damage or during repair process. Please follow the user's guide maintenance instructions and perform regular file back-ups to avoid data loss.

Content

1. Appearance and button	2
2. Start-up and shut-down	3
3. Desktop	3
4. Buttons	4
5. Main menu operation	5
System settings	5
*Time / Date setting	6
*Brightness	7
*Screen standby	8
*Wireless & network	8
*Install, unload, run the application	9
*Backup & reset	10
*Storage	11
*Language & keyboard	11
*ES file explorer	12
6. Network	13
7. Music playback	14
8. Video playback	15
9. Photo browse	16
10. Wallpaper	17
11. Record	18
12. Photograph	18
13. E-mail	19
14. External device	22
15. Features	23
16. Accessories	23

1. Appearance and button

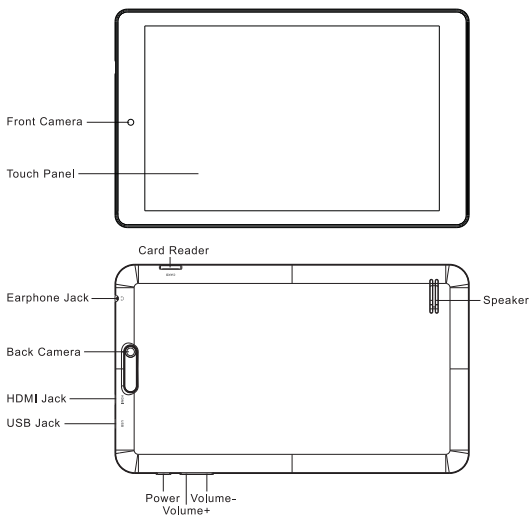

【Note】

To power on: Press and hold the power button, the tablet will enter the main interface.

To power off: In the main menu interface, press the power button for about 5 seconds to power off, on the screen will appear “power off” option, click “ok” and the tablet will safely power down.

Lock screen: Press power button to lock screen or unlock screen.

 
Screenshot: Press power button and Volume- buttons at the same time, and hold for 3 seconds.

When the power runs out, the tablet will power off automatically.

2. Start-up and shut-down

Startup: Press the power key and the tablet will begin the Start-up process.

Shutdown: Press the power key, the power menu will appear on the desktop, select a power option as shown below.

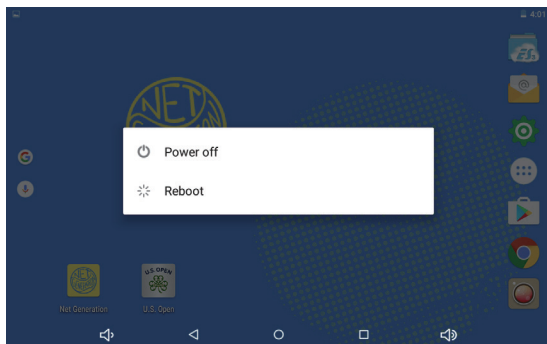


Click OK to shutdown

Sleep: In the normal state of operation, press the power button and hold for 2 seconds, the tablet will enter the sleep state, the screen will be closed. Another short press on the power button will return the tablet to normal operational mode. When the system is not in use you can enter this mode to reduce power consumption.

3. Desktop

 After the normal startup of the tablet is complete, you will see the Android desktop (below). The default desktop consists of quick search bar, status bar, and menu label icon.

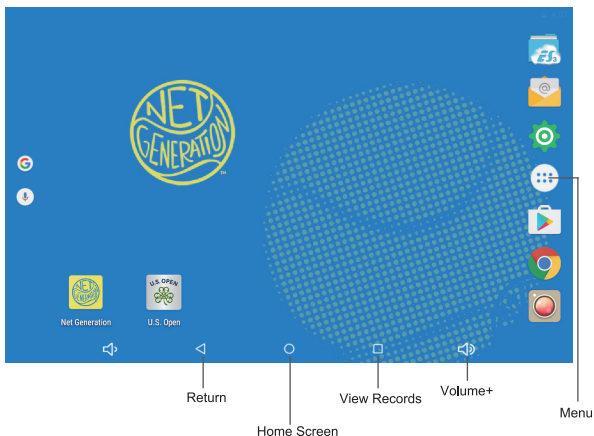

The status bar is used to display the network status of current tablet, battery power, time and other information.

Quick search box is used by typing keywords to execute a Internet search.

The main menu tag is in the right middle side of the screen, click it and the default menu bar will be expanded.

4. Buttons

Keys used in Android systems process:

The volume keys: Volume+, Volume- in the taskbar is used for Volume control.

The power button: Press and hold to power on/off. Press quickly to enter or exit sleep mode.

Menu key: Return or select the main interface.

Return key: Return to the last interface.

5. Main menu operation

 
Press the main menu tag on the main menu, as shown below:



In the main menu, you can set the system, execute the existing application, install a new application, start touch calibration, play music, play videos, browse webpages, play games and other operations.

System settings

Click on the main menu interface in the “Settings” icon, and then open the system settings interface, as shown below:

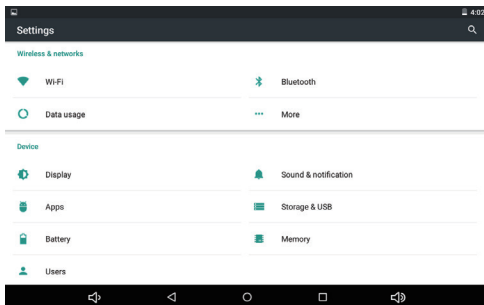

Select the relevant items to perform corresponding operation, for example:

- * Wireless & network
- * Sound & Display

 
● Time/ Date setting

In the settings menu, select 'the time and date settings' to enter the date and time settings interface:

You can choose the automatic mode by using the network time.

You can also set the date, select time zone, set time, select date format, set date and other information.


For example, choose the set date, as shown below:

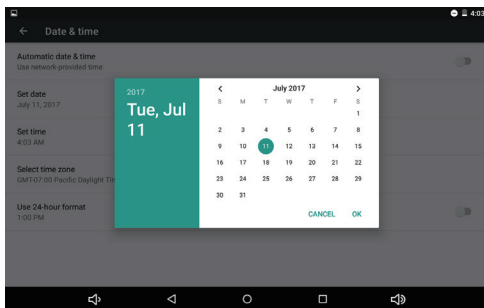

Choose+: Means increase of 1 unit

Select-: Means reduce 1 unit

 
You can also choose the number to enter into the input panel. Directly input the number, and then select the OK button, as shown below:

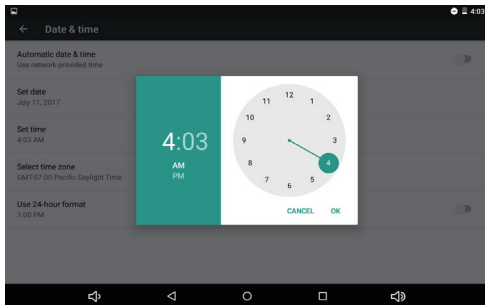

Select “done”, if the input number is legitimate, then the operation will be completed, and the tablet will use the new settings.

● Brightness

 In the settings interface panel select “display settings”, from the drop-down list “Brightness” as appears in the following dialogue.

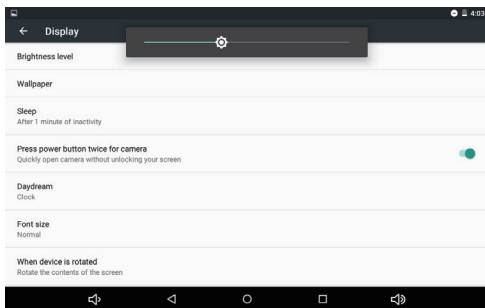


● Screen standby

Screen standby: You can set the time for the screen standby function to occur. After it starts it will lock the screen and the screen saver appears.

In the interface select “display settings” in the drop-down list select 'screen standby' as appears in the following image.

 
Note: During video playback, the standby screen function is automatically disabled.

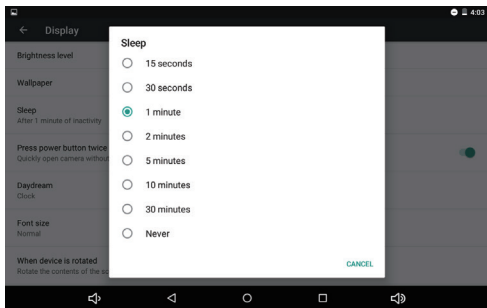

● Wireless & network

Click on the “Settings” icon in the main menu, click on “wireless and network” in the “wireless and network” settings. Click on the “WIFI” column and WIFI function can be enabled . Click “WIFI settings” column to enter “WIFI setting interface”, as shown below:

 
In the “WIFI” interface (Pictured above), by clicking on the WIFI column you can open and close the WIFI function. Click "network notification" to list the wireless routers that are available to the tablet. Click the searched wireless router and a setup window will pop-up. Follow the prompts to complete the WIFI network link.

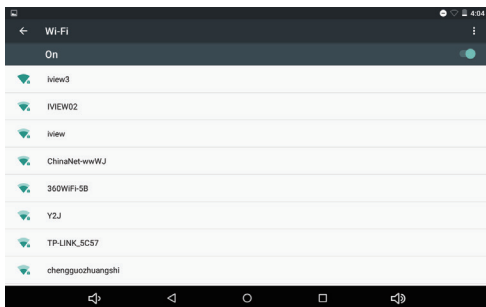


● Install, unload, run application

Android installation: There are a variety of ways to install applications, for example, you can click on the Apk file directly and it will automatically be installed. In cases that a third party program is identified as unsafe by the tablet, you will need to take the following steps to complete the installation.

 Enter "Settings">"Security", select "Unknown sources", then "OK".

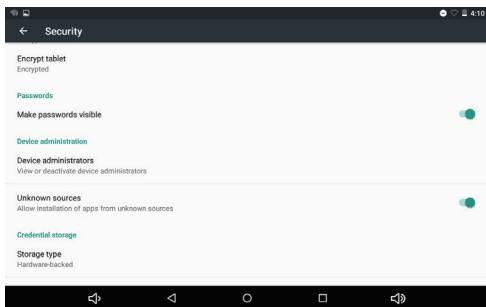


How to uninstall?

1. Enter  “setting” > “Application” > “Manage application” the installed the program list will appear.
2. Click on the icon for the application you would like to uninstall.
3. Click Uninstall, the application will be deleted.


● Backup & reset

 Click on the “Settings” icon in the main menu, click on the “Backup & reset”.

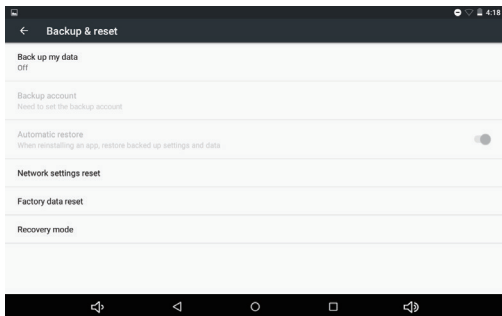

● Storage

 Remove TF card , view of the available storage space.

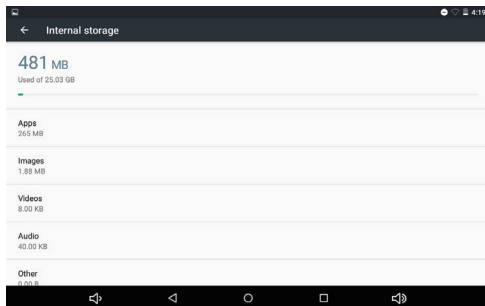

【Remark】 : Pls touch option "delete SD card", so that you can safely remove the SD card.

● Language & keyboard

Setting: (Language), text input and automatic error correction options;

Select Language: 54 kind of national languages are available.

Remark: Android Operating System supports 54 different languages, however only 14 languages are broadly supported in the tablet interfaces.

Android keyboard: Android keyboard setting

Sound on Key-press

 
Auto-capitalization

Show suggestions: Display suggested words while typing


Auto-complete: Spacebar and punctuation are automatically inserted.

● ES file explorer


In the main menu interface, you can manage your files and install APK software with “ ES File Explorer ”. Tap the “ ES File Explorer”, you can now choose from the directory on the SD Card, Internal Memory, or USB disk.

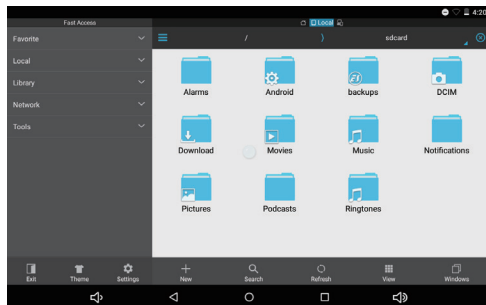

 If you want to install an application, open the directory of APK via ES File Explorer.

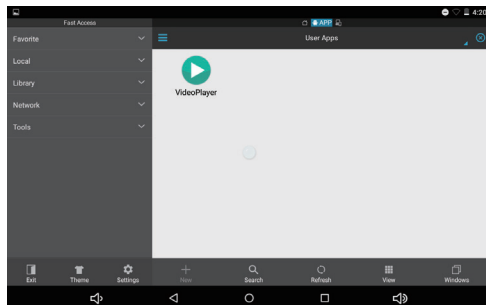

Install the searched application:

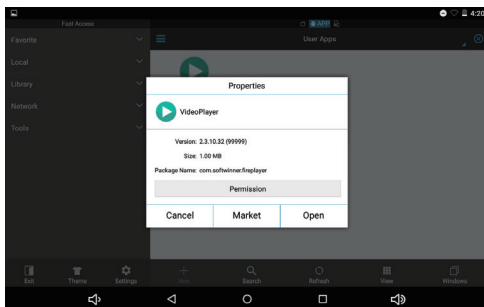 

User's can add applications through the “market” or download.

 
*Uninstalling application: You can use third party software management tools or use the built-in Android application management software.

Select “Settings” / “application” / “management application”, and select the corresponding installed applications to uninstall the program.

6. Network


Webpage browsing:

When connected to a network, open the browser and enter the URL, you can now browse.

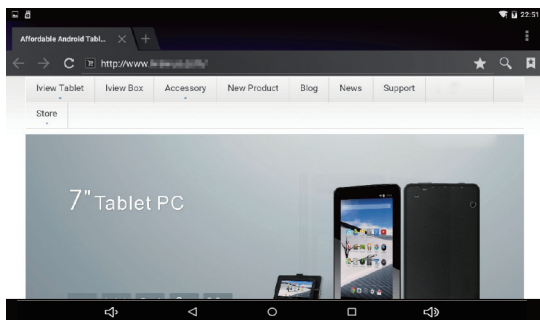

7. Music playback

 Click on the “Play Music” icon in the main menu, and then enter the music player interface. The default system list in the user data area for all audio files is shown below:

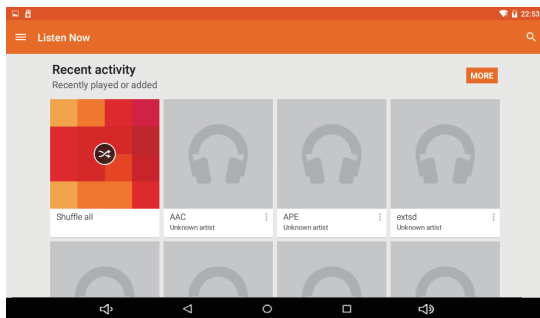


You can use synchronous USB to download audio files, or by inserting a Micro SD card with audio file. You can also use the wifi network to download the audio file.

Select the corresponding tag, and check the interface “artists”, “album”, and “song” and so on to play the song.

8. Video playback

 Click on the “Video Player” in the main menu, to enter the “Video Player” main interface. It will list all video files and image files as shown below:

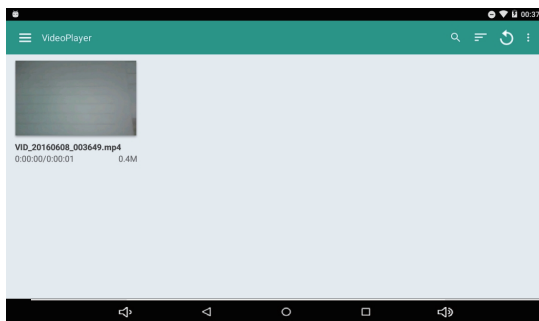

Select the video file and enter the video playing interface, as shown below.

Select “play”, “stop”, “fast forward”, “rewind”, “progress” and other control keys to control the playback schedule.

 
Online video:

Users can use the "market" or other ways to download online video player software, online TV player software, online music software, and then install on the tablet.

Users can also download other third party network application software, including webpage browser, video player, website client, instant messaging and other software applications.

9. Photo browse

Click on "Photo" in the main menu to enter the "Photo" interface. It will display all picture and video files as shown below:

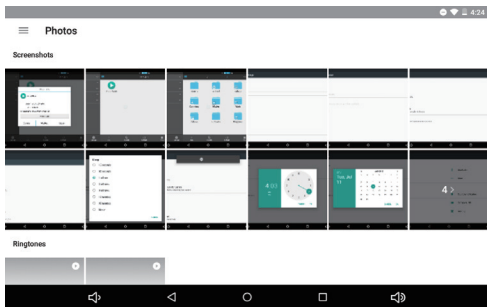


Select a picture file, enter the picture play interface. Select "zoom", "narrow" "set" and "delete" operation.


10. Wallpaper

The tablet supports static wallpaper, and 3D wallpaper.

 In the desktop interface, select the Menu key for pop-up menu options, select "wallpaper" and "choose the wallpaper source" selection box:

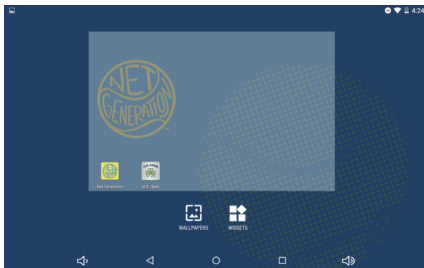

 Or press on the screen and dialog box for the following to pop:

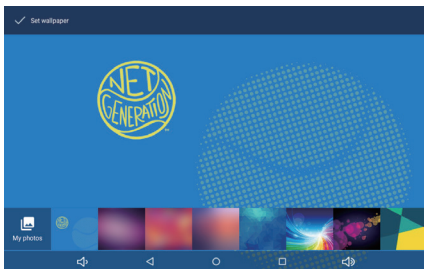

In the above dialog box, click on the "wallpaper" set;

The following options will display:

 
Select "wallpaper" to customize wallpaper.

Select the "dynamic wallpaper" to use the tablet-supplied 3D wallpaper.

Select the "Gallery" to choose a picture supplied by the tablet as the static wallpaper.

11. Record


Click on the "sound recorder" icon in the main menu and enter the "sound recorder" main interface as shown below:

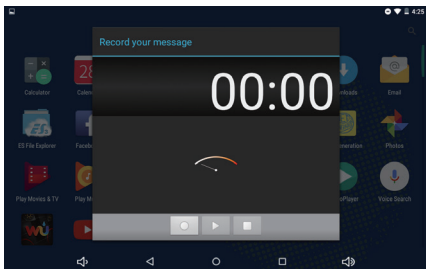


Select the "recording" button to record. When recording is completed press "stop" button. At this time you can select the "play" button to play back the recorded sound. Select "Use this recording" button to save the recording, so that you can find the corresponding audio files in "NAND"; If you do not want to save, Select the "give up" button to discard the recording.

12. Photograph

 Click on the "camera" icon in the main menu and enter the "camera" main interface as shown below:

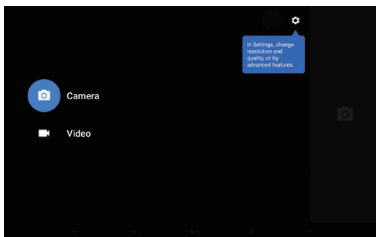


Click on shutter in the camera

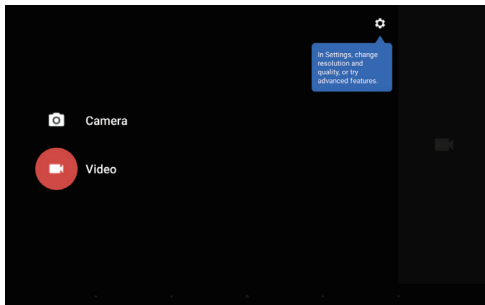 

13. E-mail

 Click on the "e-mail" icon in the main menu to enter email client. Allocation of account information will be required the first time. As shown below:

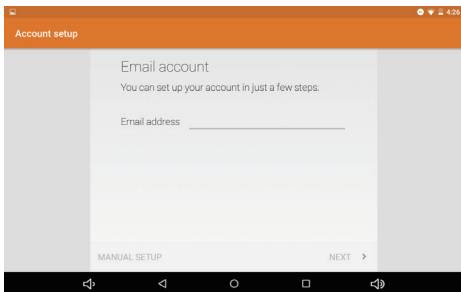


Email requires network support. Make sure that you have a network connection. Here we will use `whhpwjh@126.com` as an example:


In the email address bar, enter your valid email address: whhpwjh@126. com

In the email address bar, enter your valid password :*****

 Then press "next", account type selection interface will appear as shown below:

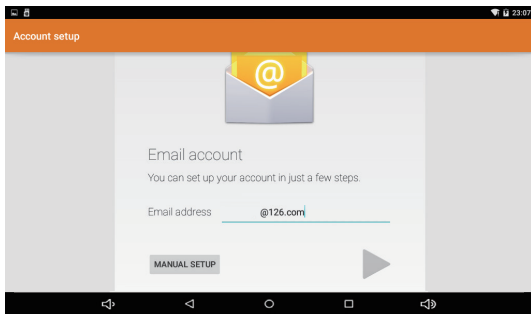

 Choose POP3 account. The receiving service settings will appear as shown below:

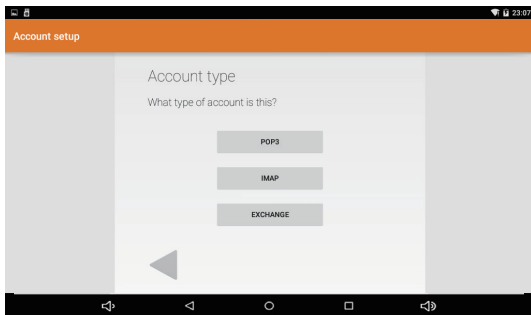


Please according to each email provider's information to set different parameter, such as:

The POP3 server: Default is "126.com", and should be modified as "pop.126.com"

The port number is "110"

 Then select "next", then you will enter the "incoming server settings", if set up correctly, there will be a "foreign server settings" interface as follows:

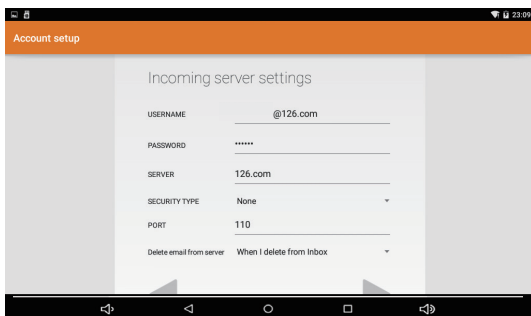

The screenshot shows an Android phone screen with the 'Account setup' app. The title bar is orange and says 'Account setup'. The main screen is titled 'Incoming server settings'. It has several input fields: 'USERNAME' with '@126.com', 'PASSWORD' with '*****', 'SERVER' with '126.com', 'SECURITY TYPE' with 'None', 'PORT' with '110', and 'Delete email from server' with 'When I delete from Inbox'. The bottom of the screen shows the Android navigation bar with icons for back, home, and recent apps.

In the column "name", input the name you want to display in the outgoing message, and then click the "finish" button. It will load the mail automatically; Select one of the column to be viewed in the message. You can do "Reply", "delete", "reply all" and other operations at the view bar.

14. External device

USB Connection

Using USB to connect the tablet and PC, the default connection mode is a synchronous mode.

You can drag the status bar to drop, appeared as the following interface:

Click  into the USB connection hints.

"USB connected": It means that the external memory (SD) loading has completed, and you can see the corresponding letter in the PC terminal.

OTG use

The Tablet supports FAT32 format mobile devices such as U disk and mobile hard disk.

Plug-and-play connection method:

Use the OTG wire to connect the Tablet PC USB OTG and the external equipment.

Keyboard and mouse

The Tablet supports plug and play USB mouse and keyboard device.

15. Features

- * Screen: 8" Capacitive Touch Screen, 800x1280 IPS High Resolution
- * Processor: Quad Core, Cortex A53, 1.2GHz
- * OS: Android 6.0 Nougat
- * RAM: 2GB
- * Memory: 32GB
- * Wireless Connection: WIFI 802.11 b/g/n
- * Build in Bluetooth 4.0
- * Support Dual Camera: Front 0.3MP, Rear 2.0MP
- * Support Skype Video Call
- * Support 1080P full HD video
- * I/O port: Micro USB
- * Card Slot: Micro SD Card (Max: 128GB)
- * Audio Output: Stereo Speaker (8Ω 1.0w)/3.5MM Stereo Headphone Jack
- * Play Store, Internet Browser, Calendar, Calculator, E-mail
- * Picture Viewing, Music / Video Playback, Games
- * Supports Multi Languages
- * Battery: Built in 4000 mAh / 3.7V Li-ion, rechargeable
- * Power Source: 5V=2A

16. Accessories

Below items are included in your tablet package:

- * Complete Device
- * Power Adapter
- * OTG Cable
- * USB Cable
- * Earphone
- * User Manual

Warranty Statement

Limited Warranty Covers:

Sand Dune Ventures, Inc D/B/A TabletKiosk (TK) warrants that the product accompanied by this limited warranty is free from manufacturing defects in material or workmanship for a period of 1 year from the **delivery date of shipment**. This warranty only applies to the original purchaser of the product, and only to products purchased and used in the United States of America. The limited warranty period also applies to any implied warranties that may exist under applicable law. If any person or entity other than TK repairs or replaces parts on the Products without the prior written consent of TK, this limited warranty shall be void with respect to the part or component of the products so repaired or replaced, and with respect to any other part or component related thereto.

Warranty Does Not Cover:

- Cosmetic damage
- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities
- Accidents, acts of God

Parts and Labor

Within the limited warranty period applied to the product, TK will repair defects in the product at no charge. Within the limited warranty period applied to the Product, TK will repair or replace the defective parts of the Product. After the limited warranty period applied to the Product, the customer can choose to have the Product repaired on a fee basis.

Warranty Statement

NOTE

With respect to all service provided, it is Customer's responsibility to backup the contents of your Product (if applicable), including any data you have stored or software you have installed on the Product. It is likely that the contents of your Product will be lost or reformatted in the course of service and TK will not be responsible for any damage to or loss of any programs, data or other information stored on any media or any part of any Product serviced. If during the repair of the product, the contents of the Product are altered, deleted, or in any way modified, TK is not responsible. The Product will be return as originally configured when purchased.

Shipping

TK will only cover the cost of **return shipping and handling** (within the Continental United States) within 1 year from the **delivery date of shipment**. The customer is responsible for shipping the product to TK. We strongly suggest you insure the package; TK is not responsible for damaged or lost product during shipping if customer did not insure or pack the Product properly.

Be sure to remove all third party features, parts, options, alterations, and attachments not warranted by TK prior to sending the Product to TK for service. TK is not liable for any loss or damage to these items.

Prior to return of product please secure a **Return Material Authorization (RMA)** Number from TK by contacting us at:

TabletKiosk

Customer Service Department

Attn: Warranty Services

2832 Columbia Street, Torrance, CA 90503

info@tabletkiosk.com

(310) 782-1201

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AAWC-NG001

***Please review your user
guide carefully before
using this product.***

Additional troubleshooting information
email us at Techsupport@Tabletkiosk.com