


# audio solutions<sup>TM</sup>

## Functions and Controls

1. Antenna
2. Microphone
3. Mode Button
4. Earphone Jack
5. Set Button
6. On/Off Button
7. LCD Display
8. Push-To-Talk Button
9. Watch Battery Compartment
10. Walkie Talkie Battery Compartment Cover
11. Watch Battery Compartment Cover

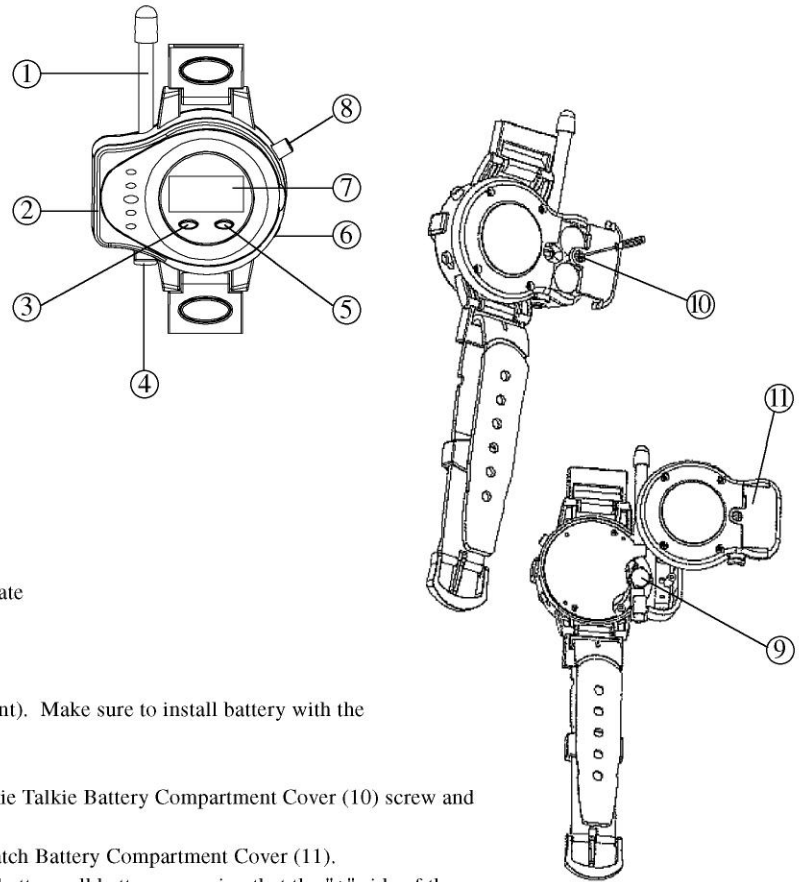

## Watch Features

- 12 or 24 hour format
- Calendar
- Display shows hours, minutes, seconds, month and date

## Watch Battery Replacement

The watch uses one AG3 button cell battery (or equivalent). Make sure to install battery with the correct polarity as indicated below.

1. Slide the On/Off Button (6) to the OFF position.
2. Using a small Phillips screwdriver, unscrew the Walkie Talkie Battery Compartment Cover (10) screw and remove the cover.
3. Remove the five remaining screws that secure the Watch Battery Compartment Cover (11).
4. Remove the old battery and replace with a new AG3 button cell battery, ensuring that the "+" side of the battery faces up.
5. Reattach Watch Battery Compartment Cover (11) and the Walkie Talkie Battery Compartment Cover (10).

## Walkie Talkie Battery Replacement

The walkie-talkie uses four AG13 button cell batteries (or equivalent). Make sure to install batteries with the correct polarity as indicated below.

1. Slide the On/Off Button (6) to the OFF position.
2. Using a small Phillips screwdriver, unscrew the Walkie Talkie Battery Compartment Cover (10) screw and remove the cover.
3. Remove the old batteries and replace with four new AG13 button cell batteries, ensuring that the "+" sides of all batteries face up.
4. Reattach the Walkie Talkie Battery Compartment Cover (10).

## To Set the Time and Date

1. Press the Set Button twice; the month digits will display. Press the Mode Button until the number of the correct month is displayed.
2. Press the Set Button again; the date digits will display. Press the Mode Button until the correct date is displayed.
3. Press the Set Button again; the hours digits will display, followed by either A (AM), P (PM), or H (24-Hour display). Press the Mode Button until the correct hours digits AND the desired display format (12 or 24 Hour format) are displayed. The hours digits will cycle through AM, PM, and 24-hour display in order.
4. Press the Set Button again; the minutes digits will display. Press the Mode Button until the correct minutes digits are displayed. Press the Set Button again, then press the Mode Button to exit and return to normal time display.

## To Use the Walkie Talkie

1. Plug the earphone into the Earphone Jack (4) and put the earphone onto your ear.
2. Slide the On/Off Button (6) to the ON position.
3. The Walkie Talkie has an internal microphone; to send a message, push the Push-To-Talk Button (8) and speak clearly into the unit while holding the unit about 2-3 inches from your mouth.
4. Release the Push-To-Talk Button (8) in order to receive messages.
5. Slide the On/Off Button to the OFF position to turn the Walkie Talkie off.

#### To Change Faceplates

Remove existing faceplate by lifting it up from the right hand side at the indentation in the watch face. Snap new faceplate into place by lining up the six pegs with the holes in the watch face and pressing down firmly.

#### Care and Maintenance

Clean product with a soft, dry cloth only. Do not use solvents or detergents. Keep product away from dripping or splashing water. Do not immerse in water or other liquids.

#### Battery Handling and Usage

**WARNING:** Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions.

- Follow all battery manufacturer's safety and usage instructions.
- Keep batteries away from children and pets.
- Do not mix a used battery with a new battery, or mix different chemistries or sizes of batteries.
- Insert the batteries observing the proper polarity (+/-) as indicated in the above instructions. Failure to align battery polarity properly can cause personal injury and/or property damage.
- Remove spent or discharged batteries from the product. Remove the batteries when not using the product for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- Dispose or recycle spent/discharged batteries in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

#### IMPORTANT INFORMATION REQUIRED BY THE FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesirable operation.

**Warning:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### LIMITED WARRANTY

This item is warranted to be free from defects in materials or workmanship for a period of one year from the original date of purchase under normal conditions of household use. Within the warranty period, we will repair/replace the product or refund your money, at our option, at the place of purchase upon presentation of sales receipt or other proof of purchase. This warranty extends only to the original retail purchaser, and excludes any damage to the product resulting from accident or misuse. The product is not warranted when used in a commercial or business environment.

The above warranty is complete and exclusive. The warrantor expressly disclaims liability for any special, incidental, indirect, or consequential damages in connection with the purchase or use of this product or costs over the original purchase price.

Any implied warranties arising by operation of law shall be limited in duration to the term of this warranty.

This warranty gives you specific legal rights; you may have other rights, which vary by jurisdiction. This warranty is valid only within the United States of America (USA).

Item# C17J0674

WIC# 598487

SVC Code: 1604

©2006 All Rights Reserved

#### Distributed By:

East West Distributing Co.  
Deerfield, IL 60015-4616

Made in China

For product information, questions, or customer service, call toll free 1-800-645-3867 or e-mail: [info@product-info.us](mailto:info@product-info.us)