 


Model: WM-717

Instruction Manual Rechargeable Wireless Mouse

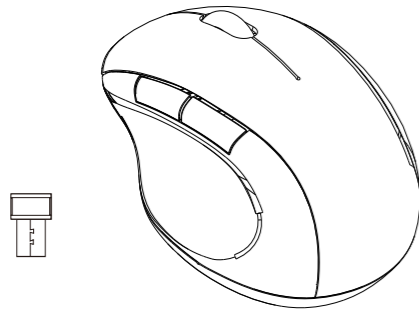

CAUTION: To use this device properly, please read the user's guide before installation

 
Features:

4D rechargeable Wireless Mouse with
Dimension: 102.6*76*49mm
Resolution: 800/1600DPI switching
300mAh built in Li-ion battery
High precision optical engine
Compatible with computers of various systems and brands

Quick Installation Guide:

1. Get the receiver
2. Connect the receiver to the USB port of your computer

1. Get the receiver
2. Connect receiver to your computer

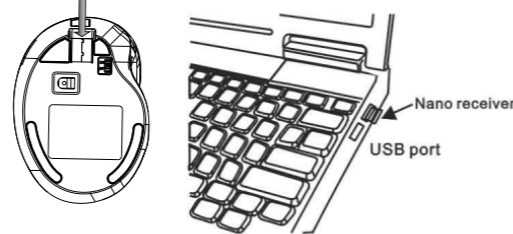


Recharge your mouse

1. Find the micro USB cable in the package
2. Connect the micro plug to mouse and USB plug to computer
3. Recharge the mouse around 2 hours



 Switch between standard and multi-media mode

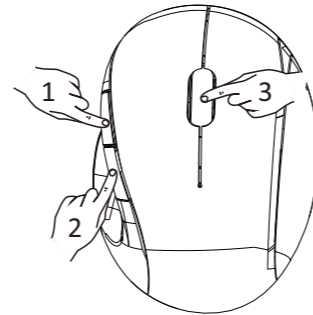

Keep press button 2 for 6 seconds to switch between standard and multi-media mode, Please see below instruction for function of each button in each mode.

Button/Mode	Standard mode	Multi-media mode
Button 1	Windows button	Next song
Button 2	DPI button	Pause/Play music
Button 3	switch to left/right in excel	Volume up/down

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.