

User manual

Project Name: M18Q2

Author: Wistron NeWeb Corporation

Revision: 1.4

Revision Date: 2016/05/20



Contact Information

Sale and Technical Support	SupportIoT.MBA@wnc.com.tw
Website	www.wnc.com.tw

Revision History

Rev. #	Author	Summary of Changes	Date
1.0	WNC MBU	Draft release	2016/4/15
1.1	WNC MBU	Fine-tune wording	2016/5/12
1.2	WNC MBU	Update RF Exposure Information	2016/5/17
1.3	WNC MBU	Update antenna and PCB layout guidance	2016/5/17
1.4	WNC MBU	Update layout guidance	2016/5/20





© Wistron NeWeb Corporation

THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN IS PROPRIETARY AND IS THE EXCLUSIVE PROPERTY OF WNC AND SHALL NOT BE DISTRIBUTED, REPRODUCED, OR DISCLOSED IN WHOLE OR IN PART WITHOUT PRIOR WRITTEN PERMISSION FROM WNC.

LIMITATION OF LIABILITY

THIS DOCUMENT AND THE INFORMATION CONTAINED HEREIN IS PURELY FOR DESIGN REFERENCE AND SUBJECT TO REVISION BY WNC AT ANY TIME. NOTHING IN THIS DOCUMENT SHALL BE CONSTRUED AS GRANTING ANY WARRANTY OR RIGHT TO USE THE MATERIAL CONTAINED HEREIN WITHOUT WNC'S PRIOR EXPRESS WRITTEN CONSENT. WNC SHALL NOT BE LIABLE FOR ANY USE, APPLICATION OR DEVELOPMENT DERIVED FROM THE MATERIAL WITHOUT SUCH PRIOR EXPRESS WRITTEN CONSENT.

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



RF Exposure Information

This device is intended only for OEM integrators under the following conditions:

- (1) The antenna must be installed such that 20 cm is maintained between the antenna and users,
- (2) The transmitter module may not be co-located with any other transmitter or antenna.
- (3) To comply with FCC regulations limiting both maximum RF output power and human exposure to RF radiation, the

maximum antenna gain including cable loss in a mobile exposure condition must not exceed:

Standalone Condition:

- 8.0 dBi in 700 MHz Band
- ° 8.0 dBi in 850 MHz Band
- 5.0 dBi in 1700 MHz Band
- ° 7.5 dBi in 1900 MHz Band

Assuming collocated with a WLAN transmitter with maximum 27 dBm average EIRP power

- ° 7.0 dBi in 700 MHz Band
- $^\circ\,$ 5.0 dBi in 850 MHz Band
- $^\circ$ 5.0 dBi in 1700 MHz Band
- $^\circ$ 7.5 dBi in 1900 MHz Band

Remark: This assumption is not valid if the output power of the collocated WLAN transmitter is higher than 27 dBm.

IMPORTANT NOTE:

This module is intended for OEM integrator. The OEM integrator is still responsible for the FCC compliance requirement of the end product, which integrates this module. 20cm minimum distance has to be able to be maintained between the antenna and the users for the host this module is integrated into. Under such configuration, the FCC radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

USERS MANUAL OF THE END PRODUCT:

In the users manual of the end product, the end user has to be informed to keep at least 20cm separation with the antenna while this end product is installed and operated. The end user has to be informed that the FCC radio-frequency exposure guidelines for an uncontrolled environment can be satisfied. The end user has to also be informed that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. If the size of the end product is smaller than 8x10cm, then additional FCC part 15.19 statement is required



to be available in the users manual: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.





Contents

Cont	act In	formatio	n	2
Con				
1.				
	1.1.	Featur	es	3
2.		•	ecifications	
		2.1.1.	LGA Pad Diagram)
		2.1.2.	Pin Assignments10)
	2.2.	Power	supply12	2
	2.3.	USB ir	iterface14	1
	2.4.	SGMII	interface15	5
	2.5.	HSIC i	nterface16	5
	2.6.	SIM in	terface17	7
	2.7.	Contro	l interface (wakeup)17	7
	2.8.	Digital	interface18	3
		2.8.1.	JTAG Interface18	3
		2.8.2.	SPI Master Interface18	3
		2.8.3.	PCM Interface	Э
		2.8.4.	I2S Interface	Э
		2.8.5.	I2C Interface)
		2.8.6.	UART Interface)
		2.8.7.	ADC Interface	1
3.	RF S	Specifica	ations 22	2
		-	nnections22	





	3.2.	RF Layout guidance	22
	3.3.	Antenna Guidance	24
	3.4.	Interference and sensitivity	24
	3.5.	Radiated sensitivity measurement	25
	3.6.	GNSS external circuit design	25
	3.7.	Supported frequencies	25
4.	Softv	vare Interface	27
		Support tools	
	4.2.	USB interface	27
5.	Mech	nanical and Environmental Certifications	. 28
		PCBA Form Factor	
	5.2.	Labeling	31
6.	Regu	Ilatory Compliance and Certification	. 32
	6.1.	Certification testing	32
7.	Safet	y Recommendation	33

1. Introduction

The M18Q2 is a Cat. 4 LTE modem which incorporates an application CPU subsystem and a host of peripheral interfaces and functions uniquely designed to address the power/performance/cost requirements of IoT and M2M applications. The chip is based on Qualcomm's MDM architecture which offers OFDMA-related software based signal processing capabilities that significantly exceed traditional communications ARM cores.

The CPU subsystem features a high performance Cortex A7 microprocessor running a Linux OS with a variety of host interfaces including USB 2.0, SGMII, SPI, UART, PCM, I2C, HSIC, USIM & SDC. The module supports integrated VoLTE functionality, with a variety of narrow- and wide-band CODECs and full IMS signaling.

1.1. Features

- 3GPP category support: LTE Cat. 4 with 150/50 Mbps for DL/UL
- Supports LTE B2/4/5/12
- Supports WCDMA B2/5
- Ultra-high-performance Cortex A7 microprocessor
- Modem subsystem (MSS)
- Integrated support for VoLTE
- Resource and power management (RPM) subsystem
- Optimized for M2M and IoT markets
- Interfaces
 - HS USB 2.0 with integrated PHY
 - SGMII interface
 - HSIC interface
 - Dual UART interfaces (4 bit and 2 bit) for data transfer and diagnostic tools
 - SDC1: First SPI interface
 - I2C: Second SPI interface
 - USIM interface
 - GPIOs
 - -ADC
 - PCM/I2S
 - JTAG interface

2. Electrical Specifications

2.1. Host interface pin assignments

2.1.1. LGA Pad Diagram

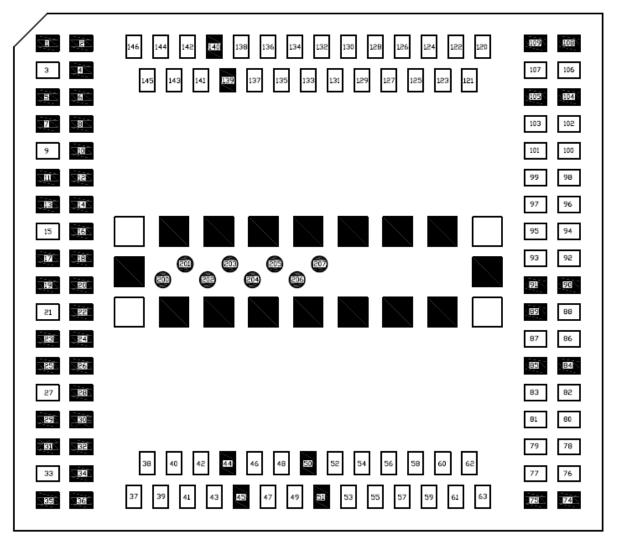


Figure 1. LGA pad diagram (top view)



2.1.2. Pin Assignments

Table 1.	Pin	interface	family
TUDIC 1.		muchace	running

Interface Fa	amily	Signal	Description	I/O
		ANT1_DRX	Diversity antenna	I
RF Interface	es	ANT_GNSS	Reserved for GNSS receiver	I
		ANT0_TRX	Main Antenna	I/O
		VREG_L6_UIM1	Power source for UIM	0
		UIM1_DATA	Data in/out	I/O
User Identi	ty Module	UIM1_CLK	Clock signal	0
		UIM1_RESET	Reset signal	0
		UIM1_DETECT	UIM Detect signal	I/O
		USB_HS_DP	USB Data Positive	I/O
	USB 2.0	USB Detect	USB Detect	I
		USB_HS_DM	USB Data Negative	I/O
		HSIC USB_STROBE	HSIC USB Strobe	I/O
	HSIC	HSIC USB_DATA	HSIC USB Data	I/O
	SGMII	SGMII_RX_P	SGMII receive - plus	I
		SGMII_RX_M	SGMII receive - minus	I
		SGMII_TX_P	SGMII transmit - plus	0
		SGMII_TX_M	SGMII transmit - minus	0
		SGMII_MDIO	SGMII Management data	I/O
		SGMII_MDC	SGMII Management data clock	I/O
Data	UART1	UART1_CTS_N	Clear To Send for UART 1	1
Interfaces		UART1_RFR_N	UART ready for frame	0
		UART1_RX	Receive for UART 1	I
		UART1_TX	Transmit for UART 1	0
		MDM_DBG_UART_RX	Receive for UART 2	I
	UART2	MDM_DBG_UART_TX	Transmit for UART 2	0
		I2C_SDA	Data in/out	I/O
		2nd_SPI_EN_1	2nd_SPI chip select	0
		I2C_SCL	Clock signal	0
	I2C/2nd_SPI	2nd_SPI_CLK	2nd_SPI serial clock	0
		NC	NC	
		SPI_MOSI	2nd_SPI master out slave in	0
		NC	NC	



		SPI_MISO	2nd_SPI master in slave out	I
		SDC1_DATA_3	SDC1_DATA_3	I/O
		1st_SPIM_MOSI	1st_SPI master out slave in	0
		SDC1_DATA_2	SDC1_DATA_2	I/O
		1st_SPIM_MISO	1st_SPI master in slave out	I
		SDC1_DATA_1	SDC1_DATA_1	I/O
	SDC1/1st_SPI	1st_SPIM_EN_1	1st_SPI chip select	0
		SDC1_DATA_0	SDC1_DATA_0	I/O
		1st_SPIM_CLK	1st_SPI serial clock	0
		SDC1_CMD	SDC1_CMD	I/O
		SDC1_CLK	SDC1_CLK	0
		WWAN_STATE	Wireless WAN Radio State	0
Module Cor	stroland	POWER_ON	Power On the module	I
State Interfa		WAKEUP_OUT	Module wakes up host OR GPIO	0
State Interne	aces	WAKEUP_IN	Host wakes up module OR GPIO.	I
		RESET	Reset the module	Ι
		VREF	Voltage Reference Output	0
Power and (Ground	VCC	Main Power	I
		GND	GND	I
General Pur	20050	GPIO	Digital I/O	I/O
General Pul	pose	ADC_CONVENTOR	ADC_CONVENTOR	I
		PCM_DIN	PCM_DIN	10
		AUX_BT_I2S_DATA0	AUX_BT_I2S_DATA0	10
		PCM_DOUT	PCM_DOUT	10
AUDIO	PCM/I2S	AUX_BT_I2S_DATA1	AUX_BT_I2S_DATA1	10
AUDIO	F CIVI/125	PCM_CLK	PCM_CLK	0
		AUX_BT_I2S_SCK	AUX_BT_I2S_SCK	0
		PCM_SYNC	PCM_SYNC	0
		AUX_BT_I2S_WS	AUX_BT_I2S_WS	0
RFU	RFU	RFU	Reserved For Future Use	I
		MDM_JTAG_SRST_N	JTAG reset for debug	I
		MDM_JTAG_TCK	JTAG clock input	I
Dobug	JTAG	MDM_JTAG_TDI	JTAG data input	Ι
Debug	JIAG	MDM_JTAG_TDO	JTAG data output	0
		MDM_JTAG_TMS	JTAG mode select input	Ι
		MDM_JTAG_TRST_N	JTAG reset	0



	MDM_PS_HOLD	PS_HOLD	
Force_USB_BOOT	Force_USB_BOOT_CONFIG	Force USB BOOT CONFIG	

	Parameter	Comments	Min	Max	Unit
VIH	High-level input voltage	CMOS/Schmitt	0.65 * V _{DD_Px}	-	V
VIL	Low-level input voltage	CMOS/Schmitt	-	0.35 * V _{DD_Px}	V
VOH	High-level output voltage	CMOS, at rated drive strength 1	V _{DD_Px} - 0.45		۷
VOL	Low-level output voltage	CMOS, at rated drive strength 1	-	0.45	٧
RP	Pull resistance 2	Pullup and pulldown	55	<u>390</u>	kΩ
R _K	Keeper resistance ²		30	150	kΩ
IIH	Input high leakage current ³	No pulldown	-	1	μA
I _{IL}	Input low leakage current 4	No pullup	-1	<u> </u>	μA
V _{SHYS}	Schmitt hysteresis voltage		100	-	mV
CI/O	I/O capacitance		<u></u>	5	pF

Table 2. Digital I/O characteristics

Note: This is preliminary data for reference and will be updated according to the final version of the MDM9207 datasheet.

2.2. Power supply


LTE module power input is VCC. The internal power chipset will transfer VCC to other power level.


Power	Din Namo	Dada	Description	Voltage Level (V)			
	Pin Name Pads	Paus	Description	Min.	Тур.	Max.	
VCC	VCC1 to VCC6	Nos. 37 to 42	Main Power Supply	3.3	3.8	4.2	

Table 3. Power supply specifications

 The M18Q2 includes an integrated power manager enabling single and direct voltage supply from the battery, reducing the overall bill of materials.



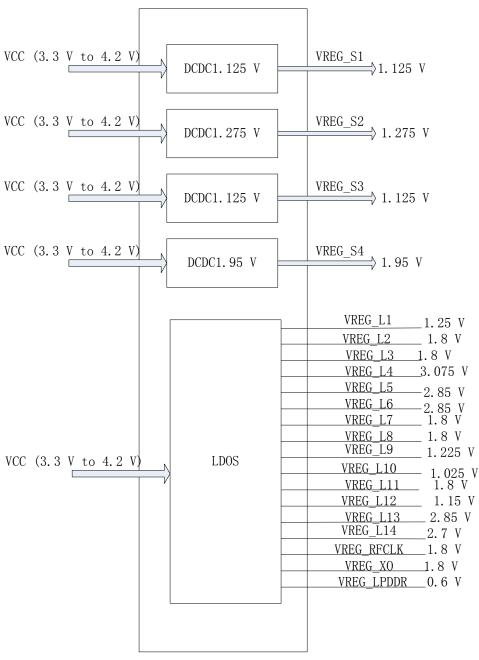



Layout Suggestion: Each power trace should possess sufficient line width to withstand its respective current listed in the table below:

Net Name	Current Value
VCC(1–6) total	2A
UIM_VCC	150 mA
VREF	300 mA

2.3. USB interface

WNC

The M18Q2 module complies with USB 2.0 high-speed protocol. The USB input/output lines follow USB 2.0 specifications.

Noree	Description	Input/Output	Vo	ltage Level	(∨)
Name	Description	(Direction to module)	Min.	Тур.	Max.
		Input High	2	3.3	3.6
	USB data positive	Input Low	0		0.8
	(low-/full-speed)	Output High	2.8	3.3	3.6
D+		Output Low			0.3
D+		Input High	0.3		0.44
	USB data positive	Input Low	0		0.01
	(high-speed)	Output High	0.36	0.38	0.44
		Output Low	0		0.01
		Input High	2	3.3	3.6
	USB data negative	Input Low	0		0.8
	(low-/full-speed)	Output High	2.8	3.3	3.6
		Output Low			0.3
D-		Input High	0.3		0.44
	USB data negative	Input Low	0		0.01
	(high-speed)	Output High	0.36	0.38	0.44
		Output Low	0		0.01

Table 4.	Signals of the USB interface
----------	------------------------------

The layout design of this circuit on the host board should comply with the USB 2.0 high-speed protocol.

Layout suggestion:

- Differential impedance: 90 Ω
- Space to other signals should be at least 20 mils
- Intra-lane length difference should be less than 150 mils
- Maximum length for each trace:150 mm

Signals lengths on M18C	2 are tuned as below:
-------------------------	-----------------------

Function	Net	Length (mil)
USB	USB_Dp	545.54
	USB_Dn	503.04

2.4. SGMII interface

The M18Q2 includes integrated Ethernet MAC with SGMII interfaces with the following key features:

- IEEE 802.3 compliance
- Full duplex at 1 Gbps
- Half/full duplex for 10/100 Mbps
- Supports VLAN tagging
- Supports IEEE 1588, Precision Time Protocol (PTP)
- Can be used to connect to external Ethernet PHYs such as AR8033 or to an external switch

The following figures describe an example of the additional logic connection between the M18Q2 and the Ethernet chip.

M14Q2/M18Q2	AR8033
SGMII_TX_P SGMII_TX_M SGMII_RX_P SGMII_RX_M	0.1 μF I μF I μF I μF SIP SIN SOP SON
EPHY INT N EPHY_RST_N SGMII MDIO SGMII_MDC	INT RSTn MDIO MDC

Figure 3. SGMII circuit example

Layout suggestion:

- Differential impedance:100 Ω
- Space to other signals: > 3x line width
- Lane-to-lane space: > 3x line width
- Intra-lane mismatch: < 0.7 mm</p>



Function	Net	Length (mil)	
SGMII	SGMII_TX_P	617.11	
	SGMII_TX_M	642.13	
	SGMII_RX_P_C+SGMII_RX_P	661.40	
	SGMII_RX_M_C+SGMII_RX_M	675.06	

Signals lengths on the M18Q2 are tuned as below:

2.5. HSIC interface

The M18Q2 includes a HSIC interface. This host interface can be connected to other application processor or interface-transfer chipset.

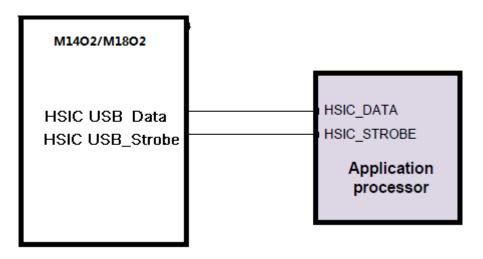


Figure 4. HSIC circuit example

Layout suggestion:

- Single-end impedance: 50 Ω
- Intra-lane mismatch: < 2 mm
- Maximum trace length:100 mm

Signals lengths on the M18Q2 are tuned as below:

Function	Net	Length (mil)
HSIC	HSIC_STB	287.29
	HSIC_DATA	315.04

2.6. SIM interface

The M18Q2 includes a SIM controller, interface pins, and a dedicated LDO (3.0 V or 1.8 V). The following figures describe the additional logic connection between the M18Q2 and the SIM card.

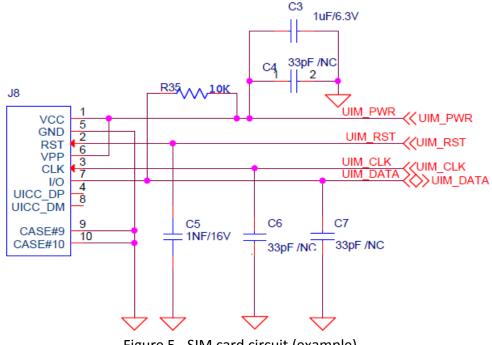


Figure 5. SIM card circuit (example)

2.7. Control interface (wakeup)

In applications where power consumption is a major factor in performance metrics (such as battery-operated sensors that are based on IOT/M2M modem solution and also include a third party host), it is necessary to define a simple interface that will allow both the modem and the host to be able to enter low power states whenever possible and the other side to wake it up once required.

For example, if the host has no data to transmit nor any other tasks, it may enter some low power state according to its own capabilities and configurations. If during that period the host is in a low power state and the modem suddenly receives data, it must wake-up the host.

A similar requirement exists from the other side. For example, if the modem is in a low power state and suddenly the host must transmit data, it must be able to wake-up the modem.

The interface consists of two signals: One is driven by the host and received by the modem; the other is driven by the modem and received by the host.

Each side can wake the other side by toggling wakeup signal high and allowing the other side to go to



sleep when not needed by toggling it low.

■ "WAKEUP_IN" (Host: Output, Modem: Input):

LOW: SoC does not require the MODEM (allowing it to sleep). HIGH: SoC requires the MODEM or acknowledges it is ready following a wakeup request from the MODEM.

"WAKEUP_OUT" (Host: Input, Modem: Output):
LOW: The MODEM does not require the Host (allowing it to sleep)
HIGH: The MODEM requires the Host or acknowledges it is ready following a wakeup request from the SoC.

2.8. Digital interface

This section provides the required AC timing information relating to Module Digital Interfaces.

2.8.1. JTAG Interface

There is one JTAG interface for LGA module debugging.

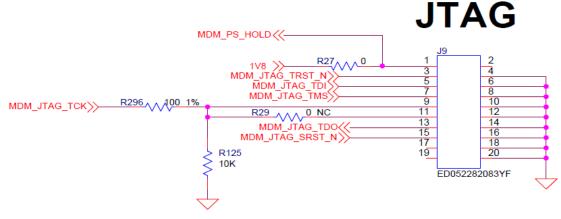


Figure 6. JTAG schematic (example)

2.8.2. SPI Master Interface

- SPIM_CLK Output clock
- SPIM_CS Output, chip-select
- SPIM_MOSI Output, data to slave
- SPIM_MISO Input, data from slave

Timing

Note: This part will be updated according to the final MDM9207 datasheet.

2.8.3. PCM Interface

The LGA module provides one PCM digital audio interface. The PCM data bus voltage level is 1.8 V.

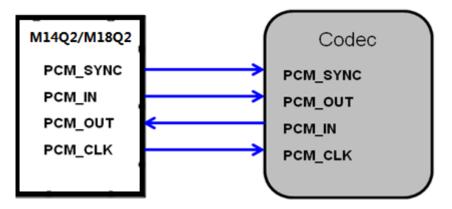


Figure 7. PCM connection (example)

2.8.4. I2S Interface

PCM and I2S share the same pins on the M18Q2; the PCM signal pins can be configured as an I2S interface.

Config1	Config2
PCM_SYNC	I2S_WS
PCM_DIN	I2S_DATA0
PCM_DOUT	I2S_DATA1
PCM_CLK	I2S_SCK


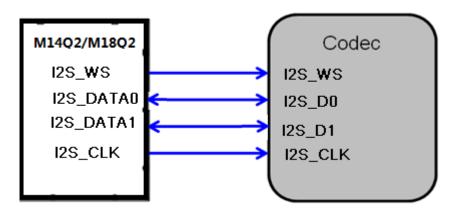


Figure 8. I2S connection (example)



2.8.5. I2C Interface

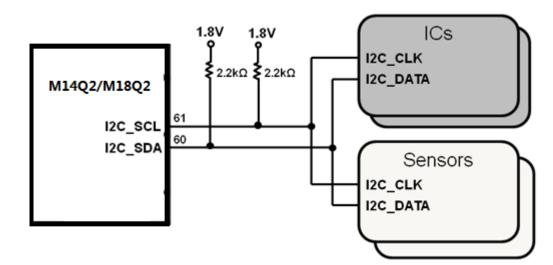


Adding pull-high resistors to 1.8 V through the 2.2 k Ω resistors is recommended.

Figure 9. I2C connection (example)

2.8.6. UART Interface

There are two UART interfaces: One is a 4 bit UART for high-speed data transfer, and the other is a 2 bit UART for diagnostic tools and debugging.

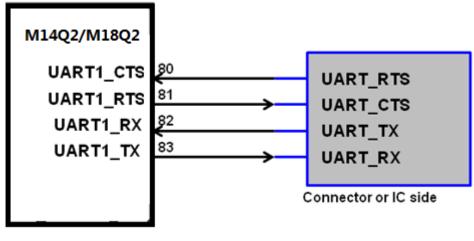



UART connection (example)



2.8.7. ADC Interface

An Analog to Digital Converter (ADC) input is provided by the M18Q2. The converter is a 16 bit resolution, ranging from 0.1 V to 1.7 V, with a sampling rate of 2.4 MHz.

Parameter	Comments	Minimum	Тур	Maximum	Units
Supply voltage	Connected internally to VREG_L3	-	1.8	-	V
Resolution	Decimated data	-	-	15	bits
Analog-input bandwidth		-	100	-	kHz
Sample rate	XO/8	-	2.4	-	MHz
Offset error	Relative to full-scale	-1	-	+1	%
Gain error	Relative to full-scale	-1	-	+1	%
INL	15-bit output	-8	-	+8	LSB
DNL	15-bit output	-4	-	+4	LSB

Layout suggestion:

- Should be protected by GND
- Should be protected from noise and other easily radiated signals

3. RF Specifications


3.1. RF connections

The M18Q2 has three RF pads; developers may connect them via 50 Ω traces to the main board.

ANTO_TRX pad (Pin15) – Primary RX/TX path ANT1_DRX pad (Pin21) – Diversity path ANT_GNSS pad (Pin9) – GNSS path (optional)

3.2. RF Layout guidance

It is recommended that grounds not be present under the surface of the RF pads in the layout. Details are included below.

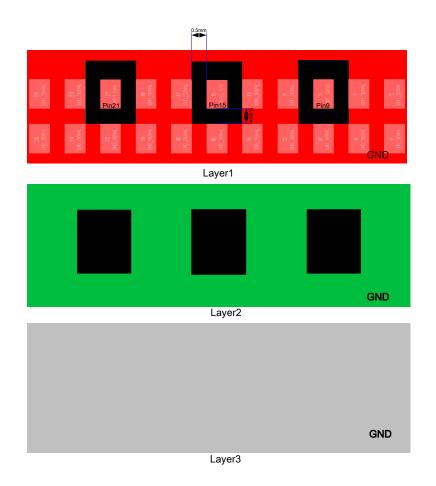

The RF trace between RF pads and antenna should as shorter as possible with 50ohm characteristic impedance.





The characteristic impedance depends on the dielectric of PCB, the track width and the

ground plane spacing. Microstrip type is required. The detail simulation as below.

AppCAD - [Microstrip]	
File Calculate Select Parameters Options Help	Main Menu (F8
Microstrip	
·	\mathbb{R}^{2}
₩ → 20 ←	Calculate Z0 (F4)
н	
	Z0 = 50.42 Ω
T 1.5	
	Elect Length = 0.155 λ
Dielectric: ɛr = 4.6	Elect Length = 55.6 degrees 💌
FR-4	1.0 Wavelength = 6472.258 mil
	Vp = 0.548 fraction of c
Frequency: 1 GHz 💌	8 eff = 3.326
Length Units: mils	W/H = 1.708
Normal Click for Web: APPLICATION NOTES - MODELS - D	ESIGN TIPS - DATA SHEETS - S-PARAMETERS

The RF trace of the test board which was used in the FCC test is defined as below.

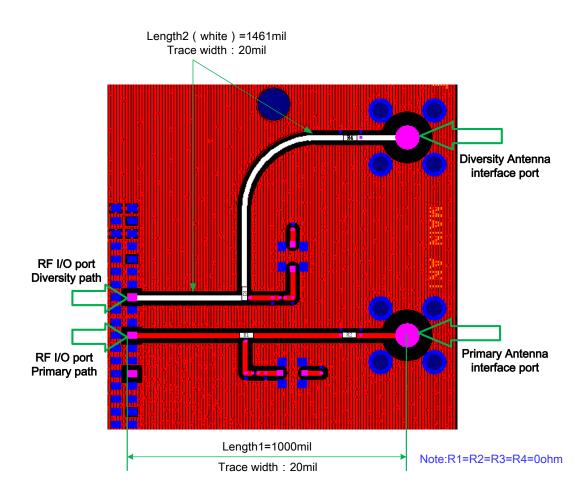

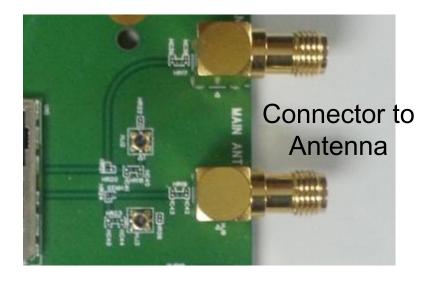

3.3. Antenna Guidance

The antenna should be 500hm characteristic impedance with the return loss of better than -10dB

at the operation band. The antenna gain would affect the radiated power and regulator test result.

3.4. Interference and sensitivity

This section includes tips to assist developers in identifying the interference that may affect the M18Q2 when is it used in systems.

- Interference from other wireless devices
 - Harmonics, inter-modulated signal generated from wireless devices that fall in RX ranges of the M18Q2, may result in degraded RX performance.
 - It is highly recommended to check RX performance of entire systems within the shielding environment.
- Interference from host interface
 - High-speed signal-switching elements in systems can easily couple noise into the module (Ex.: DDR memory, LCD modules, DC-DC converter).
- Methods to avoid sources of interference



- Antenna location is important; we recommend directing the antenna away from high-speed switching signals. Furthermore, the trace from the module to the antenna should be as short as possible and must be shielded by complete grounding.
- The M18Q2 is well shielded; the high-speed elements on a system should have shielding reserved during the early stages of development.

3.5. Radiated sensitivity measurement

Over-the-air testing can demonstrate the TRX ability of the whole system. Keys elements that affect the measurement are:

Module ability (refer Specification) Antenna Gain System noise source

The OTA performance should be performed in an OTA chamber.

3.6. GNSS external circuit design

One GNSS SAW filter, LNA, and another GNSS SAW filter need to be used between the module and antenna.

3.7. Supported frequencies

Band	Uplink (MHz)	Downlink (MHz)
LTE Band 2	1,850–1,910	1,930–1,990
LTE Band 4	1,710–1,755	2,110–2,155
LTE Band 5	824–849	869–894
LTE Band 12	699–716	729–746
Band	Uplink (MHz)	Downlink (MHz)
WCDMA Band 2	1,850–1910	1,930–1,990
WCDMA Band 5	824–849	869–894



Band	Bandwidth					
	1.4 MHz	3 MHz	5 MHz	10 MHz	15 MHz	20 MHz
LTE Band 2	✓	\checkmark	\checkmark	✓	✓	✓
LTE Band 4	✓	\checkmark	\checkmark	✓	✓	✓
LTE Band 5	✓	✓	✓	✓		
LTE Band 12	\checkmark	\checkmark	\checkmark	✓		

Table 6.	Bandwidth	support
Table 6.	Bandwidth	suppor

Table 7. Conductive Rx sensitivity

Band	Items	Parameter	Unit	Min.	Тур.	Max.
LTE Band 2	Receive Sensitivity	10 MHz with 50 RBs	dBm			-94.3
LTE Band 4	Receive Sensitivity	10 MHz with 50 RBs	dBm			-96.3
LTE Band 5	Receive Sensitivity	10 MHz with 50 RBs	dBm			-94.3
LTE Band 12	Receive Sensitivity	10 MHz with 50 RBs	dBm			-93.3
Band	Items	Parameter	Unit	Min.	Тур.	Max.
WCDMA Band 2	Receive Sensitivity	-	dBm		-110	-104.7
WCDMA Band 5	Receive Sensitivity	-	dBm		-110	-104.7

4. Software Interface

4.1. Support tools

The M18Q2 is compatible with the following support tools:

■ WNC M18Q2 Connection Manager (WM18QCM)

4.2. USB interface


The M18Q2 supports 3GPP standard AT commands and proprietary AT commands; the MAL Manager SDK is also supported for Linux platforms.




5. Mechanical and Environmental Certifications


5.1. PCBA Form Factor

Dimensions 26.3 mm (typ.) × 23.1 mm (typ.) × 2.3 mm (typ.), tolerance: ± 0.15 mm

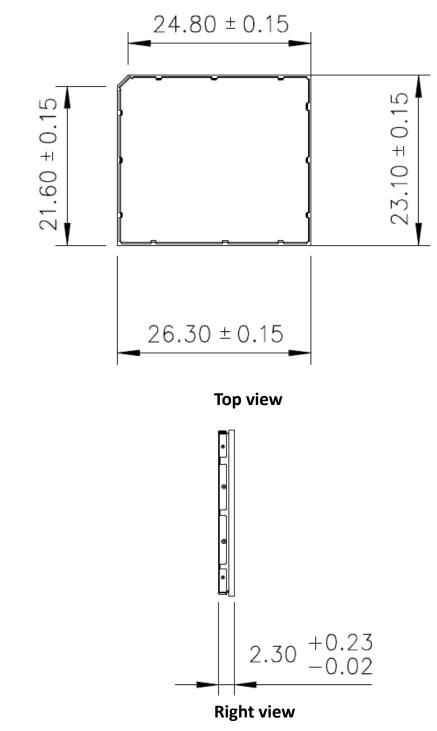



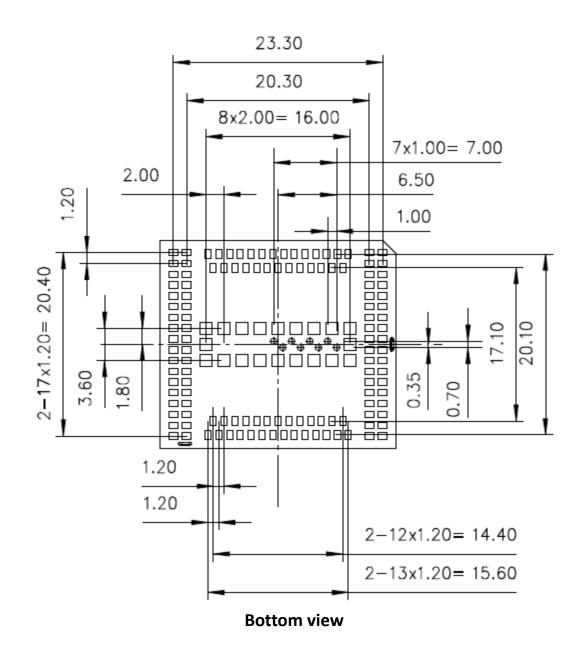

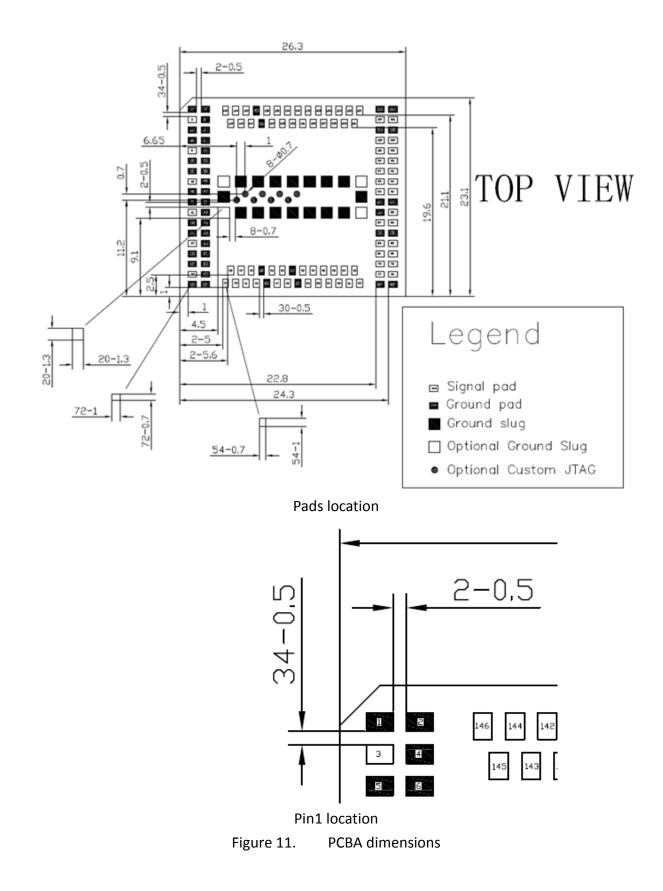



5.2. Labeling

When the module is installed in the host device, the FCC ID label must be visible through a window on the final device or it must be visible when an access panel, door or cover is easily re-moved. If not, a second label must be placed on the outside of the final device that contains the following text: "Contains FCC ID: NKRM18Q2"

The grantee's FCC ID can be used only when all FCC compliance requirements are met



6. Regulatory Compliance and Certification

6.1. Certification testing

PTCRB, FCC and AT&T TA



7. Safety Recommendation

Be sure the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and must be avoided in the following areas:

- Where it can interfere with other electronic devices in environments such as hospitals, airports, and aircraft
- Where there is a risk of explosion such as gasoline stations and oil refineries

It is the responsibility of the user to comply with his or her country's regulations and the specific environmental regulations.

Do not disassemble the product; any mark of tampering will compromise the warranty's validity.

We recommend following the instructions of the hardware user guides for a correct wiring of the product. The product must be supplied with a stabilized voltage source, and the wiring must conform to the security and fire-prevention regulations.

This product must be handled with care; avoid any contact with the pins because electrostatic discharge may damage the product. Same caution must be taken regarding the SIM card; carefully check the instructions for its use. Do not insert or remove the SIM when the product is in power-saving mode.

The system integrator is responsible of the functioning of the final product; therefore, care must be taken for the external components of the module as well as for project or installation issues—there may be a risk of disturbing the GSM network or external devices or of having an impact on device security. If you have any doubts, please refer to the technical documentation and the relevant regulations in force.

Every module must be equipped with a proper antenna with specific characteristics. The antenna must be installed with care in order to avoid any interference with other electronic devices.