

PHASER

Remote Control Extender

Use your existing Infrared Remote
in any room in your home



Model AA2000 Installation Manuel

PHASER Allows you to control your existing
Infrared Remote Control from any room in your home.

PHASER Uses Patent Pending Technology
to send Powerful Radio waves through out your home.

PHASER Is Digitally couple inside your Infrared remotes
battery compartment.

PHASER Can be used inside or outside your home.

PHASER Works with virtually all your Infrared Remote
equipment, C-band & DSS Satellite, Stereo, Tivo, VCR,
DVD, Web TV keyboard, Web TV, etc.

1.
Remove one of the existing batteries from your remote.

2.
Install the Transmitter in the empty slot. Install the 6 volt battery into the Transmitter. Observing proper Polarity.



PHASER Transmitter

3.
Locate PHASER Receiver in the room where the equipment is located. Plug the PHASER receiver into a standard AC 120 volt wall outlet.
Aim the front of the PHASER Receiver toward the front of your equipment.



PHASER Receiver

4.

Manufactures Warranty

Manufacture warrants this product to be free from defects in material and workmanship for a period of 90 days to the original consumer purchaser. Product will be replaced or repaired free of charge if it has been proven to be defective within the 90 day period when said product is returned at customer expense within the warranty period. **THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.**

5.

FCC STATEMENT

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference that may be received including interference that may cause undesired operation.

WARNING: The transmitter has been tested and complies with the FCC rules. Changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the device.