


What's inside

1. Bluetooth Portable Speaker
2. USB to Micro-USB Charging Cable
3. User Manual
4. Warranty Card

Product overview:

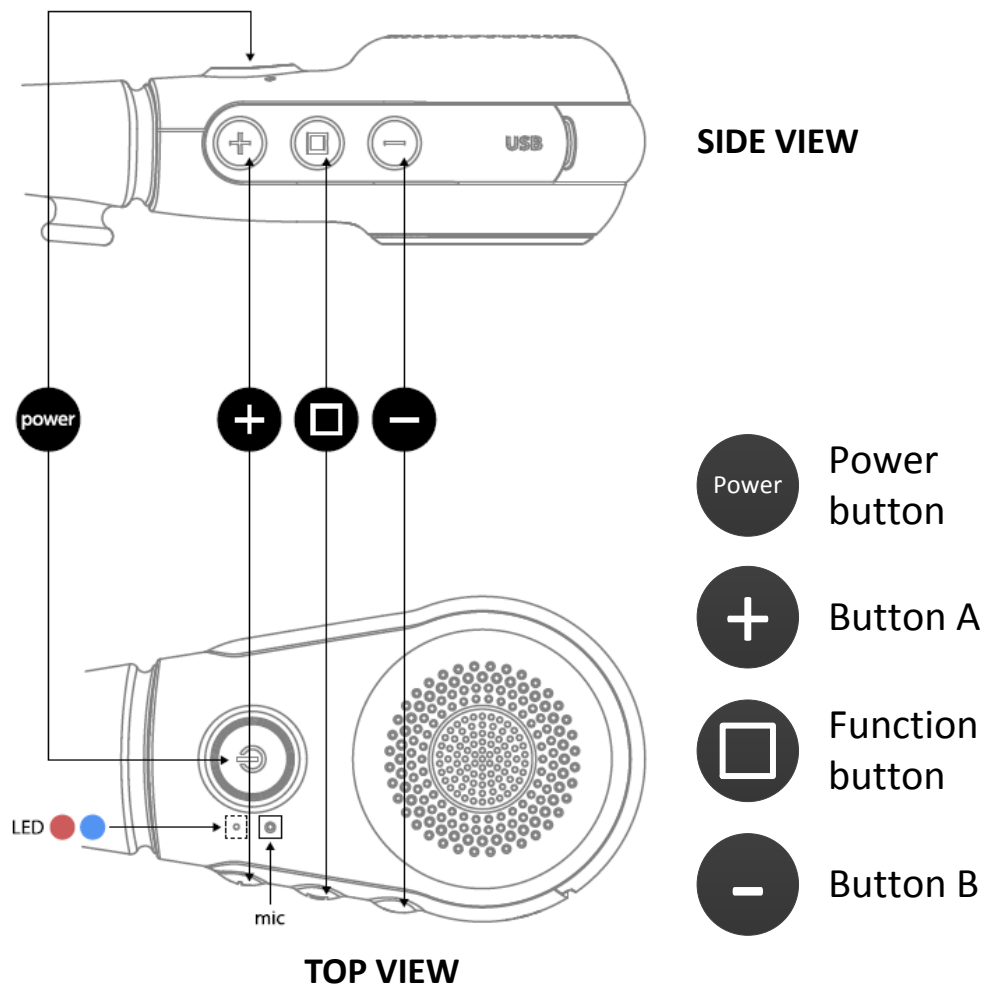

Connections:

1. Bluetooth: Connect speaker to your mobile device via Bluetooth.
2. USB: Connect speaker to a power source using a micro-USB charging cable.

LED indicators:

LED Color	LED State	Description
Blue/Red (alternate)	Blinking every 0.5 second	Searching a Bluetooth device for pairing.
	Blinking every 5 seconds	Paired with a Bluetooth device.
	Blinking every 1 second	No connection with a Bluetooth device.
Blue	On	Connected to a power source and fully charged or in a phone call.
	Blinking every 5 seconds	Paired with a Bluetooth device. Battery capacity is low (less than 10%).
	Blinking every 1 second	No connection with a Bluetooth device. Battery capacity is low (less than 10%).
Red	On	Connected to a power source and currently charging.

Operation:

Operation	Component	Action	Description
Power on	Power Button	Press and hold for 3 seconds	Turn speaker on. Bluetooth function is enabled and speaker will auto-connect with paired device. Otherwise, use a Bluetooth device to search and pair with speaker.
Power off	Power Button	Press and hold for 3 seconds	Turn speaker off.
Bluetooth pairing	Function Button	Press and hold for 5 seconds	Speaker will enter Bluetooth pairing mode. You can use a Bluetooth enabled device to search and find the speaker name. If prompted for a PIN, enter : 0000 to confirm connection.
Charging	Micro-USB Port	Plug the micro-USB charging cable	LED indicator turns red during charging. When fully charged, LED

			indicator turns blue.
Music Play/Pause	Function Button	Press once	Play current song in paired device. If a song is currently playing, this action will pause the song.
Volume +	Button A	Press	Increase volume. A notification tone will confirm when volume reaches the maximum level.
Volume -	Button B	Press	Decrease volume. A notification tone will confirm when volume reaches the minimum level.
Skip to the next song	Button A	Press for 3 seconds	While the music is playing, skip to the next song.
Go to the previous song	Button B	Press for 3 seconds	While the music is playing, go back to the previous song or the beginning of current song(depends on the music player).
Answer/End phone call	Function Button	Press once	Answer an incoming call. Press again to end the call. A notification tone will confirm this action.
Decline phone call	Function Button	Press for 3 seconds	Decline an incoming phone call. A notification tone will confirm that the incoming call was declined.
Switch to phone/speaker	Function Button	Press for 3 seconds	During a phone call, switch the call to the phone. A notification tone will confirm this action. Press and hold function button for 3 seconds again to switch back the call to speaker.
Redial	Function Button	Press twice	A notification tone will confirm this action, and speaker will redial the last phone number called.
Mute	Button B	Press for 3 seconds	A notification tone will confirm that the microphone is muted.

How to clean: If there is any dirt, wipe it using a clean soft cloth or a soft brush dipped in water or alcohol

*Note that not all types of dirt can be fully and effectively removed

FCC Statement:

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

Safety Warning:

Avoid hearing damage:

- Permanent hearing loss may occur if the speaker is used at high volume when it is placed near your ears. Set the volume to a safe level.
- Before you place the speaker on your neck, set the volume to the minimum level. After the speaker has been properly positioned on your neck, adjust the volume to a comfortable level.
- Turn down the volume if you can't hear people speaking near you while you wear the speaker on neck.

To reduce the risk of electric shock or damage to your equipment:

- Plug the USB cable into a device that only has the correct USB port.
- Avoid contact with water. Do not ingress water.
- Avoid inserting items into the openings of the speaker.
- Do not disassemble the speaker. Only a service technician who is authorized by original equipment manufacturer should perform repairs on your speaker. Otherwise, the manufacturer is not responsible for any damage that may result in the disassembly of the speaker.
- Avoid over-bending the strap.
- Do not use speaker with improper or dangerous actions.

Caution: The speaker containing battery part should not be exposed to excessive heat such as fire, sunlight, or other concentrated heat surfaces.