FCC ID: SRKWPSPT100

FCC label requirement

Please note:

- (1) The device bear a label with FCC ID:SRKWPSPT100 attached on the bottom of the device and a second label with FCC ID:UDV-0606020060002 attached on RF module inside the device.
- (2) FCC label shown as:

FCC ID: SRKWPSPT100

Contains FCC ID:UDV-0606020060002

FCC RF exposure requirement

To allow compliance with RF exposure requirement for the device integrated with RF module FCC ID.: UDV-0606020060002 which specifications are:


- (a) For GSM 850MHz / GSM 900MHz band is 33dBm (= 2W), the maximum antenna gain with cable is 0.5 dBi.
- (b) For DCS1800MHz / PCS1900MHz band is 30dBm (= 1W) , the maximum antenna gain with cable is 1.0 dBi .

The SAR evaluation, please refer the report No. 07-04-MAS-130-02.

System Modes

1. Normal Mode:

A. Normal:

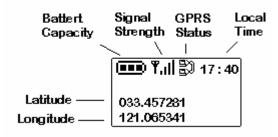


Power Button Long Press: Power OFF.


Power Button Short Press: Switch To GPS Info. Mode.

Button 1 Long Press: Parking ON/OFF

Button 2 Long Press: Dial Emergency Phone 1 (Set Up By Utility).
Button 3 Long Press: Dial Emergency Phone 2 (Set Up By Utility).
Button 4 Long Press: Dial Emergency Phone 3 (Set Up By Utility).
Button 5 Long Press: Send Emergency SMS (Set Up By Utility).

B. When Ring In:

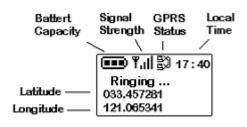

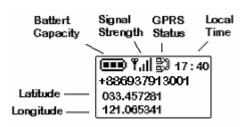


Power Button Long Press: Power OFF.


Power Button Short Press: Pick Up Phone.

Button 1~4 Short/Long Press: Pick Up Phone.

Button 5 Short/Long Press: Hand Up Phone.

C. When Talking:

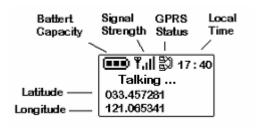

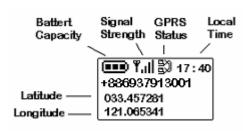


Power Button Long Press: Power OFF.

Button 3 Short Press: Volume Up. Button 4 Short Press: Volume Down.

Button 5 Short Press: Hand Up Phone.

C. When Parking Enable:

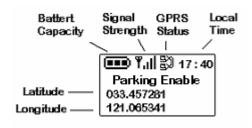

Power Button Long Press: Power OFF.


Button 3 Short Press: Volume Up.

Button 4 Short Press: Volume Down.

Button 5 Short Press: Hand Up Phone.

2. GPS Information Mode:

No Fix:

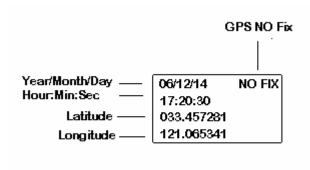

Fix:

| Hour:Min:Sec — 17:20:30 2 | 270H ———————————————————————————————————— | Speed (KM/H) Heading Altitude Satallites |
|---------------------------|---|---|
|---------------------------|---|---|

A. Normal

Power Button Long Press: Power OFF.

Power Button Short Press: Switch To Dial Phone Mode.

Button 2 Long Press: Dial Emergency Phone 1 (Set Up By Utility).
Button 3 Long Press: Dial Emergency Phone 2 (Set Up By Utility).
Button 4 Long Press: Dial Emergency Phone 3 (Set Up By Utility).

B. When Ring In:

Power Button Long Press: Power OFF.

Power Button Short Press: Pick Up Phone.

Button 1~4 Short/Long Press: Pick Up Phone.

Button 5 Short/Long Press: Hand Up Phone.

3. Dial Phone Mode:

Dial Phone Mode

093700

0123456289

Power Button Long Press: Power OFF.

Power Button Short Press: Switch To Normal Mode.

 ${\bf Button\ 1\ Short\ Press: Select\ Current\ Number\ To\ Dial\ List.}$

Button 2 Short Press : Clear Current Number To Dial List.

Button 3 Short Press: Right Shift Number.

Button 4 Short Press: Lift Shift Number.

Button 5 Long Press: Dial Out.

Note: System will go back to normal mode after 10 sec without any button press

Utility Setting

1. Unit Setting

| 00Utility | |
|---------------------------------------|-------------------------------|
| | Persional Tracer PT100 (COM2) |
| Basic Setting Phone Setting Other | |
| Unit Setting | |
| Unit ID : | 1020000082 |
| Pin Code : | 0 |
| Time Zone : | +8 |
| Sync. Timer(Sec) : | 60 |
| GPRS Setting | |
| GPRS User Name : | |
| GPRS Password : | |
| GPRS APN : | INTERNET |
| Internet Setting | |
| Host Address : | 220.130.174.160 |
| Host Port: | 4100 |
| Host DNS : | 168.95.1.1 |
| | |
| | Clear |
| Read Setting | Save Setting Exit |
| Read Setting | |

Unit ID: The identification number of the unit. The default unit ID is 1010000001.

Pin Code: The PIN code of the GSM/GPRS SIM card. (Max. 4 digits)

Sync. Timer: Synchronization message sending interval in seconds.(10 ~ 65535 seconds) 0: Only one sync message be transmited when the unit connected to the server.

GPRS APN: GPRS Access Point Name. (Max. 35 characters)

GPRS User Name: GPRS login user name (Max. 15 characters)


GPRS Password : GPRS login password (Max. 15 characters)

Host Address: The base station static WAN IP/DNS address. (Max. 30 characters)


Host Port: The base station application port number of the UDP/TCP

Host DNS: DNS IP address.


1-1. Save Setting

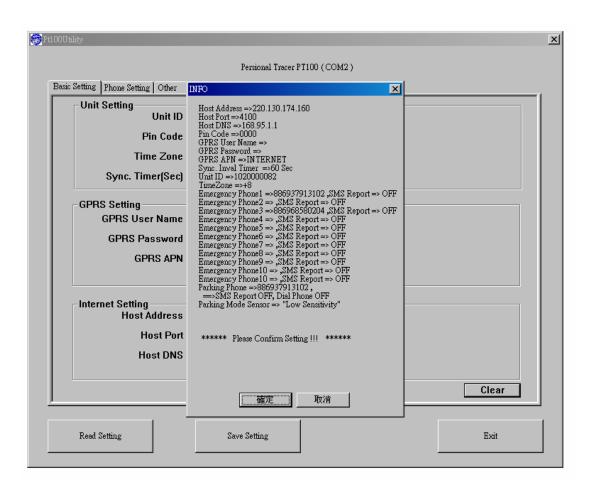


2. Phone Setting

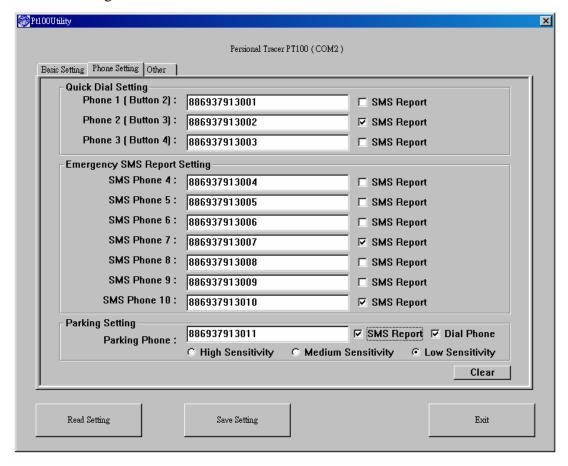


2-1. Save Setting

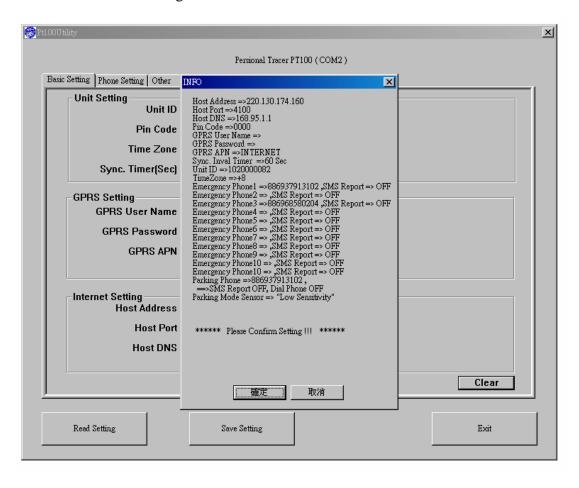


3. Firmware Upgrade

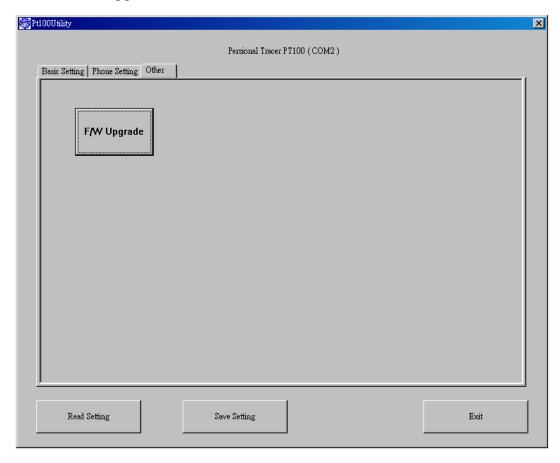

3-1. Select Firmware file (*.BIN)

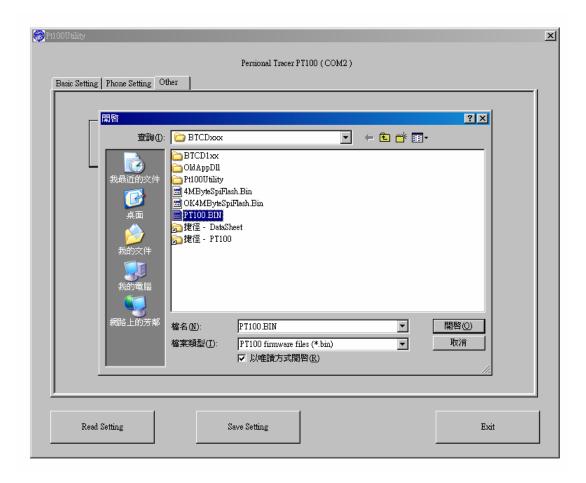

3-2. Check Checksum

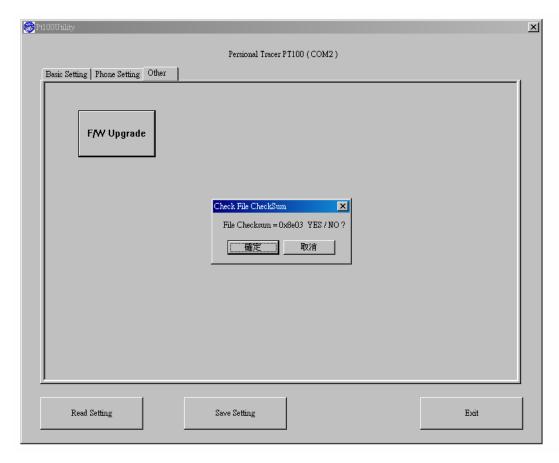

3-3. Finish

