

\*\*\* USER'S MANUAL \*\*\*

---

**FCC ID : SRKWT100CR**

## The Federal Communication Commission Statement

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures: -

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced Radio/TV technician for help.**

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that change or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERECE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREED OPERATION.



1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

# WT100CR operation manual

- 1, Touch remote controller battery install  
Use AA size battery x 2

Note: **DO NOT** touch the "Touch Area" while placing the battery









2. Functions of Touch PAD
  - a. move cursor  
touch and move touch-pad by finger
  - b. simulate mouse left button  
a short touch (click) on touch pad
  - c. simulate mouse right button  
a long touch (no moving approx. 1 second) on touch pad





3. Auto search RF receiver dongle  
press  and  simultaneously until LED off then release keys ,  
when you see blue LEDs keep ON, it means that the WT100CR is looking  
for the RF dongle; when you see blue LEDs blinking quickly, it means that  
both remote controller and RF dongle had been successfully connected!

Note : if you replace WT100CR battery, you have to reconnect RF dongle.

#### 4. Key operation



-  mouse Left button
-  play/Pause in Windows Media Player
-  fast forward in Windows Media Player
-  fast backward in Windows Media Player
-  increase volume
-  mouse right button
-  Backspace
-  task window switching

Press , PC pop all active task item,  or  select task, press  switch to your task window

	mute
	decrease volume
	arrow up
	arrow right
	arrow down
	arrow left
	ENTER
	full screen in Windows Media Player

5. RF Receive Dongle install

Plugin RF receive dongle to your PC/NoteBook USB port, PC/NoteBook find a new device and install driver automatically.