

SIZE : 95 X 148MM

彩色印刷

80G哑粉

正反面印刷





Wireless Portable Bluetooth Speaker



Mode No.: DOSS SoundBox xs
User Manual

Introduction

Thank you for purchasing the DOSS SoundBox xs Wireless Portable Bluetooth Speaker with Bluetooth and Hands free function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

Package content

- One wireless portable speaker
- USB charging cable
- Ø3.5mm auxiliary cable
- User manual

Product overview



Backlit touch-sensitive buttons

- Mode switch:** Touch **MODE** to toggle play mode among Bluetooth, TF Card and Aux-in connection.
- In Bluetooth mode/TF mode, touch **◀** to skip backward.
- Play/Pause and handset button**
 - In Bluetooth mode, touch **⏸** to answer or end a call. Touch for 3 seconds to reject a call.
 - In Bluetooth mode, touch **📞** to play/pause your tune. Touch for 3 seconds to disconnect with your device, and touch **📞** again to reconnect your device.
 - In TF mode, touch **⏸** to play/pause your tune.
- In Bluetooth mode/TF mode, touch **▶** to skip forward.
- Volume control:**
 - Clockwise rotation to increase the volume.
 - Counterclockwise rotation to decrease the volume.



- Power button:** Long press **⏻** to turn the device on and off.
- Auxiliary Ø3.5mm jack :** Use it for cabled playback with compatible devices.
- TF card:** Use it for TF card (with music) playback. support mp3,wav songs, 32G or smaller size cards are better, if not, please format that to FAT32 or FAT.
- Charging port:** Plug the supplied USB cable into this port to recharge the built-in battery.
- LED charging indicator.**
 - Charging : Steady Red
 - Fully charged : Light Off

Status indicators

Center indicator/ Control button	Flashing blue	Indicates that the speaker has entered into the pairing mode and it is ready to be paired
	Steady blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
Battery status indicator	Steady Green	Indicates that the device has switched to the TF mode
	Steady red	Battery is charging
	Light Off	Battery is fully charged



Scan this or search 'DOSS fans' on Facebook to join our group, share your experience and find more surprise!

DOSS
Wonders Technology Co., Ltd
Email: Support@dossav.com
Website: www.dossaudio.com
Follow us on Facebook:
<https://www.facebook.com/dossav>

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer micro USB port or the cellphone adapter (please confirm its output is 5V)
- Make sure that the speaker is fully charged before using it for the first time. It will take approximately 2-3 hours to recharge after.
- LED light will remain RED when charging and turn off once charge completes.
- Press & Hold the power button to turn on the speaker. Repeat the steps to turn the device off as well.

Pairing the wireless speaker with your smart device

- Place your smart device and wireless speaker no more than one meter away from each other.
- Press the power button located on the back of the speaker for several seconds to turn it on.
- Set your smart device to "discover" the wireless speaker. Upon powering on, a tone will be heard, the blue LED will start flashing, accompanied by a prompt notifying that the speaker has entered into the pairing mode.
- Enabled Bluetooth on your device and choose **DOSS SoundBox xs** from the list.
- If pairing is successful, the LED will change to steady blue and your phone will confirm that the connection has been established. If the pairing process fails after 60 seconds, please press the **📞** button for 5 seconds and have a try again.
- long press the button **📞**, you can disconnect the Bluetooth.
Note: If your smart device cannot discover the SoundBox xs, long press the button **📞** and have a try again.

Using the 3.5mm Audio Input

- Plug one end of a 3.5mm Audio cable into the unit. The mode indicator light will display a red light.
- Plug the other end of the 3.5mm Audio cable into other audio devices.
- Turn on the speaker, it will play music from the audio device.
- If you want to Play/pause the tune, or change Previous/Next tune just control the native buttons on your audio device.

Answering and ending a call using your speaker or mobile phone

- When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
- Briefly press the Handset **📞** button to pick up, long press to reject. You may also press the answer button on your smart phone to take the call using the speaker.
- Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
- To end a call, tap the Handset **📞** button once again. Likewise, you may also end the call directly using the command on your cell phone.
- When listening to music using your smart phone, playback will resume automatically once the call has ended.

Using it with your Echo Dot

You can connect the Dot with the speaker using a 3.5 mm auxin cable or Bluetooth. Please use the following steps to set up using Bluetooth:

- Download the Alexa APP, follow the standard setup procedure to get the dot connected to your home Wi-Fi network.
- Switch the SoundBox xs speaker to Bluetooth mode, you can press the 'play/handsfree' button for 5 seconds to keep it in pairing status.
- Run the Alexa app, tap Menu and then tap Settings.
- Tap the Echo Dot in your list of Alexa Devices, then tap Bluetooth.
- The SoundBox xs speaker should appear in the list of Bluetooth Devices. If not, press the "📞" button for 5 seconds and try again. Once listed, tap on The SoundBox xs speaker to complete the pairing process. To remove the device, return to Bluetooth -> tap the name of the speaker -> then tap "Forget Device".

Note:
Voice command will not be able to turn on/off the SoundBox xs no matter whether you connect it via Bluetooth / Aux cable. It can only translate sound signal.

Troubleshooting

	Problem	Solution
Bluetooth	Cannot Pair with Bluetooth devices	Press Play/Pause button for 5 seconds, then have a try to pair it again
	Cannot play music after pairing	Please select 'DOSS SoundBox xs' as the default playback device
	The song cuts off during playback	Please check if the Bluetooth distance is more than 33 feet or the battery level is low
TF Card	There is noise during playback	Maybe caused by the interference of charging, try to put it in another place and do not charge it during playback
	Laptop prompts to install driver	This driver is not special for SoundBox xs, it's for your laptop Bluetooth function, please contact the computer company or windows
	Not paired with transmitter	Please press Play/ Pause button for 5 seconds or contact with the transmitter's customer service for help
other	The speaker do not play when the card is inserted, and jump directly back to Bluetooth mode	Check whether the card format is FAT or FAT32. If not, format it to FAT or FAT32. Check the song format. The speaker only supports MP3, WAV
	The song cuts off during playback	There may be a problem with the song's file, try deleting all the songs in the same file
Customer Service Email	support@dossav.com	

Product specifications

Product type: Wireless Portable Bluetooth Speaker with Built-in Microphone

Output power: 5W x 2

Driver unit: 1.6 inch speaker x 1 + 1.6*2.9 inch passive radiator

Frequency response: 90Hz-15kHz

Signal to noise ratio: ≥60 dB

Unit weight: 270 g

Unit dimension: 5.2 x 2.8 x 2.7 inch

Warranty: One-year limited

Power

- Battery type: Li-ion 3.7V, 1000mAh
- Input: 5V ±1A
- Battery charge up time: 3 hours approximately (when fully depleted).
- Battery playback time: up to 8 hours (duration time may vary depending on the volume level used and usage patterns).

Wireless/Networking

Bluetooth versions: Bluetooth V4.0

- Profiles supported
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 meters / 33 ft

Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the Bluetooth speaker by yourself.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the Bluetooth speaker to excessive heat or to direct sunlight for long periods of time.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the Bluetooth speaker.
- Do NOT use near a microwave oven or wireless LAN products.