

 
 
 
BLUETOOTH SPEAKER

DS-1130






Thank you to have chosen our product. This product has been created by our professional team and according to the USA regulation. For a better use of your new device, we recommend you to read carefully this user manual and keep it for record.

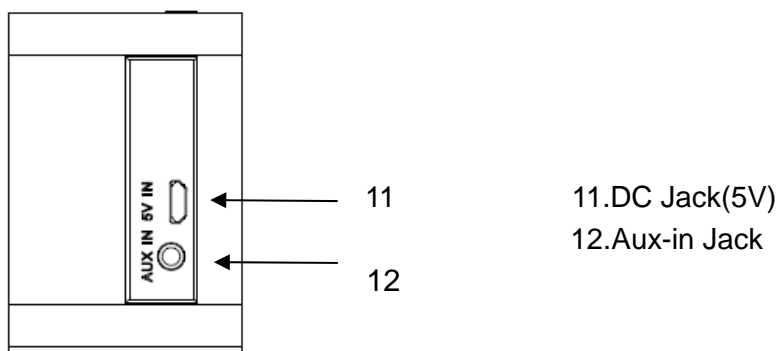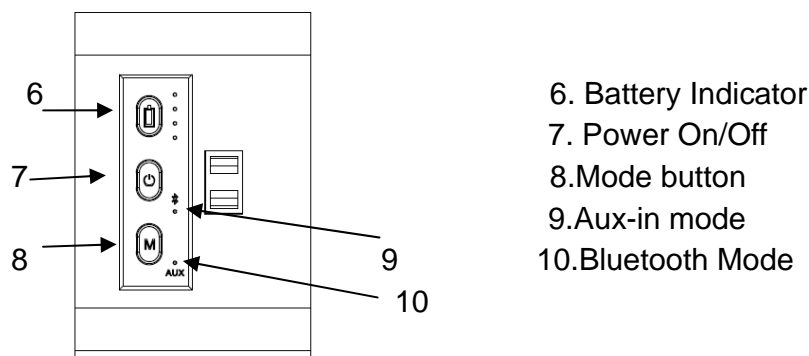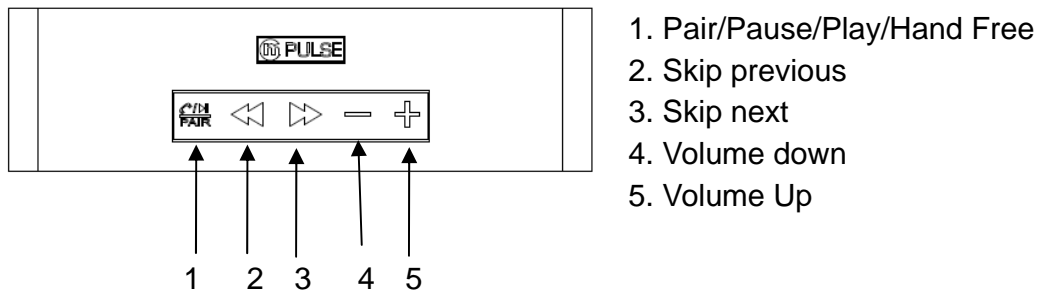


Product sketch map





Set up

1. To press the  to turn on the speaker. The  turns blue.
2. Speaker starts searching for Bluetooth device, and blue LED starts flashing.
3. Turn on your Bluetooth device, search “DS-1130” and press  to pair your Bluetooth device with the speaker. Password is “0000”.
4. Once paired, LED will change flashing rate from quick flashing to slow flashing.
5. Once paired successfully, both the speaker and your Bluetooth device will store the device. Next time, when you use the same Bluetooth device to connect the speaker, then no need to use the password.
6. When not in use, please turn off the speaker.

Listening to Bluetooth device


1. Play music from your Bluetooth device and enjoy your time with it.
2. Adjust the volume by press or hold the Vol-/+ buttons or native controls on the Bluetooth device.
3. Press Play/Pause on the speaker to play/pause the tune or just control the tune by press Play/Pause on the Bluetooth device.
4. Change the songs by press  or  to play the previous song or next song.
5. Press and hold button  to disconnect the previous Bluetooth device, the blue light will flash fast and the speaker is searching for new Bluetooth device.

Hand-free function

1. Press  to answer incoming calls, streaming music will pause
2. Press  again to end calls, streaming music will resume.

3.5mm Audio Input

Requires a 3.5mm audio cable (Included).

1. Connect a 3.5mm audio cable to the 3.5mm audio input on the speaker and an audio output on an MP3 player or other audio sources.
2. Speaker needs to switch to Aux In mode by press . The Aux-in mode indicator light turns to red.
3. Press the Vol-/+ button or native controls on the connected MP3 player to control volume.
4. If you want to Play/pause the tune, just control the native buttons on your MP3 player.

Quick understanding for the mode and lights

Status	Indicator
Bluetooth pairing	Blue light flash quickly
Paired	Blue light flash slowly
Aux-in mode	Red
Battery Indicator	White light (each light indicates 25% of the battery)
Power off	No light

Trouble shooting

Symptom	Possible problem and Solution
Can not pair successfully	Check whether the speaker is in standby and searching mode. Check whether there are too many Bluetooth receivers around your Bluetooth device. Turn off them to avoid any disturbance. And pair again.
The sound is small or distorted	Check the volume setting on both the speaker and your Bluetooth device and adjust the volume to a suitable level.
Do not play properly, the music is intermittently	Check whether the distance between the speaker and your Bluetooth device is out of its working distance, or whether there are some obstacles block the communication between the speaker and the Bluetooth device.

Specifications

- Model No.: DS-1130
- Speaker size : 165*68*45mm
- Bluetooth A2DP function
- Rechargeable Li-ion battery included
- Battery capacity: 3.7V 1200mAh
- Battery life: 4Hrs (Volume at 50%)
- Mini USB jack, power by USB cable (USB cable included)
- 3.5mm Aux jack for connection to other MP3, CD, Laptop...
- Output power: 2W X 2 (THD=10%)
- Working distance: < 10 M
- Can be paired up to 6 mobile or audio players

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

A warning that no objects filled with liquids, such as vases, shall be placed on the apparatus.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.



Warning:

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

Disposal

Batteries do not belong in household waste. As a consumer, you are required by law to recycle used batteries. You can recycle your old batteries at public collection points or wherever the product was sold.

For environmental reasons, do not dispose of the device in the household waste at the end of their service life. Dispose of the unit at a suitable local recycling point.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.