 


BLUETOOTH SPEAKER

DS-1155

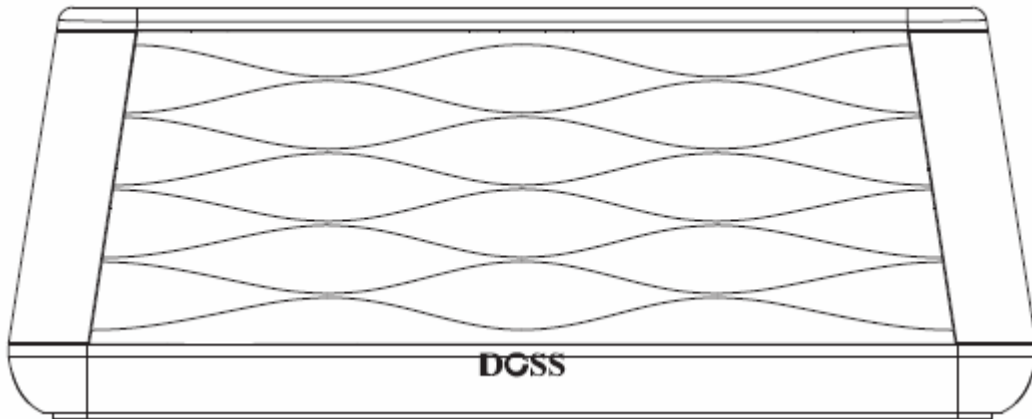

 
Thank you to have chosen our product. This product has been created by our professional team and according to the US regulation. For a better use of your new device, we recommend you to read carefully this user manual and keep it for record.

Specifications


- Model No.: DS-1155
- Bluetooth A2DP function
- Rechargeable Li-ion battery included
- Battery capacity: 3.7V 2200mAh
- Sensitive touch key
- Micro USB jack, power by USB cable (USB cable included)
- 3.5mm Aux jack for connection to other MP3, CD, Laptop...
- Output power: 2W X 2 (THD=10%)
- Working distance: 33 Feet

Product sketch map

All the switch buttons are sensitive and will display after turn on the speaker

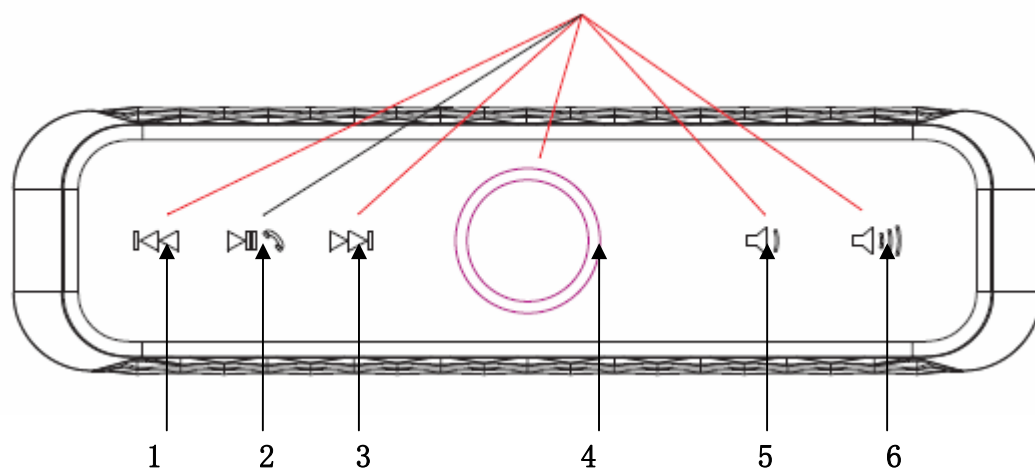

 
1. Rewind
2. Pause/Play/Hand-Free
3. Next Forward
4. Mode indicator
5. Volume Down
6. Volume Up

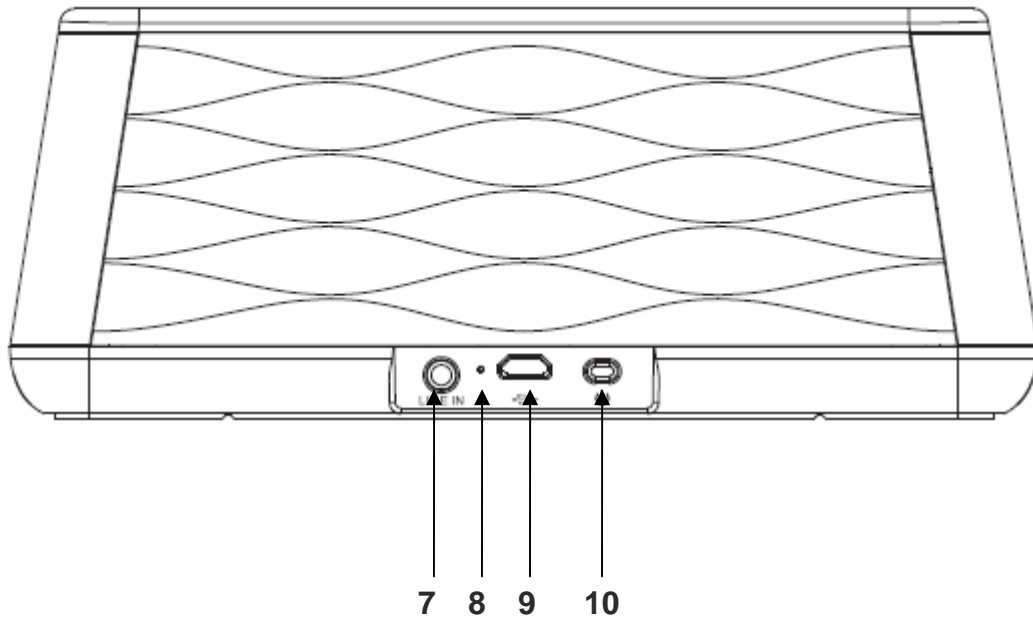

- 7. AUX IN
- 8. Battery charging indicator
- 9. Micro USB charging jack
- 10. Power Switch

Status	Indicator
Bluetooth pairing	Blue light flash quickly
Paired	Solid Blue
Aux-in mode	Red
Charging	red light
Fully charged	Green

Pairing a Bluetooth Speaker

1. Press the  to turn on the speaker. The Mode indicator Light will flash blue quickly.
2. Turn on your Bluetooth device, search and select the “Bauhn” in your Bluetooth Setting to pair.

If your device enquires a password, enter the default password '0000'.

3. When successfully paired and connected, the Mode indicator light will change from quick flashing to solid blue and there will be an indicator sound.

After initial pairing, Both the speaker and your Bluetooth device will store the device name. Next time, when you use the same Bluetooth device to connect the speaker, it will automatically connect.

4. When not in use, please turn off the speaker.

NOTE:

Hold the button  around 3 seconds, the bluetooth connection will be terminated.

Playing Audio Wirelessly

1. Follow the instruction of Pairing A Bluetooth Device
2. Adjust the volume by press or hold the Vol-/+ buttons or native controls on the Bluetooth device.
3. Press Play/Pause on the speaker to play/pause the tune or just control the tune by press Play/Pause on the Bluetooth device.
4. Press Rewind or Next Forward to change the songs.
5. Press the Hand-Free to answer incoming calls, streaming music will pause. Then press the Hand-Free to end calls, streaming music will resume.

Using the 3.5mm Audio Input

1. Plug one end of a 3.5mm Audio input cable into the 3.5mm Audio Input on the unit.
The mode indicator light will display a red light.
2. Plug another end of the 3.5mm Audio input cable into the audio output/headphone output on an MP3 Player or other audio devices.
3. Turn on the speaker, Audio will play through the connected device and will now be heard through the speakers.
4. Press and hold the Volume Up and Volume Down to adjust the volume.
5. If you want to Play/pause the tune, just control the native buttons on your MP3 player.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.