 


Wireless Speaker System

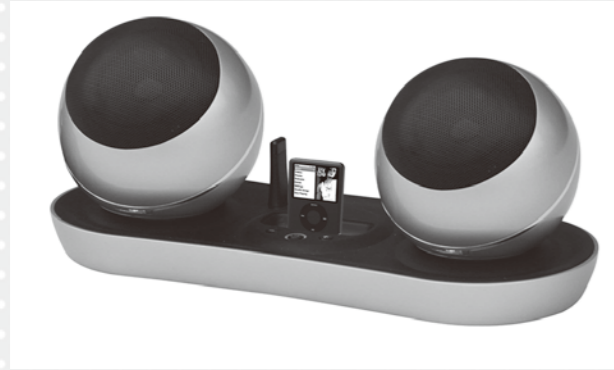

Model No.:DS-456
OPERATING INSTRUCTIONS

User Guide

Congratulations on the purchase of your new wireless speaker system, to get the most from your speaker system, please take a few minutes to read the following instructions and familiarize yourself with the operation of the unit.
Before setting up the unit, check that the following items are included within the box:

1. Wireless speaker system
2. AC power adaptor
3. 3.5mm audio cable for aux input

1

Unpacking and Installation

Unpack your unit carefully. We recommend that you save the box and packing materials, in case you wish to store the unit or if you ever need to return it for service. To avoid damage to the unit, never place it near heat sources such as radiators, in front of heating vents or in direct sunlight. Keep it away from water.

For Your Safety

When disconnecting the DC power cord from a socket, pull the plug itself. Never try to remove the plug from the socket by pulling the cord. Never handle the DC power plug with wet hands - this can cause electric shock.

Care and Maintenance for the Unit

When cleaning the unit, you should first unplug it from the power supply. Use only a damp cloth to wipe the unit. Never allow water or any other liquids to get inside the unit while cleaning. Unplug the unit if you are not using it for an extended period of time.

2

WARNING:

Servicing should be carried out by qualified personnel only. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Dangerous high voltages are present inside the unit, do not try to open it up. To prevent risk of fire or electric shock, do not leave any objects filled with liquids, near the product, such as vases. Never put lighting candles near the unit.

CAUTION:

If the plug or the power supply cord needs to be replaced, ensure that the replacement complies with the manufacturer's recommendations and specifications.


If the Unit Requires Servicing

Do not attempt to repair the unit yourself. All repairs should be done by a qualified service technician.

To avoid risk of electric shock, ensure that the plug is fully inserted into the wall socket. Power supply source: AC 100~240V/50Hz

3


A.Station (top)

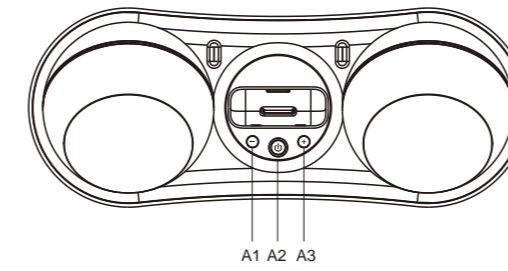

- A1. VOL-
- A2. POWER
- A3. VOL+

4

 
B.Station(rear)

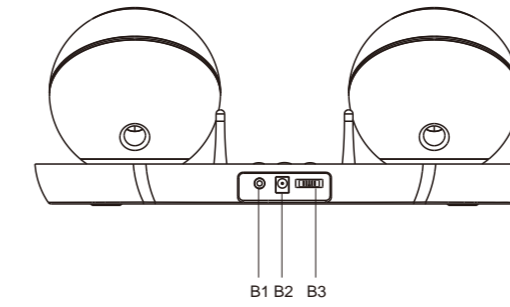

- B1. AUX
- B2. DC IN
- B3. CH1. CH2. CH3

5

 C.Speaker unit

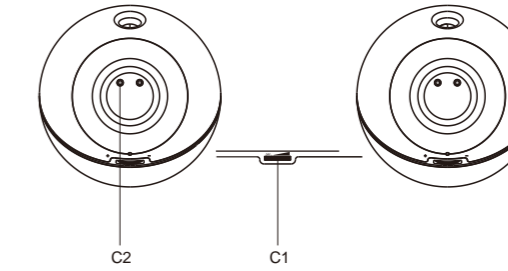

- C1. Power and Vol+/-
- C2. Charging pin

6

Ready for use:

The sound comes from two balls which has rechargeable battery built-in with individual amplifier, wireless function to be automatically activated as soon as balls leave from base station, turn on the speaker then enjoy the music everywhere in your house.

Note: Rechargeable lithium battery built in, when the ball placed on the base station under power on mode, it starts to charge itself. The charging light is red and will become green if fully charged.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE :
THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY AUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with RSS 210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7


To play iPod

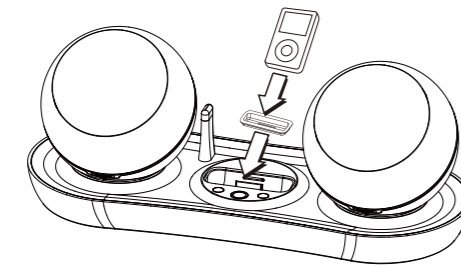

1. Select a proper docking adaptor enclosed in your own iPod and place it into the docking station, then dock your iPod gently.

8


To play iPod

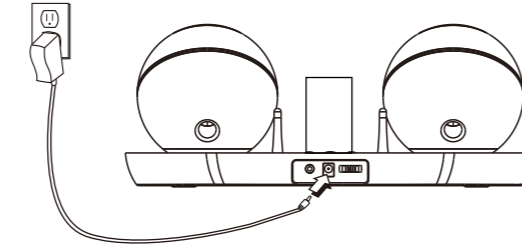

2. Plug the AC adaptor into the DC in port at the rear of the base station, then into a power supply. (100-240V/50Hz AC electrical outlet)

9


To play iPod

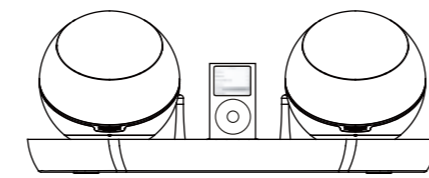

3. Press the power button on the base station to turn on the unit, also switch on the balls to play iPod. Then choose the best channel through the "channel" button at the rear of the base station until the balls receive the right signal.

10

To play iPod

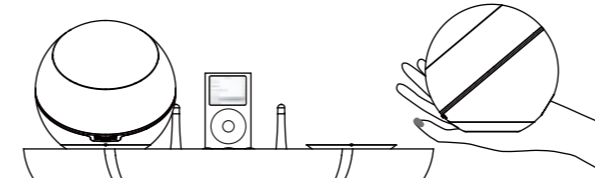


4. Use "Vol +" or "Vol -" to adjust to a proper volume level, then you can take it anywhere in your house.

Remark: After the channel chosen, the two balls will remember the frequency to be used, if the unit receives any interference while playing, please put back the balls into the station to adjust to other channel.

11

To play auxiliary audio sources

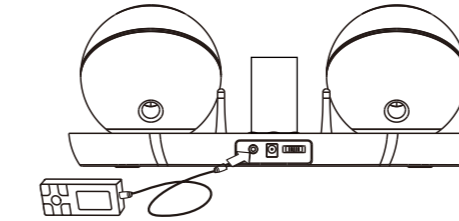

Connect one end of 3.5mm audio cable to the audio output port of auxiliary audio devices (MP3, PC, CD player, etc) and connect the other end of the cable to Aux input port at the rear of the base station, then it plays.

12

Product specification:

Each speaker has its own separate amplifier and receiving system. Purified sound from 2pcs of 2.75" full range speaker. Rechargeable lithium batteries built in, which can last 5 hours after fully charged. Wireless working distance: 30m AC adaptor included. Not only compatible with iPod, but also compatible with other MP3, Mobile phone by 3.5mm Aux input jack. Output power: 6W x 2

13