



## ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

### SI PRODUCTS Consumer Relations

Service Center Dept. 168

3000 Pontiac Trail

Commerce Township, MI 48390

No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: [www.siproducs.com](http://www.siproducs.com)

SI Products  
Service Center

1.888.856.6781  
8:30a.m. – 7:00p.m. (EST)  
M – F

Mail To: SI Products  
Consumer Relations  
Service Center Dept. 168  
3000 Pontiac Trail  
Commerce Township, MI  
48390

e-mail:  
[cservice@siproducs.com](mailto:cservice@siproducs.com)

THE  
SHARPER  
IMAGE

# Dock for iPod Indoor/Outdoor Wireless Speakers



Instruction Manual and  
Warranty Information

EC-W160

**1** year  
limited warranty

**THE  
SHARPER  
IMAGE**

### **Surround yourself with your favorite music.**

Thank you for purchasing The Sharper Image® Dock for iPod Indoor/Outdoor Wireless Speakers. This product, along with the entire The Sharper Image® collection, connects innovation with high quality design to provide you with years of dependability and enjoyment. Wireless weather-resistant speakers mean effortless entertaining indoors or outdoors. Impress your guests with the rich sound experience from the ultimate speaker system duo.

## IMPORTANT SAFETY INSTRUCTIONS:

WHEN USING AN ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

### **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER** - To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- NEVER use pins or other metallic fasteners with this appliance.



This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.**

**WARNING** - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharp Image®; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert any object into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.

**SAVE THESE INSTRUCTIONS**

## Special Features

- Listen to your favorite playlist indoors or outdoors
- Weather-resistant speakers

Note: Unit should not be exposed to extreme rain or snow storms.  
Store indoors when not in use.

- Wirelessly transmits audio up to 150 foot range
- Independent volume control on each speaker
- Charge, play and display your iPod
- Includes Remote Control for easy selection
- Rechargeable (Lead Acid) 6V/2A battery lasts up to 5 hours
- Charging Base includes AC adaptor

## Getting Started

1. PLEASE NOTE: Dock base is for INDOOR USE ONLY. The two wireless speakers are weather-resistant and can be used both indoors or outdoors.
2. Place charging base on a steady surface area, near a 120V household outlet.
3. Attach the AC adaptor to the DC Jack located on the back of the charging base. (Fig. 1)
4. Plug the cord into 120V power outlet.

## Charging your iPod™

1. Carefully place your iPod into the docking area so that the pin connector in the dock is fully connected to the pin socket. You may hear a "chirp", indicating that your iPod is properly connected.

**Note:** Do not force. Carefully slide iPod over dock connector to avoid damage.

**WARNING:** INSERT AND PIN CONNECTOR ARE DESIGNED FOR APPLE IPOD MUSIC PLAYERS ONLY. ATTEMPTING TO ATTACH OR FORCE ANY NON-IPOD MUSIC PLAYER INTO THE DOCK CONNECTOR WILL **DAMAGE AND EVEN DESTROY YOUR DEVICE.**

2. Your iPod will begin charging, until fully charged.
3. For your convenience, your iPod will charge even if the power button is turned off. The charging base only needs to be plugged in for the iPod to charge.



## Charging your speakers

When the speakers are charged, you have the freedom to place speakers wherever you wish to play your music, no wires required. The system wirelessly transmits audio up to 150 feet.


1. When the speakers are placed in recharging cradle properly, an indicator light behind the grill of the speaker will glow to RED for recharging. When fully charged, the indicator light will glow GREEN.

# Main Features on Docks for iPod Indoor/Outdoor Wireless Speakers:

Fig. 1

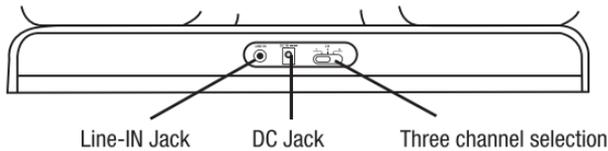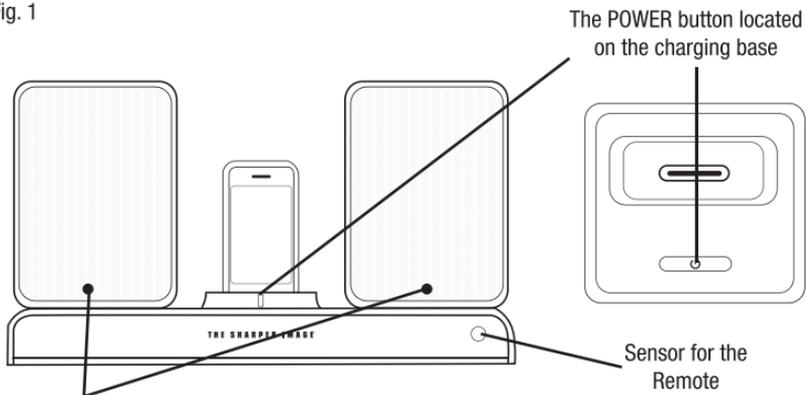

## Top View of Speaker

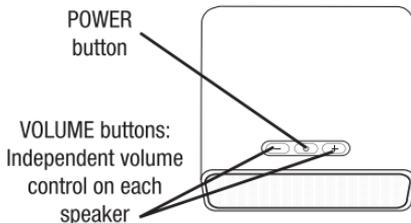

2. For your convenience, the speakers will charge in the recharging cradle, even if the **power** button is turned off. The charging base only needs to be plugged in for the speakers to charge.


## Listening to your iPod™

1. Press the **power** button  on the base. Below the button will glow BLUE to indicate power ON.
2. Press the **power** button  on the speaker. Below the button will glow BLUE to indicate speaker is on.
3. Press the **- or +** buttons on each individual speaker to adjust the volume.
4. Press the **power** button  on base unit to turn OFF. The base and blue indicator turn off.
5. To turn speakers OFF, press the **power** button  and the speakers and blue indicator turn off.

## Listening to a non-docking iPod or other portable audio devices

If you are using a non-docking iPod, an MP3/MP4 player, or other portable audio devices, you may still play it through the speaker system. Simply plug your device into the LINE IN jack, located on the back of the unit.

Fig. 2

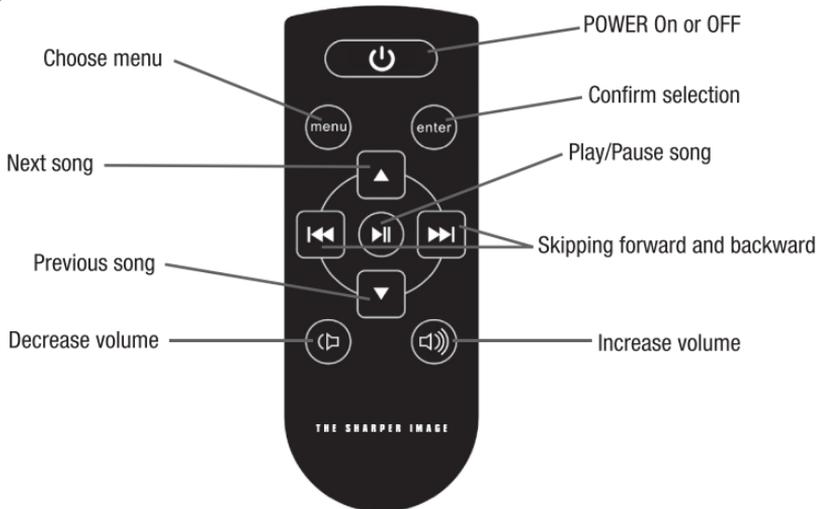

## Using the Remote Control

### Remote Control battery installation:

Simply pull tab out to activate battery power. One Remote Control Included.

**Note:** When replacing, make sure you dispose of batteries properly (see your local regulations).

Do not dispose of batteries in fire. Batteries may explode or leak.

## Maintenance

### To Store

You may leave the unit on display, or you can store it in its box in a cool, dry place.

### To Clean

Use only a soft dry cloth to clean the enclosure of the unit.

NEVER use liquids or abrasive cleaner to clean.

Modifications not authorized by the manufacturer may void user warranty.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment