

## Wireless Speaker System for iPod



*Please read this user's guide before using your new Speaker System.*

## Package contents

- Charging dock/Transmitter
- Two wireless speakers
- Remote Control with Battery
- 1/8" (3.5mm) Audio Cable
- AC Adapter
- User's Guide
- Five Cradles
- Quick Start

## Features

- Rechargeable speakers can be placed up to 130 feet (40m) away so you can listen to your tunes anywhere in your home.
- Aux-in jack and cable for connecting any other audio devices that have a standard 1/8" (3.5mm) headphone jack.
- Includes five cradles to keep most dockable iPod models securely connected while they charge and play.
- Remote control enables you to change songs or scan through playlists without having to get up.

### ① Power Your Speaker System

You must charge the speakers for at least 4 hours before using for the first time. Normally it takes about 3 hours to fully charge the speakers.

1. Connect the supplied AC adapter to the DC jack and plug into a standard household outlet.
2. Place the speaker on the charging dock. The LED indicator lights red. Once the speakers are fully charged, the indicator turns green. Remove the speakers.

 
## DC IN

Plug in the supplied AC adapter.




## AUX JACK

Connect an external audio source to use speaker system.

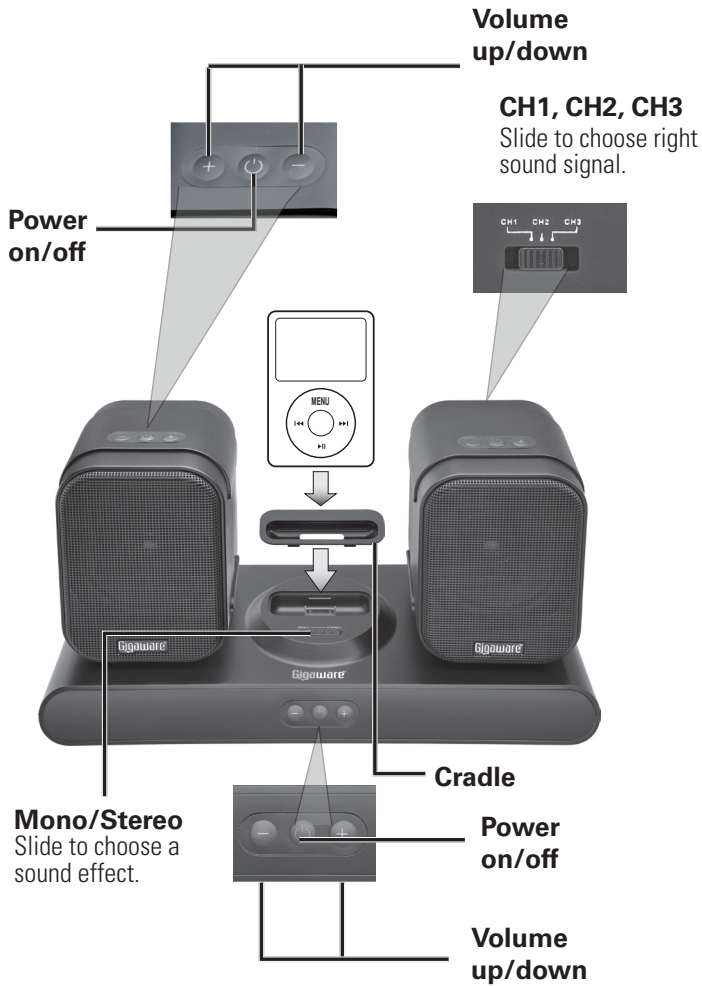

# Remote Control

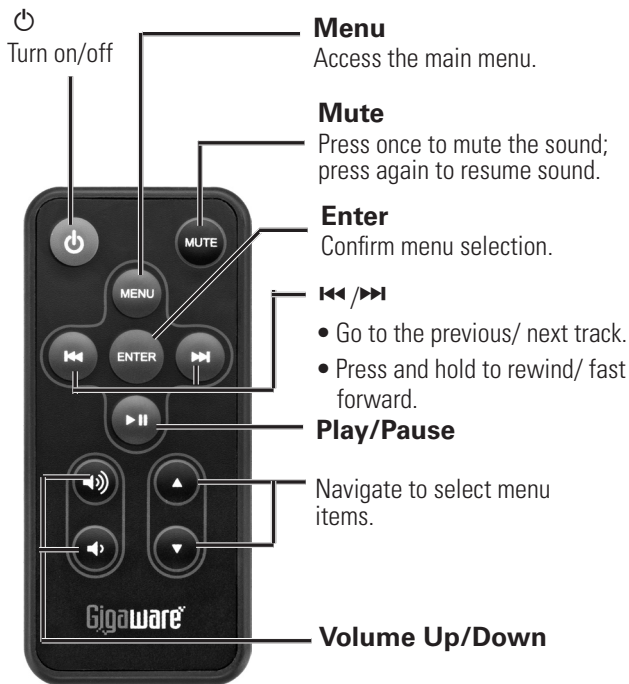 

## ② Replace the Remote Control Battery

Remove the insulating plastic before using the remote control.

Press the tab on the battery compartment tray and slide the tray out. Insert a new battery of the same type (3V, CR2025), positive (+) side up. Slide the tray back into the battery compartment until it clicks.

 


### **Important Battery Information:**

- *Dispose of batteries promptly and properly. Do not burn or bury them. Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.*
- *If you do not plan to use the speaker system for a long time, remove the battery. Batteries can leak chemicals that can damage electronic parts.*
- *Do not charge longer than recommended. Unplug the transmitter when the speakers are charged, and disconnect the AC adapter from the wall outlet.*

### ③ Listen to Your iPod

1. Insert the cradle that fits your iPod model, then plug in your iPod.
2. Press **⏻** on the charging dock and the speakers to turn on the system. Slide **CH1, CH2, CH3** to choose the best channel until the speakers receive the right signal.
3. Use **+** or **-** on the docking system or **⏪**/**⏩** on the remote control to adjust the volume. You can freely move the speakers from room to room to listen to your iPod.

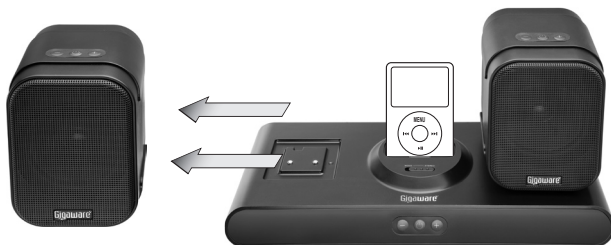

#### Notes:

- If the unit experiences any interference (signal loss or distortion) while it is playing, select another channel to obtain the best reception.
- Sometimes the speakers will give off noise when it is searching for the wireless connection, which will stop after the connection is paired. In order to avoid interference, do not turn on other wireless devices at the same time.
- The docking system will automatically go into standby mode after 3 minutes to save battery power.

## Select a Cradle for your iPod

 
The following table shows cradle names (on the back of the cradle) and iPod/iPone models.

<b>Cradle Name</b>	<b>iPod Model</b>
iPod touch	iPod touch iPod 4G (color display) iPod 4G iPod 3G iPod 1G+2G iPod mini
Nano 3G Nano 4G	iPod nano 1G iPod nano 2G (aluminum) iPod nano 3G (video)
Video 60G/80G & Classic 160G	iPod classic iPod 5G (video)
3.5mm Audio Cable	iPod shuffle 1G iPod shuffle 2G



# Play Auxiliary Audio Sources

1. Make sure you have removed any iPod from the charging dock.
2. Use the 1/8 inch (3.5mm) audio cable to connect your MP3 or other auxiliary audio source with the **AUX JACK** at the rear of the charging dock.
3. Adjust the controls on your connected device to play.

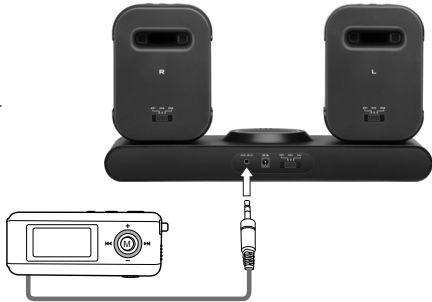

# Specifications

Power Supply .....	AC 100~240V, 50Hz~60Hz
Full Range Speaker .....	2.75"
Wireless Working Distance .....	up to 130 feet (40m)
Output Power .....	2W x 2, 4W x 2 peak RMS
Frequency Response .....	120Hz~18kHz
S/N Ratio.....	70 dB
Impedance.....	4 Ohm
AC Adapter.....	9V, 1.5A
Audio Cable .....	1/8 in (3.5mm)
Dimensions (WHD).....	(13.4x 5.3x 6.9 in)
.....	340x 134x 176 mm

Specifications are subject to change and improvement without notice.  
Actual product may vary from the images found in this document.



# Important Safety Informations


**Read and Retain Instructions** — Safety and operating instructions should be read prior to use. The safety and operating instructions should be retained for future reference.

**Heed Warnings** — Follow all warnings on the device and in the instructions.

**Cleaning** — Unplug this device from the wall outlet before cleaning. Clean only as recommended by the manufacturer. Clean by wiping with a cloth slightly dampened with water. Avoid getting water inside the device. Do not use liquid or aerosol cleaners.

**Water and Moisture** — Do not use this device near water (for example, near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool).

**Accessories** — Do not place device on an unstable cart, stand, tripod, bracket, or table. The device may fall, causing injury to a child or adult, and damage the device. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the device. Follow the manufacturer's mounting instructions, and use a recommended mounting accessory.





**Ventilation** — Slots and openings in the cabinet provide ventilation, ensure reliable operation, and protect from overheating. Do not block or cover these openings, and do not place the device on a bed, sofa, rug, or other similar surface. Do not place the device in a built-in installation such as a bookcase or rack unless it provides proper ventilation as specified by the manufacturer.

**Heat** — The device should be situated away from heat sources such as radiators, heat registers, stoves, or other devices that produce heat.

**Power Sources** — Use this device with the power source indicated on its marking label. If you are not sure of your home's power type, consult your appliance dealer or local power company.

**Grounding or Polarization** — This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If you still are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.





**Power-Cord Protection** — Route power-supply cords so they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to cords at plugs, outlets, and the point where they exit from the device.



**Non-use Periods** — The device's power cord should be unplugged from the outlet when it is to be left unused for a long period of time.

**Overloading** — Do not overload wall outlets, extension cords, or other outlets. This can result in fire or electric shock.

**Objects and Liquids** — Never spill liquids or push objects of any kind into this device through openings, as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock.

**Carts and Stands** — If the device is used with a cart or stand, the cart or stand should be a type recommended by the manufacturer. A device and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces cause the device and cart combination to overturn.

**Damage Requiring Service** — Refer servicing to qualified service personnel under these conditions:

- 
- \* When the power-supply cord or plug is damaged.
  - \* Liquid was spilled or objects fell in the device.
  - \* If the device has been exposed to rain or water.
  - \* If the device does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the device to normal operation.
  - \* If the device has been dropped or damaged.
  - \* When there a distinct change in performance.
- 

**Servicing** — Do not attempt to service this device yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**Replacement Parts** — When replacement parts are needed, use only parts specified by the manufacturer or parts with the same characteristics as the original part. Substitutions may result in fire or electric shock.

**Safety Check** — Upon completion of service or repairs, ask the

service technician to perform safety checks to determine if the device is in operating condition.

**Lightning** — For added protection during a lightning storm, or when the device is unused for long periods of time, unplug it from the wall outlet. This prevents damage due to lightning and power surges.

**Attachments** — Do not use attachments not recommended by the product manufacturer as they may cause hazards.


**Wall or Ceiling Mounting** — The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

## SAVE THESE INSTRUCTIONS



**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

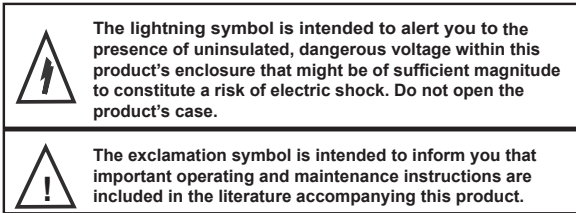

## Recycle Rechargeable Batteries



Recycle your old rechargeable batteries at one of the many collection sites in the U.S. and Canada. To find the site nearest you, visit [www.call2recycle.org](http://www.call2recycle.org) or call toll-free 1-877-2-RECYCLE.

# FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product	Wireless Speaker System for iPod
Model	40-285
Responsible Party	Ignition L.P. 3102 Maple Ave. Suite 450 Dallas, TX 75201
Phone	866-315-0426

# Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without

charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at:

Ignition L.P., 3102 Maple Ave. Suite 450, Dallas, TX 75201

02/09

#### FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

For product support, call  
**1-866-315-0426**

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. This product is not designed, manufactured, sponsored, or endorsed by Apple Computer, Inc.



Protect the environment by recycling used electronics. Go to [E-CyclingCentral.com](http://E-CyclingCentral.com) to find an electronic recycling center near you.

© 2009. Ignition L.P. All rights reserved.  
Gigaware is a trademark used by Ignition L.P.

Printed 08A09  
in China 40-285