 




Wireless Portable Bluetooth Speaker

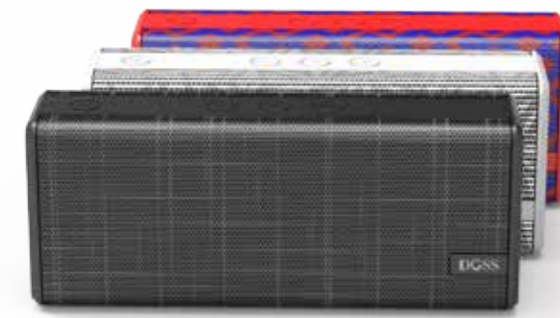

Mode No.: SoundBox Color
User Manual

 
Introduction

Thank you for purchasing the DOSS SoundBox Color Portable Bluetooth Speaker with Bluetooth and Hands free function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

Package content

- One portable Bluetooth speaker
- USB charging cable
- 3.5mm auxiliary cable
- User manual

Product overview

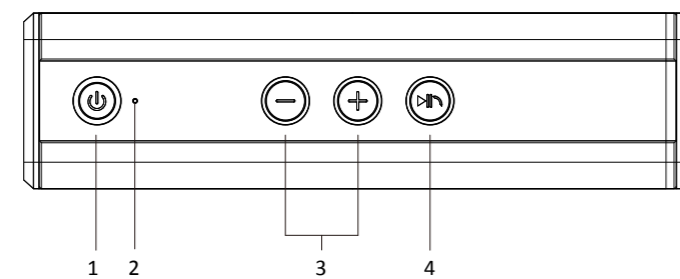


1. **Power button:** Long press to turn the device on and off.
2. Mode indicator

3. **Volume/Track control:**
 - + : Long press: Skip next Short press: Volume up.
 - : Long press: Skip previous Short press: Volume down.

4. Play/Pause and handset button

 - In Bluetooth mode, press to answer or end a call. Press for several seconds to reject a call.
- In Bluetooth mode, press to play/pause your tune. Press for 3 seconds to disconnect with your device.
- In Line in mode press to play/pause your tune

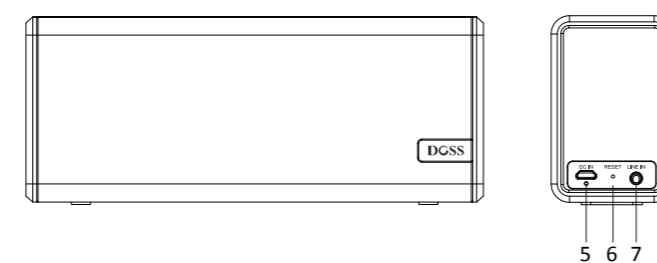

5. Charging port

6. Reset port

7. Line in port

Status indicators

Mode indicator	Quick flashing blue	Indicates that the speaker has entered into the pairing mode
	Slow flashing blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
Battery status indicator	Steady red	Battery is charging
	Steady green	Battery is fully charged



Scan this or search "DOSS fans" on Facebook to join our group, share your experience and find more surprises!



Wonders Technology Co., Ltd
Email: Support@dossav.com
Website: www.dossaudio.com

Follow us on Facebook:
<https://www.facebook.com/dossav>

Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer or device with a micro USB port.
- Make sure that the speaker is fully charged before using it for the first time.
- Speaker's battery will have to be charged at least 8-10 hours prior to first use. Moving forward, the battery will only take 3 hours to recharge.
- While charging, the LED glows red. When the battery has reached full capacity, the LED will change to green.
- To turn on the speaker, press and hold the power button for several seconds. Press and hold the power button once more to turn off the device.

Pairing the wireless speaker with your smart device

1. Place your smart device and wireless speaker no more than 3 feet away from each other.
2. Press the power button located on the top of the speaker for several seconds to turn it on.
3. Set your smart device to "discover" the wireless speaker. Upon powering on, a tone will be heard along with a flashing blue LED light also accompanied by a prompt notification that the speaker has entered into pairing mode.
4. Enable Bluetooth on your device and choose **DOSS Soundbox Color** from the list.
5. If pairing is successful, the LED will change to a slow flashing blue and your phone will confirm that the connection has been established. If the pairing process fails after 60 seconds, please repeat the above steps 1 through 5.

Answering and ending a call using your speaker or mobile phone

1. When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
2. Briefly press the button to pick up, long press to reject. You may also press the answer button on your smart phone to take the call using the speaker.

3. Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
4. To end a call, tap the button once again. You may also end the call directly via your cell phone.
5. If a call was received while listening to music, playback will resume automatically once the call has ended.

Using it with your Amazon Echo Dot

You can connect the Amazon Echo Dot with the speaker via 3.5mm Aux-in cable or via Bluetooth. Here is how to connect via Bluetooth:

1. Download the Amazon Alexa App, follow the standard setup procedure to get the Echo dot connected to your home Wi-Fi.
2. Switch the CloudFox speaker to Bluetooth mode, you can press the 'play/pause' button for 3 seconds to keep it in pairing status.
3. Run the Alexa app, tap 'Continue' and Select Bluetooth.
4. The DOSS Soundbox Color speaker should appear in the list of Bluetooth devices. If not, press the "Play/Pause" button for 3 seconds and try again. If you see our device listed, please tap it to complete the pairing process.

NOTE: Your voice command cannot turn on/off the DOSS SoundBox Color no matter you are connected via Bluetooth or Aux-in cable. It can only transfer sound signals.

Product specifications

Product type: Wireless Portable Bluetooth Speaker
Output power: 6W x 2
Driver unit: 2 inch speaker x 2 + 2.6 inch passive radiator
Frequency response: 80Hz-20KHz
Signal to noise ratio: >75dB
Unit weight: 1.06lb
Unit dimension: 7.4 x 3 x 1.9inch
Warranty: One-year limited

Power

- Battery type: Li-ion 3.7V, 2200mAh
- Input: 5V \leq 1A
- Battery charge up time: 3 hours approximately (when fully depleted).
- Battery playback time: up 12 hours (duration time may vary depending on the volume level used and usage patterns).

Wireless/Networking

- Bluetooth specification: V4.0+EDR, backwards compatible with previous Bluetooth versions
- Profiles supported
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 meters / 33 ft

Troubleshooting:

	Problem	Solution
Bluetooth	Cannot Pair with Bluetooth devices	Press Play/Pause button for 3 seconds, then have a try to pair it again.
	Cannot play music after pairing with the laptop	Please select 'DOSS SoundBox Color' as the default playback device.
	The song cuts off during playback	Please check if the Bluetooth distance is more than 33 feet or the battery level is low.
	There is noise during playback	Could be caused by the interference of charging. Try changing the location of the device and do not charge it during playback.
	Laptop prompts to install driver	This driver is not special for SoundBox Color, it's for your laptop Bluetooth function, please contact the computer company or windows
others	Not paired with Bluetooth transmitter	Please press Play/ Pause button for 3 seconds or contact with the transmitter's customer service for help
	Cannot turn off the speaker	Use the needle or wire to poke the reset port DOSS SoundBox Color
	Customer Service Email	support@dossav.com

Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the Bluetooth speaker by yourself.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the Bluetooth speaker to excessive heat or to direct sunlight for long periods of time.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the Bluetooth speaker.
- Do NOT use near a microwave oven or wireless LAN products.

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.