

IMPORTANT SAFETY INSTRUCTIONS
For the safety of you and Bluetooth® speaker, follow the precautions below:

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the unit in fire as it will result in an explosion.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall down onto the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the unit as it may get damaged if you are not professional.

FCC statements:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Box contents

Bluetooth speaker, Charging base, User manual, USB charging cable, 3.5 mm stereo audio cable

Product Feature

A. Microphone, B. Vol-, C. Handsfree, D. Vol+, E. LED indicator, F. Play/Pause, G. Switch on/off, H. Aux in jack, I. Charging LED indicator, J. Charging plate, K. Charging mode switch, L. Micro USB port

CHARGING THE SPEAKER

1. Turn the switch to INPUT, then put the speaker on the power station and connect the USB cable to a computer or a 5V/1A power adaptor (power adaptor not included in packaging), the LED indicator (power adaptor not included in packaging), the LED indicator flash red and blue, after fully charged, LED will go to off.

If charge speaker by power station only, please switch to OUTPUT, the LED indicator flash red and green, after fully charged, LED flash green.

If charge the power station only, switch to INPUT and LED flash blue, after fully charged, LED will go to off.

2. Using the power station as battery bank, connect USB cable extender and switch to OUTPUT, LED flash green.

CONNECTION AND USE THE SPEAKER

Bluetooth Pairing

- Switch on speaker, blue LED display solid blue for seconds then start flashing. Turn on the Bluetooth device on your phone or tablet, search "DS-1168" and pair. When successfully paired, LED will display solid blue light. If smart phone need password, please enter 0000.
- Adjust the volume by pressing the Volume +/- buttons on the top of speaker and on your bluetooth device. Press the Play/Pause button to play or pause the tune. Press and hold the Play/Pause button to terminate bluetooth Connection.
- Handsfree function, when a call coming, press handsfree button to answer the phone call. After the call ends, the speaker will continue playing the interrupted music.
- Power off, when not in use, please switch off speaker to save battery.

Audio input using 3.5mm cable

- Connect a 3.5mm audio cable to the 3.5mm Audio input on the speaker and on an external audio output such as MP3 players.
- Speaker will switch to Line-in mode automatically.
- Press the Vol-/+ button on speaker or native controls on the connected MP3 player to control volume.
- Press Play/Pause on the audio player to play/pause the tune.

Using the Bluetooth® microphone

Answering and ending a call using your mobile phone
When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
Briefly press the Hands-free button to pick up. You may also press the answer button on your cellular phone to take the call using the speaker.
Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
To end a call, tap the Hands-free button once again.
Likewise, you may also end the call directly using the command on your cell phone.
When listening to music using your mobile phone, playback will resume automatically once the call has ended.

TECHNICAL SPECIFICATION
Speaker battery: 3.7V 500mAh Li-ion battery
Charging base battery: 3.7V 1020mAh Li-ion battery
Charging base input: 5V 1A
Speaker size: 2" (5 cm)
Output power (speaker): 1.5W RMS
Net weight: 348 g

TROUBLESHOOTING

Symptom	Possible problem	Solution
Cannot pair successfully	Speaker not power on or your bluetooth device paired with other device, or interference from other bluetooth device	Check whether the speaker is in power on and searching mode. Check whether there are too many Bluetooth receivers around your Bluetooth device. Turnoff them to avoid any interference and pair again.

Cannot play properly, the music is intermittent	Bluetooth device and speaker distance too much far away.	Check whether the distance between speaker and your Bluetooth device is out of its working distance, or whether there are some obstacles block the streaming between speaker and Bluetooth device.
Sound distorted	Sound source is distorted.	Check the volume setting on both speaker and your Bluetooth device and adjust the volume to a proper level.
Speaker does not power up	Low battery	Ensure the Power switch at the bottom of the speaker is switched on. Ensure the speaker is fully charged or you have connected the speaker to power source

DISCLAIMER
Updates to hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All item described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Swinton Avenue Trading, Inc.
Limited One (1) Year Product Warranty
United States and Canada

This Limited Warranty covers the original purchase of new product used for normal commercial, personal or household use. Swinton Avenue Trading, Inc. (SAT) warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted), for ONE (1) YEAR from the original date of purchase, except as provided below. If a defect exists, at its option SAT, will repair or replace with a comparable product, free of charge, any product which fails under normal use as a result of such defect. This warranty does not apply to: (i) cosmetic damage, such as scratches, nicks and dents or (ii) damage caused by water, fire, accident, negligence, abuse, misuse, improper cleaning or other circumstances not directly attributable to manufacturing defects.

Proof of purchase is required in the form of a receipt (a copy or a original) to validate this Limited Warranty. If you do not have a copy of your store receipt and paid using a check or a major credit card, a copy can be obtained from Office Depot's receipt retrieval department at 1-800-721-6592.

If SAT chooses to provide a refund for such product, it will be fulfilled in the form of an Office Depot Merchandise

Card. Claims fulfilled in this manner take approximately ninety (90) days to process.

EXCLUSIONS AND LIMITATIONS

SAT PROVIDES THIS LIMITED WARRANTY IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESS OR IMPLIED. EXPRESSLY EXCLUDED ARE ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. SAT'S SOLE OBLIGATION AND THE USER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT AT SAT'S SOLE DISCRETION AND COST, OF THE PRODUCT OR COMPONENTS.

IN NO EVENT SHALL SAT, ITS AFFILIATES, SUBSIDIARIES OR PARENT COMPANIES BE RESPONSIBLE FOR CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES ARISING OUT OF A CLAIM OF DEFECTIVE PRODUCT EVEN IF SAT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY STATE OR PROVINCE.

THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA.
Return Instructions
Please call 1-877-777-HELP (1-877-777-4357) for warranty service or product support.