



SP58080



Bluetooth®
WIRELESS STEREO SPEAKER


**BLUETOOTH SPEAKER
SP58080**

Thank you for choosing our product. This product was created, according to USA regulation, by our professional team. For best use of your new device we recommend carefully reading the user manual and keeping it for your records.

Specifications

- Model No.: SP58080
- Speaker size : L165*W64*H47mm
- Power by USB cable :DC 3.7 V
- Rechargeable Li-ion battery included
- Battery capacity: 3.7V 500MAH
- Battery life: 4.5Hrs
- Output power: 1.5W X 2 (THD=10%)
- Working distance: < 10 M (Distance differs from different cellphone Bluetooth devices and the environments)

CONTROLS - ILLUSTRATED

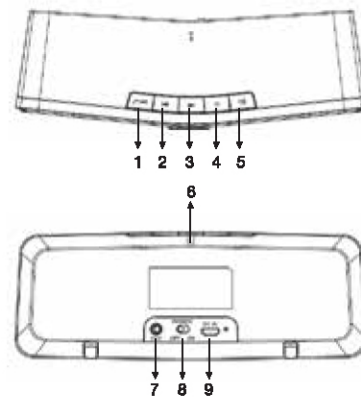

CONTROLS

1. Pause/Play, Hands-free button
2. Previous track
3. Next track
4. Volume Down
5. Volume Up
6. Microphone
7. Aux-In Port
8. Power switch- OFF/ON
9. USB Port

PAIRING YOUR BLUETOOTH® SPEAKER

1. Slide the power switch 'ON' to turn on the speaker. When the speaker is activated in Bluetooth® Pairing Mode, a blue LED will start flashing.
2. With your device powered on, search "HEX-1" on your bluetooth searching list. Proceed to pair your Bluetooth® device with the speaker. (If your bluetooth device asks for password, please enter "0000.")
3. After being paired successfully, you will hear an audible signal. When paired you are able to use this device to play your media of choice.
4. Adjust the volume of your device.
5. Press Pause/Play button on the speaker to control the current track. You can also control your speaker with a Bluetooth® device.
6. Press the Play button during an incoming call to activate 'Hands-Free' calling. The speaker will continue playing your track when the call has completed.
7. When you are finished using your speaker, turn off your device by using the ON/OFF switch.

CAUTION:

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery. It is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your speaker prior to boarding an aircraft. Do not use the speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

Made in China exclusively for
iWave Sicura Media, Inc.
New York NY 10018
support@iwaveaudio.com
www.iwaveaudio.com

LED COLOR INDICATOR

STATUS	INDICATOR
Bluetooth Pairing	Blue Light - Flashing Quickly
Paired	Blue Light - Flashing Slowly
Aux-In Mode	Red Light - Solid
Charging	Red Light (rear) - Solid
Fully Charged	Green Light (rear) - Solid

USING THE 3.5mm AUDIO INPUT

1. Securely fasten one end of the 3.5mm Audio cable into the device. The mode indicator light will glow red.
2. Securely fasten the opposite end into your audio device.
3. Turn speaker ON.
4. Press and hold the Volume buttons to adjust the volume.
5. Control your media by using the native Play/Pause buttons located on the top of your device.

FCC DISCLAIMER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference to radio communications will be avoided if certain precautions are not taken, such as: reorienting or relocating the receiving antenna; increasing the separation between the equipment and receiver; connecting the equipment into an outlet on a circuit different from that to which the receiver is connected; consulting the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AUTOMOBILE ACCIDENT HAZARD

- Do not leave or store the Bluetooth Wireless Speaker or any of its accessories near or over your automobile's air bag as serious injury may result when an air bag deploys.

FALL HAZARD

- Do not place the Bluetooth Wireless Speaker on high surfaces such as shelves. During music playback the Bluetooth Wireless Speaker may move which could cause the speaker to shift and fall off of the edge.

FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Bluetooth Wireless Speaker to liquid, moisture, humidity, or rain. Do not use the speaker near a bathtub, sink, sauna, pool, or steam room. Exposure of the speaker to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the Bluetooth Wireless Speaker. Such actions could result in electric shock.
- Clean the Bluetooth Wireless Speaker only with a dry cloth.
- Do not expose your Bluetooth Wireless Speaker to extremely high or low temperatures.
- Do not leave your Bluetooth Wireless Speaker in direct sunlight for extended periods of time.
- Do not leave your Bluetooth Wireless Speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

MANUAL WILL FOLD ACCORDIAN STYLE

PLEASE ENSURE MANUAL IS PRINTED DOUBLE-SIDED



IMAGES ARE FOR REFERENCE ONLY!