

Outdoor Waterproof Bluetooth Speaker

I. Introduction

Thank you for purchase DOSS Traveler Portable Wireless Bluetooth Speaker with Bluetooth and Waterproof function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

II. Package content

- Outdoor waterproof speaker x 1
- USB charging cable x 1
- Ø3.5mm auxiliary cable x 1
- Handle belt x 2
- User manual x 1

III. Product overview

1. **Power button:** Press 3 seconds to turn the device on or off.

2. **Indicator:** Different lights indicate different modes.

3. **Mode switch:** Short press to toggle play mode among Bluetooth, TF Card and Aux-in connection.

4. **Light mode:** Short press to switch four different lights. Low brightness, Medium brightness, High brightness, SOS(emergency signal).

5. **Play/Pause:** In Bluetooth mode, press to play/pause your tune. Press for 3 seconds to disconnect with your device.

• In Bluetooth mode, press to answer or end a call. Press for 3 seconds to reject a call.

• In TF mode, press to play/pause your tune.

6. **Volume/Track control:**

- Short press to decrease the volume. Long press to skip previous song.
- Short press to increase the volume. Long press to skip next song.

7. **Auxiliary Ø3.5mm jack:** Use it for cabled playback with compatible devices.

8. **LED charging indicator:**

- Charging: Steady Red.
- Fully charged: Steady Green.

9. **Charging port:** Plug the supplied USB cable into this port to recharge the built-in battery.

10. **Reset mode:** Reset speaker when it can't work.

11. **TF card:** Use it for TF card (with music) playback.

Status indicators

Center indicator/Control button		
Center indicator/Control button	Flashing blue	Indicates that the speaker has entered into the pairing mode and it is ready to be the first time
	Steady blue	Indicates that the device is successfully paired
	Steady red	Indicates that the device has switched to the auxiliary input mode
Center indicator/Control button	Steady Green	Indicates that the device has switched to the TF mode
	Steady red	Battery is charging
Battery status indicator	Steady red	Battery is charging
	Steady green	Battery is fully charged

Scan this or search 'DOSS fans' on Facebook to join our group, share your experience and find more surprises!

Wonders Technology Co.,Ltd
Email: Support@dossav.com
Follow us on Facebook:
<https://www.facebook.com/dossav>

IV. Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer or device with a micro USB port.
- Make sure that the speaker is fully charged before using it for the first time.
- The portable speaker battery has to be initially charged for at least 12 hours. Thereafter, the battery will take from 2 to 3 hours to recharge.
- While charging, the LED glows red. When the battery has reached full capacity, the LED will change to green.
- To turn on the speaker, press and hold the power button for 3 seconds. Press and hold the power button once more to turn off the device.

V. Pairing the wireless speaker with your smart device

1. Place your smart device and wireless speaker no more than one meter away from each other.
2. Press the power button located on the back of the speaker for several seconds to turn it on.
3. Set your smart device to "discover" the wireless speaker. Upon powering on, a tone will be heard, the blue LED will start flashing, accompanied by a prompt notifying that the speaker has entered into the pairing mode.
4. Enabled Bluetooth on your device and choose **DOSS CloudFox Sport** from the list.
5. If pairing is successful, the LED will change to steady blue and your phone will confirm that the connection has been established. If the pairing process fails after 60 seconds, please repeat steps 1 through 5 described above.

VI. Answering and ending a call using your speaker or mobile phone

1. When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
2. Briefly press the Handset button to pick up, long press to reject. You may also press the answer button on your phone to take the call using the speaker.

3. Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
4. To end a call, tap the Handset button once again. Likewise, you may also end the call directly using the command on your cell phone.
5. When listening to music using your smart phone, playback will resume automatically once the call has ended.

VII. Features and prople

1. Waterproof, Shockproof, Dustproof Rated IP67 for 100% protection against Water and Dust. Rubberized rugged exterior for ultimate impact resistance. Water-resistant HD loudspeaker, and splash-proof surface to increase mobility and usability for everyday indoor or outdoor use such as shower, beach, pool, boat, bathroom, car, office, and much more!
2. Modes: high brightness; medium brightness; low brightness; SOS (emergency signal)
3. Quick tips about how to use handle belts:
 - Undo the two nuts counter-clockwise on the strap.
 - Remove the nuts from the straps, then put the strap through the strap buckle.
 - Tighten the screw clockwise on the strap.

10.6 in

65.0 in

Using it with your Amazon Echo Dot

You can connect the Amazon Echo Dot with the speaker via 3.5mm Aux-in cable or Bluetooth, here is how to set up latter option

1. Download the Amazon Alexa App, follow the standard setup procedure to get the Echo dot connected to your home Wi-Fi.

2. Switch the CloudFox speaker to Bluetooth mode, you can press the 'play/pause' button for 3 seconds to keep it in pairing status.
3. Run the Alexa app, tap "Continue" and Select Bluetooth .
4. The DOSS CloudFox speaker should appear in the list of Bluetooth devices. If no that, press the 'play/pause' button for 3 seconds and try again. When it does, tap it to complete the pairing process.
5. Connect Echo Dot to DOSS CloudFox using an Aux-in cable.

Note: Whatever you connect it via Bluetooth or Aux-in cable, your voice command cannot turn on/off the DOSS CloudFox, that can only transfer sound signal.

VII. Product specifications

Product type: Outdoor Waterproof Bluetooth Speaker

Output power: 10W x 2

Driver unit: 1.7 inch speaker x 2 + 2.6 inch passive radiator

Frequency response: 65Hz-18kHz

Signal to noise ratio: ≥ 50dB

Unit weight: 600 g

Unit dimension: 8.50 x 4.45 x 2.24 inch

Warranty: One-year limited

VIII. Power

- Battery type: Li-ion 7.4V, 2200mAh
- Input 5V = 2A
- Battery charge up time: 3 hours approximately (when fully depleted).
- Battery playback time: up 12 hours (duration time may vary depending on the volume level used and usage patterns).

IX. Wireless/Networking

- Bluetooth specification: V4.0+EDR, backwards compatible with previous Bluetooth versions
- Profiles supported
- A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 meters / 33 ft

X. Warning

- Do NOT disassemble, repair or modify the Bluetooth speaker by yourself.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT place heavy objects on top of the Bluetooth speaker.
- Do NOT use near a microwave oven or wireless LAN products.

Trouble Shooting:

	Problem	Solution
Bluetooth	Cannot Pair with Bluetooth devices	Press Play/Pause button for 3 seconds, then have a try to pair it again.
	Cannot play music after pairing	Please select 'DOSS CloudFox Sport' as the default playback device.
	The song cuts off during playback	Please check if the Bluetooth distance is more than 33 feet or the battery level is low.
Laptop prompts to install driver	There is noise during playback	Maybe caused by the interference of charging, try to put it in another place and do not charge it during playback
	Not paired with transmitter	This driver is not special for CloudFox Sport, it's for your laptop Bluetooth function, please contact the computer company or windows
TF Card	The speaker do not play when the card is inserted, and jump directly back to Bluetooth mode.	Please press Play/ Pause button for 3 seconds or contact with the transmitter's customer service for help
	The song cuts off during playback.	Check whether the card format is FAT or FAT32. If not, format it to FAT or FAT32. Check the song format. The speaker only supports MP3, WAV, WMA.
other	All the lights are lit and can not be turned off	There may be a problem with the song's file, try deleting all the songs in the same file.
	Customer Service Email	Use the needle or wire to poke the reset button inside Aux-in support@dossav.com

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.