

正面

**DOSS**

Bluetooth  
Stereo Wireless Bluetooth Speaker

HANDHELD LISTENING

Model No.: DOSS Genie  
User Manual


### 1. Introduction

Thank you for purchasing the DOSS Genie, the portable Bluetooth speaker. We advise you to read, follow and keep the following instructions in order to be able to correctly set up the speaker and enjoy all of its features to the fullest.

### 2. Packing content

- 1 x DOSS Genie
- 1 x Micro USB charging cable
- 1 x 3.5mm auxiliary cable
- 1 x User manual

### 3. Product overview

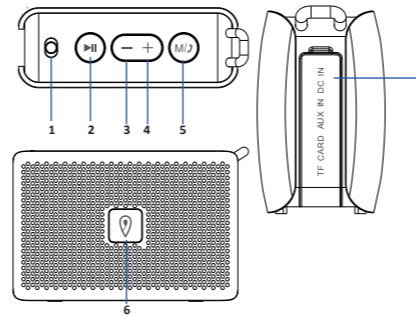

### 4. Buttons and controls

1	Turn On/Off button
2	Play/Pause button
3	- Volume down
4	+ Volume up
5	Mode button
6	General indicator
7	Charging indicator

### 5. Multi-function Buttons

You want to	How to do
Turn On	Push to green
Turn Off	Push to red
Disconnect the device	Press and hold Play/Pause
Reconnect with last device	Press Play/Pause
Play	Press Play/Pause
Pause	Press Play/Pause
Volume up	Press "+"
Volume down	Press "-"
Skip to the next track	Press and hold "+"
Go to the previous track	Press and hold "-"
Switch modes	Press and hold the "MODE" button
Answer a call	Press the "MODE" button
Reject a call	Press and hold the "MODE" button
End a call	Press the "MODE" button

### 6. Indicators

Indicator view	Indicator state	System state
[Light]	Flashing blue	Bluetooth pairing
	Solid blue	Bluetooth paired
	Solid red	Audio in mode
	Solid green	Micro SD card mode
[Light]	Solid white	USB disk mode
	Solid red	Charging
	Off	Fully charged

### 7. How to use your speaker

- \* Push the power button to green to turn on the speaker.
- \* Enable the Bluetooth on your device.
- \* Select the "DOSS Genie" on your Bluetooth list.
- \* Once paired, the front indicator will turn to solid blue and you can see connected status on your device.

### 8 Having problems connecting?

- Make sure that your device is within 1 meter from the speaker.
- Clear the Bluetooth pairing list on your device.
- Master reset your device.
- Try the pairing steps again.
- Still has a problem? Contact DOSS customer service at support@dossav.com for assistance.

反面

### 9. Connect your device with the speaker via audio in cable

- When using the audio input mode, control audio playback via the connected device.
- When auxiliary cable is plugged, play mode will automatically switch to AUDIO IN mode.

### 10. Play music from a Micro SD card

**Card capacity:** should be 32G or below, if your micro SD card is larger than 32G, please format it to FAT32 or FAT.

**Support files:** mp3, flac, wav.

**Play in order:** music will play in the download/copy order

### 11. Specification

Output: 5W

Input: 5V 1A

Battery: Li-ion 3.7 V 500mAh

Unit dimension: inches

Play time: Up to 8 hours (varies by volume level and content)

Warranty: One-year limited

- The marking information is located at the bottom of apparatus No naked flame sources, such as lighted candles, should be placed on the apparatus Attention should be drawn to the environmental aspects of battery disposal The use of apparatus in moderate climates CAUTION Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

### 12. Warning

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the speaker.
- Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the speaker to excessive heat or direct sunlight for prolonged periods of time.
- Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the speaker.
- Do NOT use the speaker near a microwave oven or wireless LAN products.

### 13. FCC Statement

This device complies with part 15 of the FCC rules operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on. The user is encouraged to try to correct the interference by one of following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be Co-located or operating in conjunction with any other antenna or transmitter.

This device complies with FCC's radiation exposure limits set forth for an uncontrolled environment.

**DOSS**

For updates, promotions, and experience sharing, join our customer community.

f @dossav  
@dossfans

@dossdirect

www.dossaudio.com

support@dossav.com

1-833-275-3677 Mon-Fri 9AM-5PM PDT (USA)