

PAGE 1

Spray Away's Manual

Thank you for purchasing the Havahart Spray Away® Hydro Repellent Sprinkler with Remote

(CONTENTS)


Woodstream® Corporation
69 North Locust Street
Lititz, PA 17543
United States
www.Havahart.com

If you encounter any problems while assembling your Spray Away, please refer to the Troubleshooting section of this manual or call us at 1.855.5.HAVAHART. We're also available for live chat online at www.havahart.com.

Cautionary Reminders

- Intended to operate with typical household water pressure—between 30 and 80 psi.
- When pushing the stake into the ground, use the step-in-stake footstep. **DO NOT** push down or apply weight on the unit.
- To prevent damage from freezing water, take Spray Away™ inside when the temperature drops below 32°F.
- Dust, dirt or hard water can limit sensitivity – keep **infrared sensor** clean by wiping it gently with a damp cloth.
- Before disconnecting hose from unit, turn water off and activate unit with hand to drain hose.
- A maximum sensitivity level is more prone to have repeated/erroneous sprays.
- To minimize false triggers, avoid pointing Spray Away at moving water, windy areas and moving vehicles.
- When the **mode dial** is set to **SPRINKLER**, Spray Away immediately starts to spray water – be sure to stand behind Spray Away when setting to this mode.

DO NOT PUSH DOWN ON UNIT!!

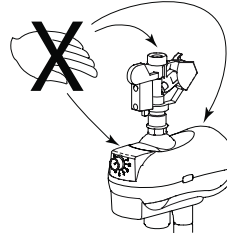

MAY FRIGHTEN BIRDS!!



WARNING: Changes or modifications to this device not expressly approved by Woodstream Corporation could void the user's authority to operate the equipment.

“NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.”*

This Device complies with part 15 of the FCC rules. Operation is subject to the following two conditions. (1) This Device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

PAGE 3

How it Works

Havahart Spray Away® Hydro not only provides an innovative and humane way to keep animals out of your yard, but also it conveniently doubles as an oscillating irrigation sprinkler, so you can use it to water the surrounding vegetation. Simply select your mode, and use the provided **remote control** to communicate with your Spray Away from up to 100 feet away.

ON MODE: When set to ON, Spray Away Hydro's infrared sensor goes to work to seek out animal intruders that cross its path. When an animal is detected, Spray Away deploys a burst of water that, combined with the unexpected noise and motion of the sprinkler, creates a safe and effective animal deterrent. Simply select your ideal sensitivity with the **remote control**, and allow Spray Away to do the rest.

If you wish to water your lawn with Spray Away in ON mode, simply select your desired amount of time on your **remote control**: 15, 30, or 60 minutes. If you wish to stop the sprinkler before time is up, press **STOP**, and your Spray Away will go back to detecting animal activity.

SPRINKLER MODE: When set to SPRINKLER, Spray Away will begin watering your lawn immediately, and continue watering until you select a timer setting, or **STOP** on your **remote control**. In this mode, Spray Away will not detect animals.

OFF MODE: In this mode, Spray Away Hydro is off, and will not respond to the remote. You must select one of the other two modes in order to effectively communicate with Spray Away via the **remote control**.

PAGE 4

Components


Missing something? Call us at 1.855.5.HAVAHAART

(DIAGRAM WITH #S THAT CORRESPOND TO LIST BELOW)


(NEED UPDATED DIAGRAM)

1. Sprinkler Head
2. Function Knob
3. Unit Body
4. Hose Connection
5. Gasket
6. Battery Case
7. Battery Cover
8. Step-in-Stake
9. Indicator Light
10. Adjustable Sensor Eye
11. Infrared Sensor
12. Receivers
13. Remote Control
14. Wrench
15. Owner's Manual


What you will need:

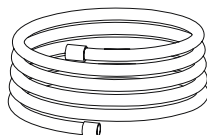

Garden Hose

 

Access to Faucet / Tap

 

6 AA Batteries

PAGE 5

MODE GUIDE

(DIAGRAM OF BACK OF UNIT WITH #S THAT CORRESPOND TO LIST BELOW)
(NEED DIAGRAM)

1. **SPRINKLER Mode:** Spray Away immediately and continuously sprays water. You may choose to STOP the sprinkler, or set a 15, 30, or 60-minute timer with your **remote control**, after which time the sprinkler will automatically stop. Spray Away does not detect movement in this mode.
2. **ON Mode:** Spray Away acts as a motion-activated sprinkler, and also responds to remote sprinkler commands.
 - To use as a motion-activated sprinkler, choose your ideal sensitivity based upon the charts on page (#). Spray Away will always remember your most recently selected sensitivity, unless you replace the batteries, in which case the sensitivity is automatically set to 5.
 - To use as a sprinkler, select the amount of time you wish for Spray Away to continuously spray (15, 30 or 60 minutes). Stop the sprinkler by pressing STOP or selecting a sensitivity, and Spray Away will go back to detecting and repelling animals.
3. **OFF Mode:** Spray Away is off and does not respond to the **remote control**.

PAGE 6

REMOTE GUIDE

(DIAGRAM OF REMOTE WITH #S THAT CORRESPOND TO LIST BELOW)
(NEED DIAGRAM)

(SPRINKLER)

1. STOP: Stops the sprinkler from continuously spraying.
2. (mins): Commands Spray Away to continuously spray for 15, 30 or 60 minutes, unless interrupted by another remote command.

(SENSITIVITY)


3. ON/OFF: Turns the infrared sensor on or off, only for use in ON mode.
4. Sensitivity: Communicates proper sensitivity level to Spray Away. See chart on page (#). Only for use in ON mode.
5. LED light: Illuminates when a signal is sent to the unit. If you do not see illumination when a button is pressed, replace the batteries.

*Note: The **remote control** best communicates with Spray Away at a distance of 0-90 feet. When the unit successfully receives a signal from the remote, the **indicator light** will blink for one second to acknowledge the signal. If the **indicator light** does not blink when you press a button on your remote, try communicating closer to the unit. If that does not work, check the batteries of your unit and of the **remote control**.*

PAGE 7

ASSEMBLY GUIDE

1. Attach Sprinkler Head
 - Attach **sprinkler head** lightly by hand to the top of **unit body**.
 - Fully tighten **sprinkler head** by turning clockwise with the provided **plastic wrench**.
- Note: Using tools other than the provided wrench will damage the unit and result in leaking and malfunction.*

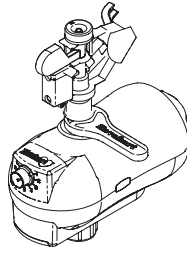

2. Install Batteries into Remote Control first, and then Unit Body

- **Remote Control:**


- Insert 2 AA batteries into **remote control first**.
- To test, press any button. Remote **LED light** should illuminate as the button is pressed. If **LED light** does not illuminate, change your batteries.

(NEED DIAGRAM)

- **Unit Body:**

- Be sure the **function knob** is set to **OFF**
- Insert 4 AA batteries into battery case.
- If **indicator light** is blinking continuously every 3 seconds, batteries are low.

*Note: Each time new batteries are installed, **sensitivity** is automatically set to a level of 5.*

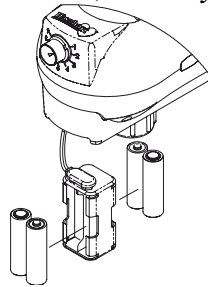


3. Check Spray Away Operation (Dry Test: Do NOT Attach Hose!)

- Turn **function knob** to **ON**, and point **infrared sensor** toward a wall, or something that does not move.
 - Wait 5 seconds, then wave hand in front of **infrared sensor**
- Spray Away will make a “click” or motor sound and **indicator light** will illuminate. Spray Away will reset for 8 seconds between activation and will not detect motion.

Note: If you do not hear sound, try new batteries and try hooking your unit up to water. If the problem persists, call us toll-free at 1.855.5.HAVAHART or live chat at www.havahart.com.


4. Assemble Step-in-Stake and Attach to Unit Body

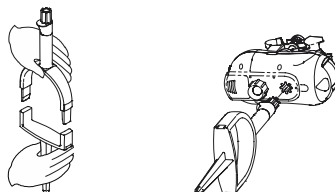

PLACEMENT GUIDE

1. Find the Ideal Location

- Place Spray Away in an area where animals will cross the detection range, or in an area you wish to irrigate.
- Place the unit so that the **unit body** is level to the ground, and the **infrared sensor** is facing the area to be protected.

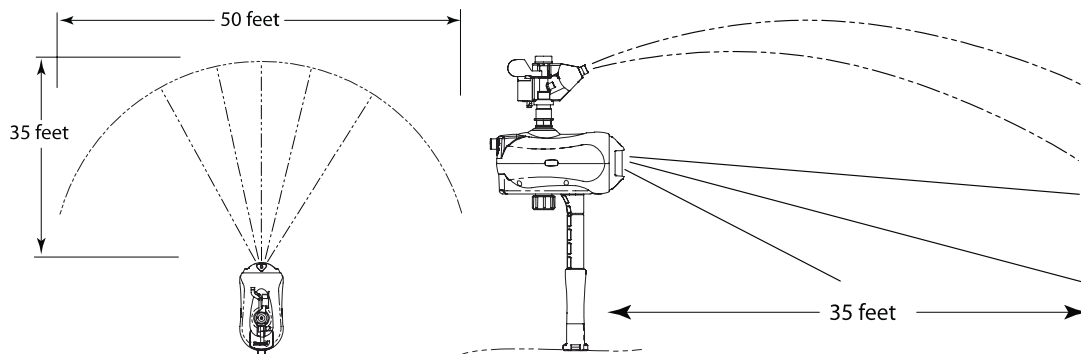

Note: Spray distance varies as it is directly related to your hose water pressure.

2. Stake Spray Away into the Ground

- If ground is too hard or unsuitable for Step-in-Stake, try wetting ground to soften soil, or stake Spray Away in a bucket or flowerpot filled with sand or gravel.
 - Do NOT push on top of **sprinkler head** or **unit body**.

SENSITIVITY GUIDE

1. Setting the Sensitivity

- Using the suggested settings charts below, select your ideal sensitivity with the **remote control**. Because Spray Away detects heat, the sensitivity must be set higher in warmer temperatures. Use the charts below as guidelines.

Note: In warmer temperatures, along with using higher sensitivity settings, the risk of false triggering is higher. The sensitivity should be turned down in the case of false triggers.

Cooler temperatures (55 degrees F)

Animal Size	Distance		
	10 Feet	20 Feet	30 Feet
Small	5	7	8
Medium	3	4	5
Large	1	1	2

Warmer temperatures (90 degrees F)



Animal Size	Distance		
	10 Feet	20 Feet	30 Feet
Small	9	9	9
Medium	8	9	9
Large	4	5	6

2. Adjust Sensor Eye

- Up: if terrain inclines in front of unit, or for sensing large animals
- Down: if terrain descends in front of unit, or for sensing small animals
- Use palm of hand to change position of sensor eye. Do NOT push directly on lens – it will damage the unit.

3. Testing the Sensitivity

- Start outside your desired coverage area and walk across path in front of Spray Away.
 - Spray Away’s **indicator light** will illuminate for 3 seconds when it senses you.
- IMPORTANT NOTE:** Spray Away will reset for 8 seconds between activations and will not detect.
 - Repeat this process until you are satisfied with Spray Away’s coverage area.

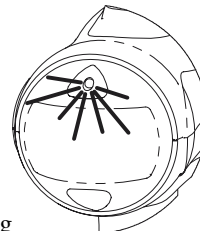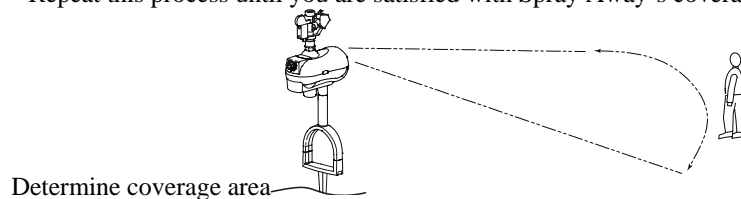

Indicator light flashes when sensing


ADJUSTING WATER COVERAGE

1. Position Stem Tabs to Adjust Sprinkler Travel

Set the sprinkler's spray pattern to direct the water towards the desired protection area.




2. Adjust the Distance of Water Spray

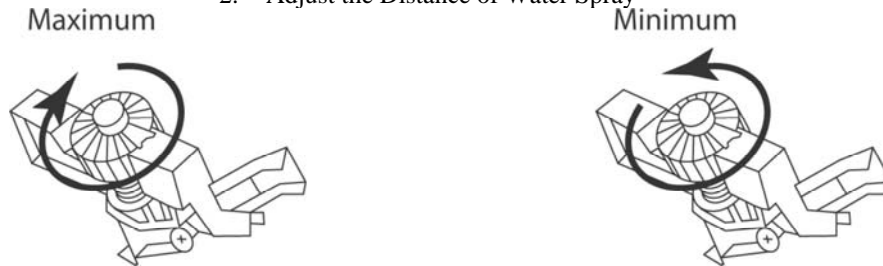


3. Attach Hose

Attach the hose to the **hose connection** at the bottom of the **unit body**.

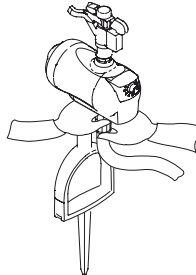


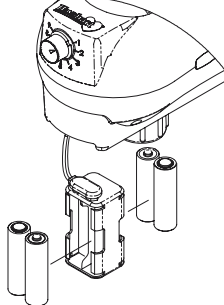
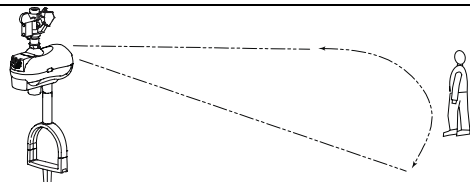
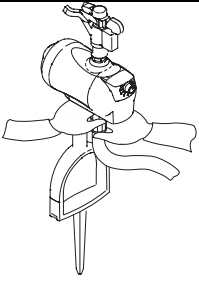
4. Turn unit and water ON and Test from Behind

Stand behind Spray Away and wave your hand in front of the **infrared sensor**. Adjust the arc and distance as needed. If you wish to test in full **SPRINKLER** mode, turn the **mode dial** to **SPRINKLER**, standing behind the unit.

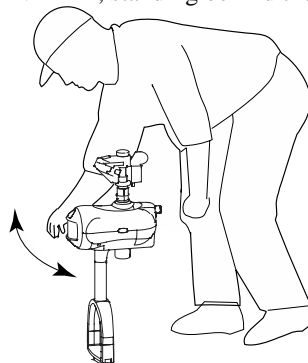

*Note: When turned to **SPRINKLER** mode, Spray Away immediately begins spraying water. Stand behind the unit when changing the setting, and use your **remote control** to stop and start the sprinkler as necessary.*

TROUBLESHOOTING

Problem	Solutions	Illustration
<p>Spray Away does not 'see' animals</p>	<p>Re-aim Spray Away Clean infrared sensor with damp cloth On extremely hot days, infrared sensor may not detect animal's heat. Please refer to the chart on page 7 to determine the sensitivity in warmer temperatures.</p>	
<p>Spray Away is not spraying, or is only lightly spraying</p>	<p>If indicator light is blinking continuously every 3 seconds, change batteries. Water pressure from faucet tap may be too low. Tighten sprinkler head and hose connection.</p>	 <p style="text-align: right; color: red;">NEED NEW DIAGRAM</p>
<p>Unit is activating when no animal is present</p>	<p>Spray Away is sensing movement. Reduce sensitivity and re-test the sensing area as explained in the instructions on page 7.</p>	
<p>Unit is leaking</p>	<p>Check to be sure unit is free from debris at hose connection. Ensure hose thread is not damaged. Make sure hose and sprinkler are tightly secured. Hose pressure could be too high if over 80 psi.</p>	

WARRANTY

This warranty, two (2) years from the purchase of the unit, is extended only to the original purchaser/user of products.

Woodstream Corp. warrants its products to be free from defects in materials and workmanship for the warranty period by the original purchaser/user.

For warranty service, please contact our Customer Service at (855) 5-HAVAHART. Please indicate the nature of the defect.

If Woodstream Corp. determines there may be a defect, Woodstream Corp. will issue a Return Goods Authorization (RGA) number. The defective unit or parts must be returned for warranty inspection using the RGA number, when applicable, as identification within (30) days of return authorization date. DO NOT return products to our factory without our prior consent, as they, as well as C.O.D. shipments will be refused. Woodstream Corp., at its option, shall replace the unit, or replace the defective part(s) and return such unit to you. Woodstream Corp.'s control; or products modified (including, but not limited to modifications through the use of unauthorized parts or attachments) or repaired by anyone other than Woodstream Corp. or its designee.

The foregoing warranty is exclusive and in lieu of all other warranties, express or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose. It shall not extend beyond the duration of the express warranty provided herein, and the remedy for violations of any warranty shall be limited to repair or replacement of the defective product pursuant to the terms contained herein. Woodstream Corp. shall not be liable for any consequential or incidental damages whatsoever. This warranty gives you specific legal rights and you may also have other legal rights that may vary based on location.

Register your product online at:
www.havahart.com/customerservice/product-registration