TFT LCD Monitor High resolution

TFT LCD Monitor High resolution

HL900D/HL901D/HL900A/HL901A

HL900D/HL901D/HL900A/HL901A User's Reference



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, with can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Only shielded interface cable should be used.

 
Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

1. Precautions	2
2. Items	4
3. Setting up the LCD monitor	
Plug & Play	
Warm-up Time	5
4. Adjusting The Monitor	6
How to use the Function Key.	
Main OSD Menu	
PICTURE · · · · · · · · · · · · · · · · · · ·	7
COLOR	7
OSD	7
MISC	
MWE	7
5. Appendix	3
Display Modes	8
15-pin D-Sub Connector	9
DVI-D Connector	9
Power Saver	C
6. Troubleshooting	1



Â

Precautions



Plug the power cord into a properly grounded outlet. There is the risk of electric shock.



Warning : The following information will help you avoid the risk of electric shock, serious injury, and death.

If you hear a noise or smell smoke from the computer or adaptor, unplug the power cord immediately, and call the service center. There is the risk of electric shock or fire.



 
Do not overload an electrical outlet with too many devices. There is the risk of fire.







on : The following information will help you avoid the risk of minor or moderate injury, or damage to the monitor.



Use a proper voltage/current level indicated



Do not clean the LCD with abrasive chemicals. There is the risk of damage to the LCD.



Do not scratch and damage the LCD with sharp objects.



Keep the monitor away from objects and electrical appliances that may generate electromagnetic fields.



Place the monitor on a flat, stable surface. The monitor may fall and there is the risk of damage or injury



Unplug the power cord when the monitor is not in use for a prolonged period of time.



Do not unplug from the outlet by pulling the power cord or when your hands are wet. There is the risk of electric shock and fire.



Do not bend the power cord excessively or place heavy objects on it. Keep children and pets away from the power cord as they may damage the power cord. There is the risk of electric shock and fire.

 
d Do not use a damaged power cord or plug. Make sure the plug fits snugly into the outlet. There is the risk of electric shock or fire.



Do not expose the monitor to the direct sun light.





Keep the monitor away from high temperature, humidity, and dust. • Operating environment =0-35degrees Celsius





Do not block the fan louvers. There is the risk of fire or damage to the monitor.

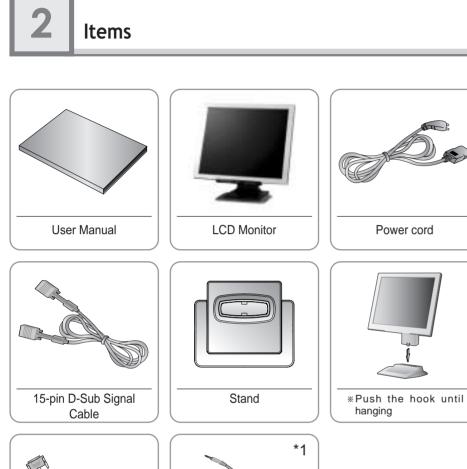

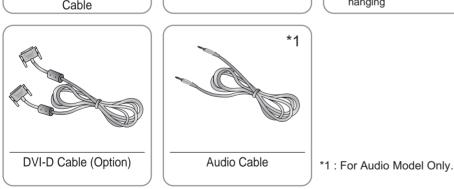




Please make sure the following items are included with your monitor. If any items are missing, contact your dealer.



How to connect the power cord and the several cables to the LCD monitor.

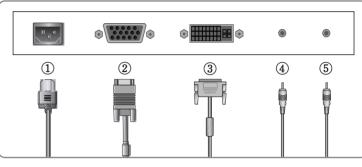

No.	Name	Cable connections	
1	Power	Power Cord	
2	PC	15-pin D-Sub Signal Cable	
3	DVI (Option)	DVI-D Cable ^{*1}	
4	SPK IN	Audio Cable ^{*2}	
5	SPK OUT	External Speaker Cable ^{*2}	
*1 : For DVI Model Only *2 : For Audio Model Only			

1 : For DVI Model Only. *2 : For Audio Model Only.

Plug & Play

The adoption of the new VESA Plug and Play solution eliminates complicated and time consuming setup. It allows you to install your monitor in a Plug and Play compatible system without the usual hassles and confusion. Your PC system can easily identify and configure itself for use with your display. This monitor automatically tells the PC system its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the PC system can automatically configure itself to use the flat panel display.

Warm-up Time

All LCD monitors need time to become thermally stable whenever you turn on the monitor after letting the monitor be turned off for a couple of hours. Therefore, to achieve more accurate adjustments for parameters, allow the LCD monitor to be warmed up for at least 30 minutes before making any screen adjustments.

Adjusting The Monitor

How to use the Function Key.

MENU : 1. First click : The OSD main menu appears. 2. Second click : The OSD menu disappears.

AUTO : When you push Auto button, this will optimize image quality automatically.

MODE : You can change the display mode. (PC \leftrightarrow DIGITAL)*1

MUTE : Sound Mute On/Off button.*2

Power : Power On/Off toggle button.

SEL : Select a command function.

- 1. Move the on-screen highlighted command item to the next one.
 2. Decrease the current option value.
- 1. Move the on-screen highlighted command item to the Previous one.
 2. Increase the current option value.
- VOL : You can adjust the volume.*2
- MWE : You can manually adjust the screen to your environment on the computer. Ex) Internet, Games, Movies...
- *1 : For DVI Model Only. *2 : For Audio Model Only.

Main OSD Menu

When you push the menu button, you can see below main OSD menu.

PICTU	JRE 128	0 X 1 0 2 4	60.	0HZ
	BRIGHTNESS	*	50 50	*
	CONTRAST H POSITION	*	67	* *
\sim	V POSITION	*	88	*
	PHASE CLOCK	*	60 49	*
	AUTO ADJUST	Ň		*
		V	0	1.00

PICTURE

- BRIGHTNESS : Changes the overall light intensity of the images being displayed.
- CONTRAST : Changes the ratio of light intensity between the brightest white and darkest black.
- H POSITION : Moves to the Left/Right.*1
- V POSITION : Moves to the Top/Bottom.^{*1}
- PHASE : When image is not clear, you can use clock/phase menu.*1
- CLOCK : When image is not clear, you can use clock/phase menu.*1
- AUTO ADJUST : You can select "AUTO ADJUST", this will optimize image quality automatically.¹¹
 - *1 : For Analog Mode Only.

COLOR

Color adjustment needs to be only for Analog mode.

- COLOR : There are user, bluish and reddish modes.
 - In case user has to set up "RED", "GREEN", "BLUE" in person, please select user mode.
- RED, GREEN, BLUE : You can adjust red, green and blue values that you want.
- AUTO COLOR : Automatic adjust color(white level) for various input sources white level.

OSD

- OSD H POSI : Moves the OSD menu to the horizontal direction.
- OSD V POSI : Moves the OSD menu to the vertical direction.
- OSD TIMER : Shows the OSD Time displays from 10 to 40 sec.
- TRANSPARENCY : You can adjust OSD Transparency.

MISC

- LANGUAGE : Selects language in OSD menu.
- RECALL : Discards current setting and replaced all parameters with the factory default values.
- INPUT SELECT : You can change the display mode.(Analog ↔ Digital)
- AUDIO : Sound Mute On/Off function.^{*2}
- VOLUME : You can adjust the volume.^{*2}
 - Notice : The first set-up was done when the goods are released from the factory. After finishing the first set-up, please press Auto and optimize the screen.
 - *2 : For Audio Model Only.

MWE

When you press MWE button, you can get into the following picture.

- ENTERTAIN : Movies, Video games
- TEXT : Documents
- INTERNET : Internet
- NORMAL : Normal



Appendix

Display Modes

Mode	Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)	Pixel Clock Frequency(MHz)	Sync Polarity(H/V)
	720 X 400	31.468	70.087	28.322	-/+
VGA		31.468	59.940	25.175	-/-
VGA	640 X 480	35.000	66.670	30.240	-/-
		37.500	75.000	31.500	-/-
			60.300	40.000	+/+
SVGA	800 X 600	48.077	72.188	50.000	+/+
		46.875	75.000	49.500	+/+
		48.363	60.004	65.000	-/-
XGA	1024 X 768	56.476	70.000	75.000	-/-
		60.023	75.029	78.750	+/+
		63.981	60.020	108.000	+,-/+,-
SXGA	1280 X 1024	79.976 *1	75.025 *1	135.000 *1	+/+ *1

 $\ast\,$ The optimal resolution is 1280 $\times\,$ 1024@60Hz

*1 : For Analog Model Only.

15-pin D-Sub Connector

• Input signal : Analog RGB

• 15-pin D-Sub connector


Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	Analog Red Input	6	Analog Red Ground	11	Ground
2	Analog Green Input	7	Analog Green Ground	12	DDC Data
3	Analog Blue Input	8	Analog Blue Ground	13	Horizontal Sync
4	Ground	9	No Connect	14	Vertical Sync
5	DDC Ground	10	Sync Ground	15	DDC Clock



15-pin D-Sub Signal Cable

- **DVI-D** Connector
- Input signal : Digital
- DVI-D Connector

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS DATA2-	9	TMDS DATA1-	17	TMDS DATA-
2	TMDS DATA2+	10	TMDS DATA1+	18	TMDS DATA+
3	DGND	11	DGND	19	DGND
4	NC	12	NC	20	NC
5	NC	13	NC	21	NC
6	DDC CLOCK	14	+5V POWER	22	DGND
7	DDC DATA	15	AGND	23	TMDS CLOCK+
8	Analog vertical Sync	16	NC	24	TMDS CLOCK-

 

Power Saver

This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal-operation when you press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods.

State	Power consumption	Recovery Time	LED Color
ON	Under 40W	_	Green
OFF Less than 2W		Within2 sec	Amber

Troubleshooting

What you see	Suggested Actions
Screen is blank and power indictor is off	Ensure that the power cord is firmly connected and the LCD monitor is on.
"VIDEO MODE NOT SUPPORTED" message	 Check the maximum resolution and the frequency of the video adaptor. Compare these values with the data in the Display Modes Timing Chart.
"NO SIGNAL" message	 Ensure that the signal cable is firmly connected to the PC or video sources. Ensure that the PC or video sources are turned on.
Image is not stable and may appear to vibrate	 Check that the display resolution and frequency from your PC or video board is an available mode for your monitor. On your computer check : Control Panel, Display, Settings Note : Your monitor supports multiscan display functions within the following frequency domain:
The image is too light or too dark	Adjust the Brightness and Contrast.Refer to the Brightness/Contrast
The image color is not good	Adjust the Color Refer to the Color
Image is not centered on the screen	Executes Auto Adjustment.
Screen is blank and power indicator light is steady amber or blinks every 0.5 or 1 seconds	 The monitor is using its power management system. Move the computer's mouse or press a key on the key- board.

Appendix A. Specifications

MODE		Analog	Digital	
Туре		TFT active matrix		
Panel	Size	19 inch		
	Size	376.32 × 301.056(mm)		
	Pixel Pitch	0.294 × 0.294(mm)		
	Display Color	8-bit (16,777,216 colors)		
Display	Basic	1280×1024@60Hz		
Resolution	Maximum	1280×1024@75Hz	1280×1024@60Hz	
Frequency	Horizontal	31.5 ~ 80KHz	31 ~ 64KHz	
	Vertical	56 ~ 75Hz	59 ~ 61Hz	
Connectors		15-pin D-Sub Connector	DVI-D Connector	
		Speaker Input / Headphone Output (Audio Cable)*1		
Tilting Degree (U/D)		-5°~25° Degree		
Plu	ıg&Play	VESA DDC 1/2B		
	Input	Internal type : 100~240VAC, 50/60Hz, 0.7A		
Power	Consumption	Under 40W		
	Standby mode	2W less		
Power I	Management	Power Saver		
Environmental	Temperature	0~35°C (32°F~95°F)		
Consideration Humidity		90% less		
Dimensions	Outside	426mm(W)×193mm(H)×406mm(D)		
Weight	Monitor	5.0Kg		
Carton		1.5Kg		

*1 : For Audio Model Only.

* The specification of this monitor is subject to be changed without notice to improve performance.

English

Disposal of Used Electrical & Electronic Equipment



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, your local city office, your household waste disposal service or the shop where you purchased the product.