



ATTN: Gilbert Lee
(Tina)

PKery = William Ho
(Wong)

Re: Instruction Manual
of # 0226

Page 1/2


SAFETY AND PLAYING TIPS:

Please read instructions carefully before operating Hoverstrike.


1. NEVER drive your hovercraft on streets.
2. DO NOT pick up hovercraft while in motion.
3. Keep fingers, hair, and loose clothing away from the dual-drive propellers while the vehicle is switched ON.
4. Keep hovercraft and parts out of reach of very young children. Adult supervision is recommended.
5. Do not play outdoors during thunderstorms.
6. Do not drive your hovercraft in sand, dirt or through water or snow.
7. Always turn your hovercraft and remote controller "OFF" when not in use.
8. Do not store near heat or direct sunlight.

Ride on a Cushion of Air! Hoverstrike is a remote control hovercraft that actually lifts-up off the ground. With its powerful dual-drive props, you can speed down a straight-away or make an awesome 360° turn. Remember to drive Hoverstrike on smooth, dry and clean surfaces to experience the ultimate hovercraft adventure!

DRIVING HOVERSTRIKE

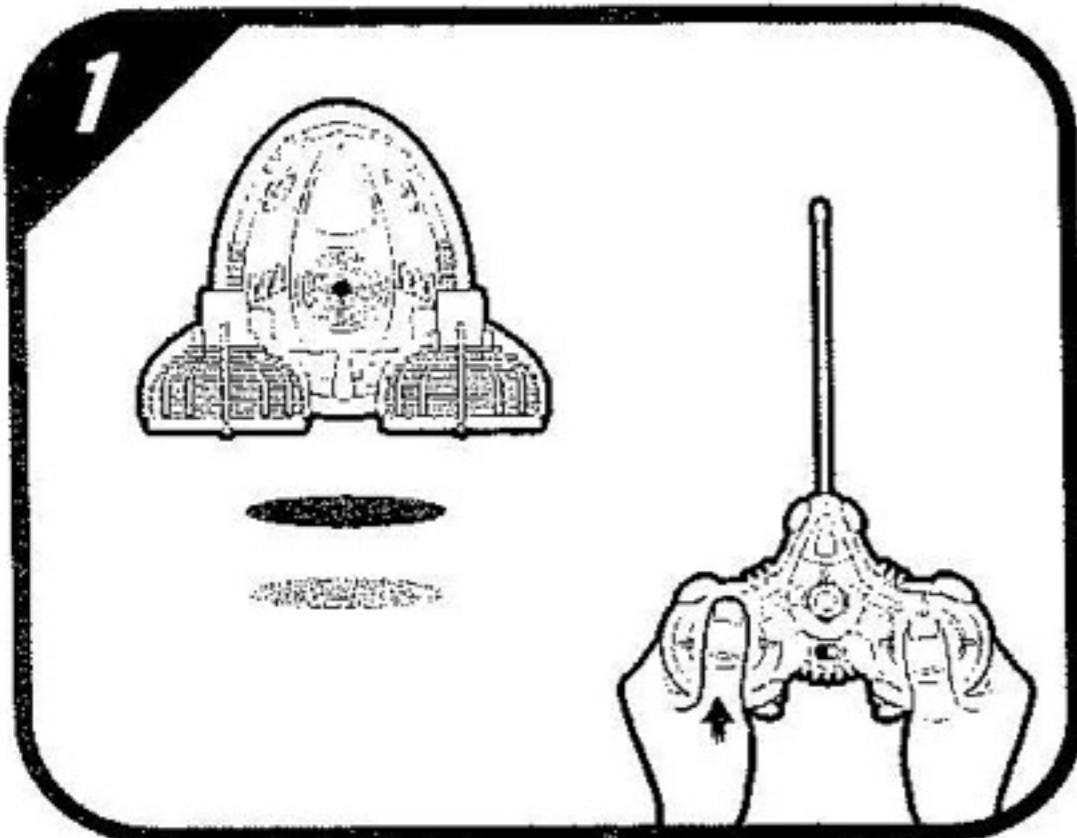


To go forward, push and hold the LEFT joystick forward.

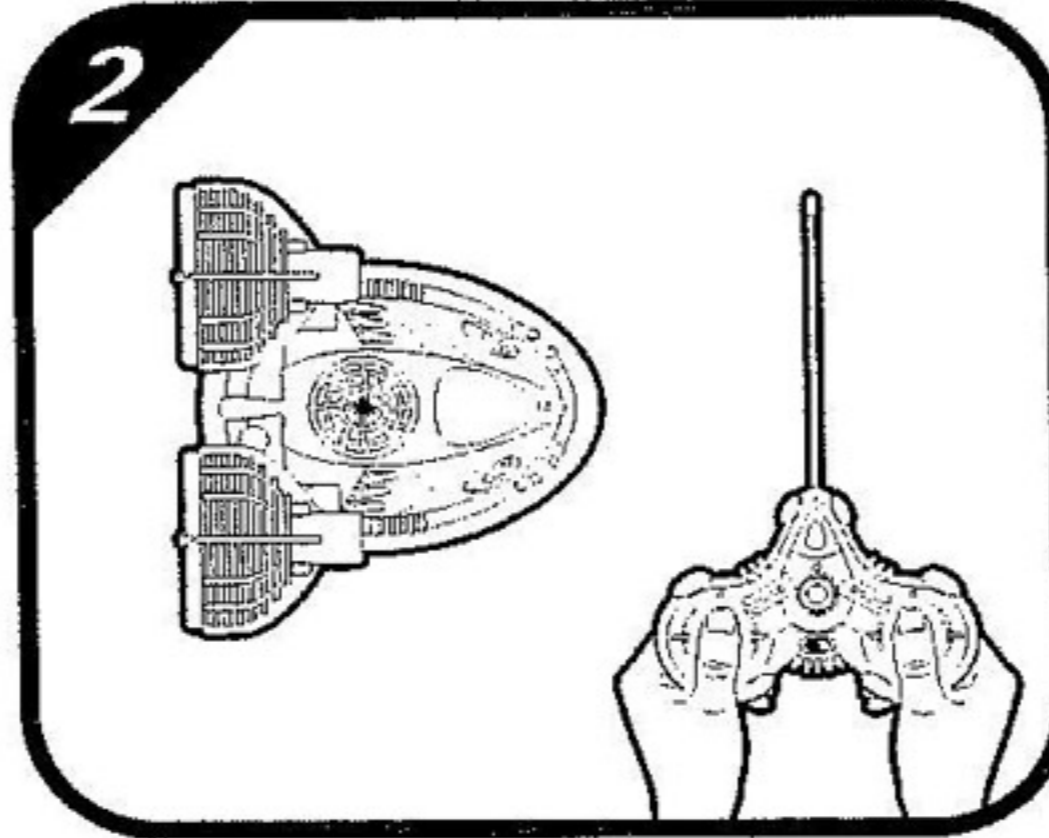


To stop, release the LEFT joystick.


TURNING

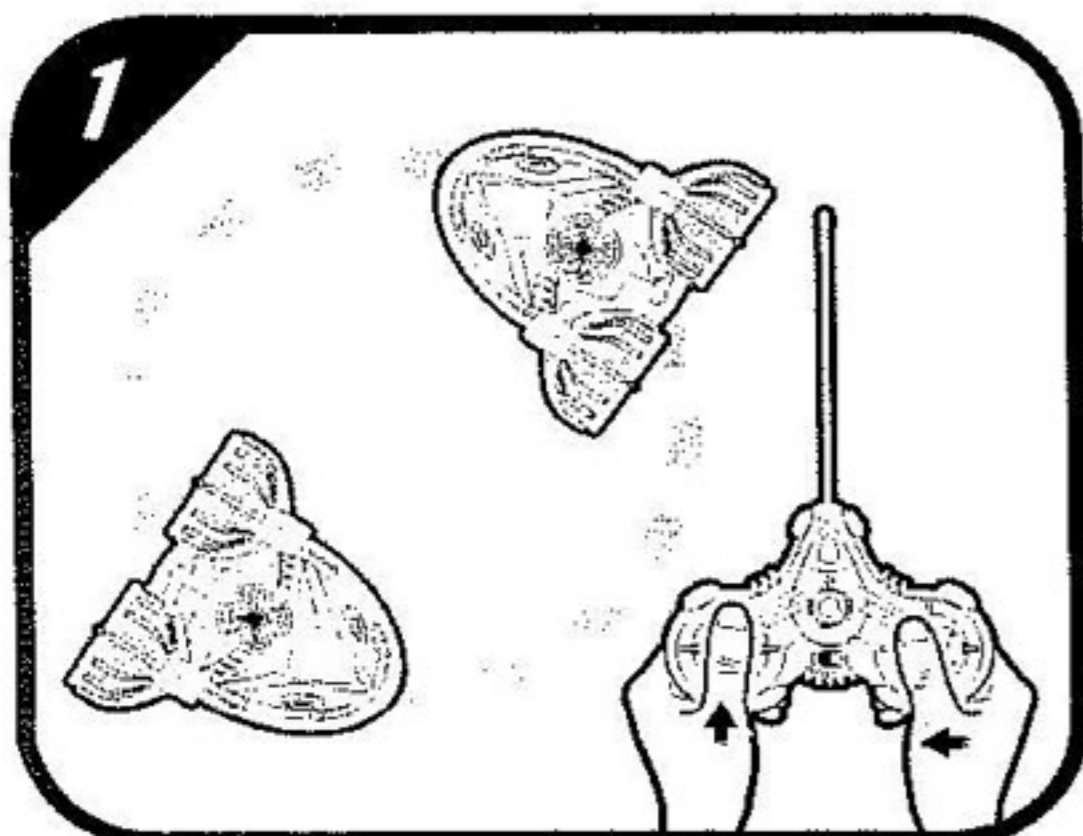

To turn Hoverstrike, you must push and hold the LEFT joystick forward while you turn, making the propellers run.

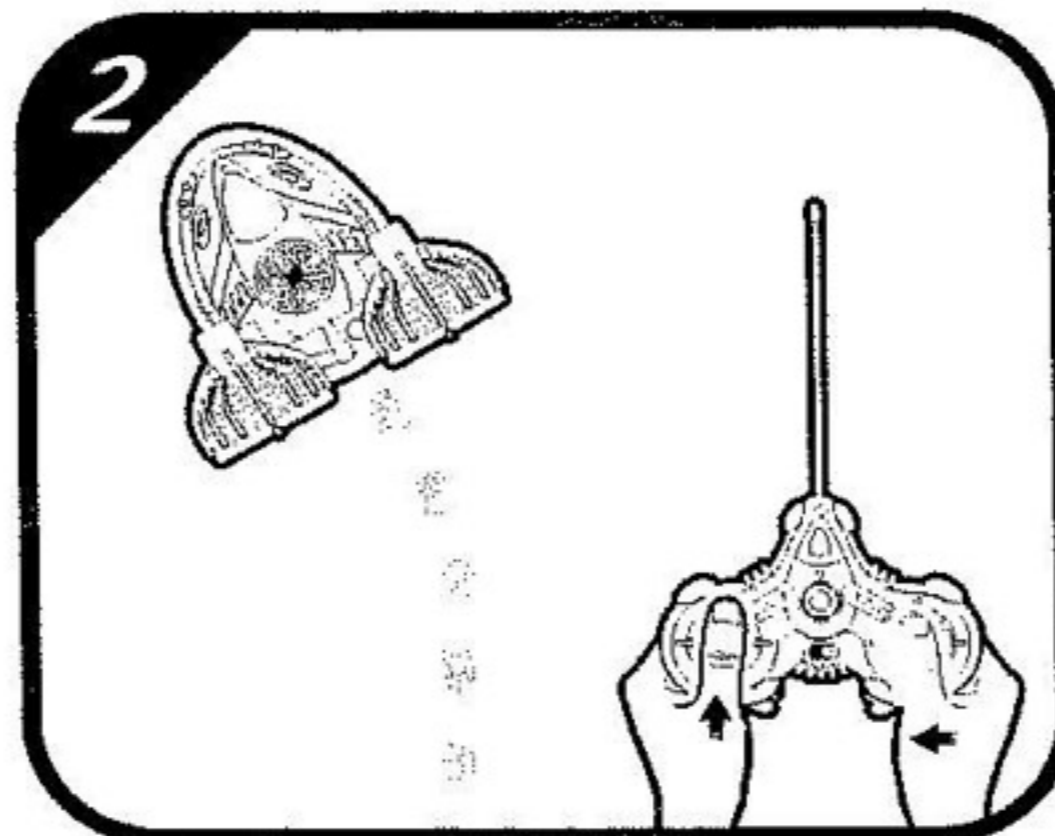


For wide left turns, push the RIGHT joystick to the left and quickly release.

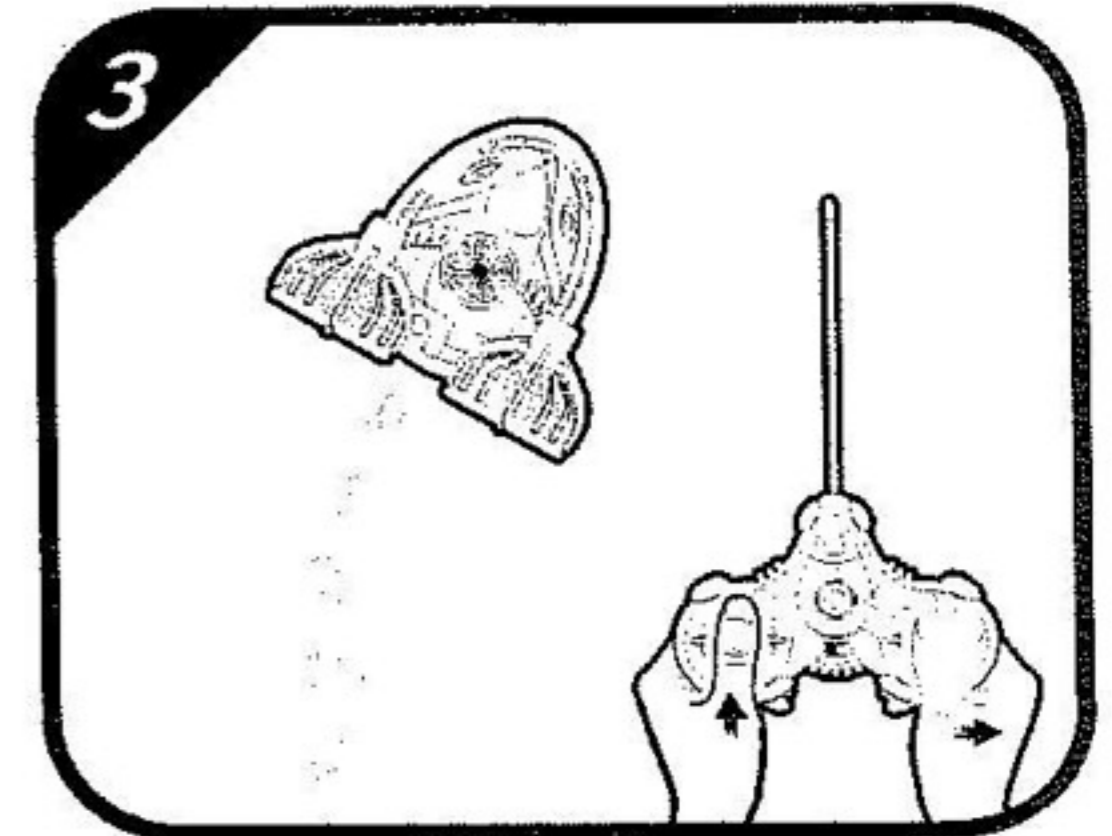


For wide right turns, push the RIGHT joystick to the right and quickly release.

Page = 2/2

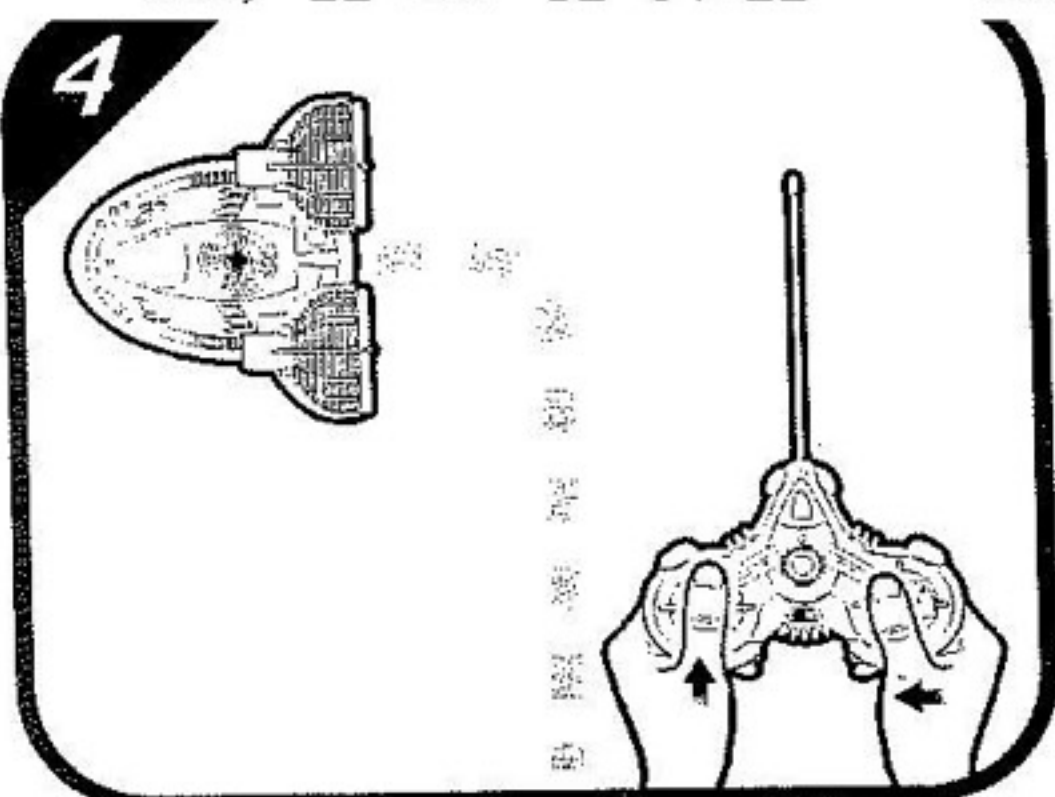

4
For sharp left turns, push and hold the RIGHT joystick to the left.

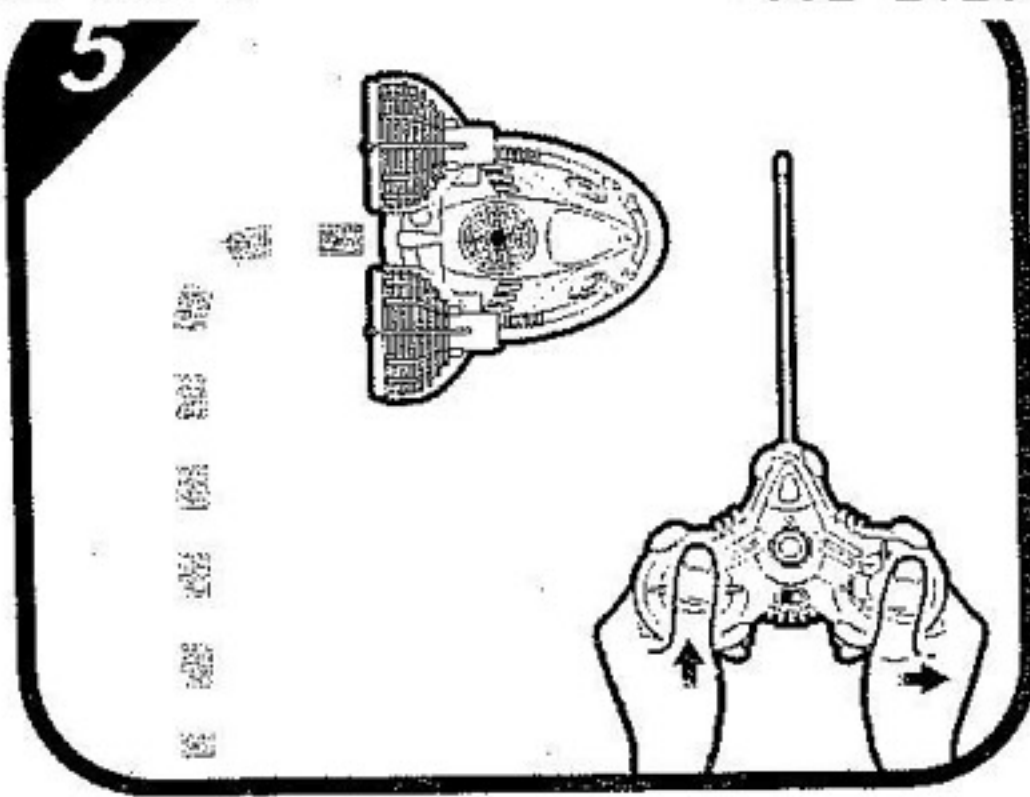

5
For sharp right turns, push and hold the RIGHT joystick to the right.

TIP:

Remember that when Slipstream is coming towards you, the steering is opposite to the way you turn.

Try to image that you are in the driver's seat and this will help you turn the way you want.

NOTE:

- ONLY USE ON SMOOTH, DRY AND CLEAN SURFACES, NOT INTENDED FOR USE ON CARPETS.
- THE ILLUMINATED RED LIGHT ON HOVERSTRIKE AND THE REMOTE CONTROLLER INDICATE THAT THEY ARE IN OPERATION.

BATTERY & POWER ON/OFF DIAGRAM

BATTERY REQUIREMENTS
 8 x "AA" BATTERIES/
 1 x 9.6V 800mAh
 Ni-cd rechargeable battery
 (HOVERSTRIKE)
 1 x "9V" BATTER
 (REMOTE CONTROLLER)

BATTERY INSTALLATION

- Remove the battery compartment cover using a screwdriver as shown.
- Insert correct battery - as shown in diagram, making sure to match the polarity direction.
- Replace the battery cover.

Note: • Quality of control function may deteriorate when battery power is low.

ATTENTION !!! IMPORTANT BATTERY INFORMATION

- Use only fresh batteries of the required size and recommended type. Do not mix old and new batteries, different types of batteries (standard alkaline, or rechargeable), or rechargeable batteries of different capacities. We suggest the use of alkaline batteries for best results.
- Please respect the correct polarity (+) and (-)
- Do not try to recharge batteries, nor to open them.
- Do not throw batteries into the fire.
- Remove rechargeable batteries from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Use only the battery types as recommended.
- Replace all batteries of same type/brand at the same time.
- Do not short-circuit the battery contacts.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults because of small parts.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect one equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



AGES: 4 +
 ITEM NO. 0226
ST0226US01
 Manufactured and Distributed by:
 © 2002 WowWee
 All rights reserved.
 WowWee (Asia Office)
 Unit 301A-C, 92 Granville Rd.,
 T.S.T. East, Kowloon, H.K.
 WowWee (North America Office)
 4480 Cote de Liesse, Suite 320,
 T.M.R. Quebec, H4N 2R1, Canada
 Consumer Hotline: (514) 344-1250
<http://www.wowwee.com>
 Printed in China