







 


# Splash & Swim Little Mermaid®

The seashell controller works on land and underwater!

## Remote Controller Buttons:

-  **A - FORWARD & POWER ON / OFF**
-  **B - DIVE**
-  **C - ASCEND**
-  **D - TURN LEFT**
-  **E - TURN RIGHT**
-  **F - ANTENNA**

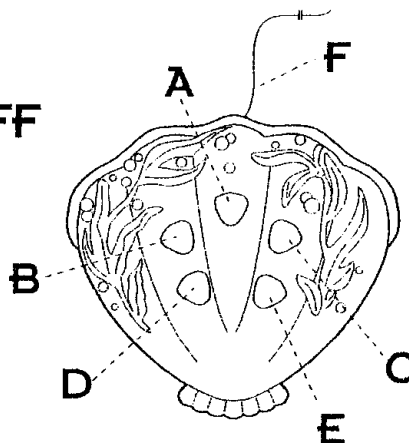


### SAFETY PRECAUTIONS

- Please read instructions carefully before operating Splash & Swim Little Mermaid
- Adult supervision is recommended. Keep out of reach of very young children.
- Children should be made aware of the dangers associated with playing near water.
- The propellers of Splash & Swim Little Mermaid rotate at very high speeds.  
**KEEP FINGERS CLEAR OF PROPELLERS AT ALL TIMES.**

### SAFETY & PLAYING TIPS

 - Do not operate where there are water plants, rubbish, or other obstacles in the pond. This could cause propeller damage.
- Do not play when there is a strong water current or when the wind is blowing strongly.
- Do not play outdoors during thunderstorms.
- Never touch the propeller while it is spinning.
- Bring the boat back to shore before the power runs out.
- Splash & Swim Little Mermaid shall not be operated in water without battery compartment cover.

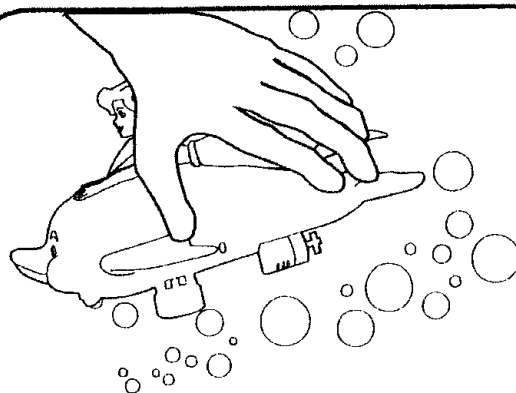


### GETTING STARTED:


Turn the Power to ON located on the underside of the dolphin. Then hold and submerge Splash & Swim Little Mermaid in the water with your hand, until the air bubbles have stopped. Now let go of Splash & Swim Little Mermaid in the water and use the remote controller to navigate.



 
## REMOTE CONTROL OPERATION:

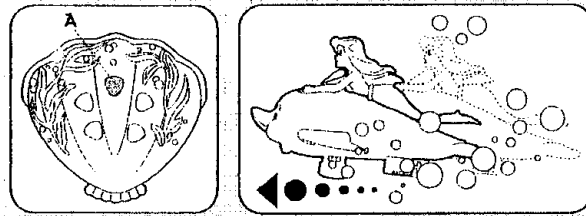

 
➤ 1) Press button A for POWER ON and to swim forward.

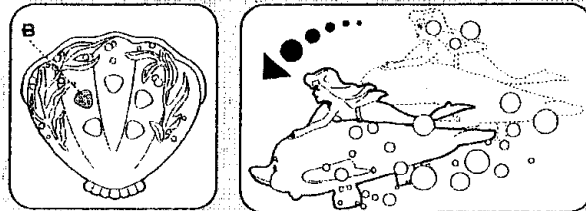


➤ 2) To dive, press and hold button B.

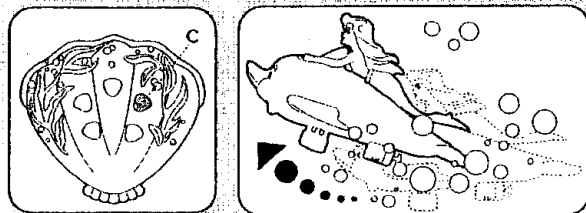 

 ➤ 3) To ascend, press and hold button C.

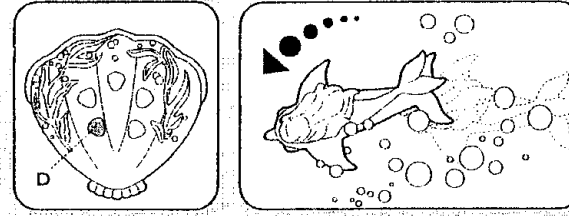

 ➤ 4) To swim in a left direction, press and hold button D.

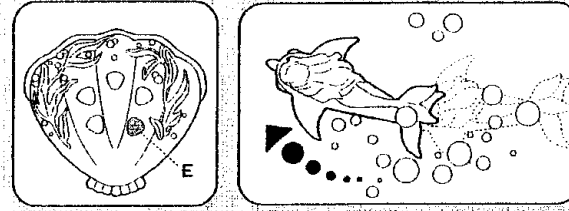

➤ 5) To swim in a right direction, press and hold button E.

Please note: The illuminated red light on the hand controller indicates that the hand controller is in operation.

SAFETY FEATURE: A SAFETY DEVICE PREVENTS UNCONTROLLED DRIVING. SPLASH & SWIM LITTLE MERMAID AUTOMATICALLY STOPS WHEN THE REMOTE CONTROLLER'S RANGE IS EXCEEDED.

### CAUTION!!!

Children playing with this toy should be supervised by an ADULT, as with any products designed to be used in or around water. To prevent unstable operation Splash & Swim Little Mermaid should not be operated in water depths that exceed 3.5 feet (approx. 1 m).

CAUTION: After each use of Splash & Swim Little Mermaid remove all batteries from the product, and drain any water that has accumulated inside. Moisture allowed to remain inside the product will damage the electronic components and batteries. Store the product with the battery compartment door open to allow the compartment to dry completely.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect one equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio / TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


**THIS PRODUCT IS DESIGNED FOR POOLS AND PONDS. DO NOT USE SPLASH & SWIM LITTLE MERMAID IN SALT WATER.**

## IMPORTANT BATTERY INFORMATION

Do not dispose of batteries in fire. Batteries may explode or leak. Do not mix old and new batteries. Do not mix alkaline, standard (Carbon zinc) or rechargeable (Nickel-cadmium) batteries. Only batteries of the same or equivalent type as recommended are to be used. Batteries should be replaced by adults because of small parts. Batteries are to be inserted with the correct polarity. Rechargeable batteries are to be removed from the toy. The battery terminals are not to be short-circuited. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are recommended.

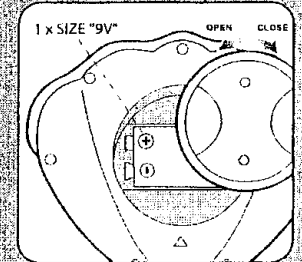

### REMOTE CONTROLLER

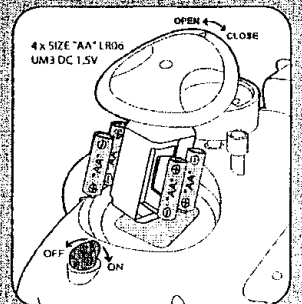 

### BOTTOM OF LITTLE MERMAID

#### BATTERY INSTALLATION

Remove the battery compartment cover by turning counter-clockwise (approx. 1/2 inch or 1 cm). Then pull out. Insert correct battery - as shown in diagrams, making sure to match the polarity direction. Replace the battery cover.

#### Note:

- \* If it is difficult to remove the battery cover, add a light coating of non-toxic oil (e.g. vegetable oil) around the black seal ring.
- \* Quality of control function may deteriorate when battery power is low.



www.hasbro.com

Item no. 3200  
Ages: 6+

Manufactured and Distributed by:  
© 2002 WowWee  
A Subsidiary of Hasbro, Inc.  
The Hasbro logo is a trademark of Hasbro, Inc.  
All rights reserved.  
WowWee (Asia Office)  
Unit 301A-C, 92 Granville Rd.,  
T.S.T. East, Kowloon, H.K.  
WowWee (North America Office)  
4480 Cote de Liesse, Suite 320,  
T.M.R. Quebec, H4N 2R1, Canada  
Consumer Hotline: (514) 344-1250  
http://www.wowwee.com  
Printed in China

In the interest of better quality and value, we are constantly improving and updating our products, consequently, pictures on this packaging may differ slightly from the product enclosed.

©Disney

st3200us01