

POWER Air Surfer

Rule the Air



IMPORTANT:
Please read instructions
carefully before flying!


Adult Assembly required

SAFETY PRECAUTIONS!

1. Recommended for use in wide open grassy areas.
2. Keep biplane clear from face and eyes.
3. Point biplane away from face when launching.
4. Do not launch at people or animals.
5. Make sure people know that you are playing with Power Air Surfer.
6. Do not fly near overhead wires.
7. Do not play outdoors during thunderstorms or under strong wind.
8. Use charging adaptor included in this package or 110V/7.8V uv approved adaptor (not included).
9. Use only controller included in this package.
10. Keep biplane and parts out of reach of very young children. Adult supervision is recommended.
11. Always turn your biplane and transmitter "OFF" when not in use.
12. KEEP FINGERS AWAY FROM MOVING PROPELLERS AT ALL TIMES.

Draft


CONTENTS

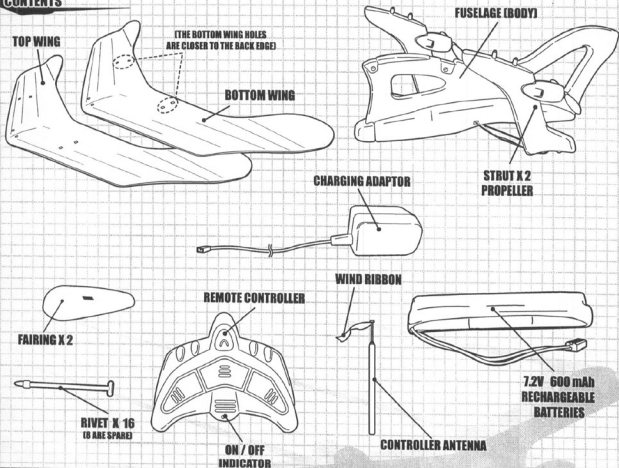

CHARGING YOUR POWER AIR SURFER

Before you can fly your Power Air Surfer, you need to charge the batteries.

1. To charge, connect the rechargeable batteries to the charging adaptor, see diagram A.
2. Plug the adaptor into a wall socket and the batteries will begin charging.

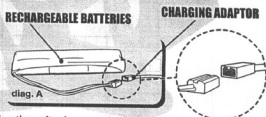

The charging time is approximately 12 hours for the FIRST TIME. Each charging time after is approximately 4-6 hours.