


WARNINGS: Mouse will NOT work if there is more than 5 ft. between the mouse and receiver. Mouse will NOT work well on glass or reflective surfaces, or 3-D mouse pads. Please remove batteries if the mouse will not be used for extended periods of time. For optimal performance, recommend use with PREMIUM batteries.







To insert batteries, push the top half of the button in the center of the mouse (indicated below) to release cover and pull back bottom cover. Insert the batteries according to the appropriate polarity marks (+,-). Push battery cover forward. When you hear a "click", the cover is locked.

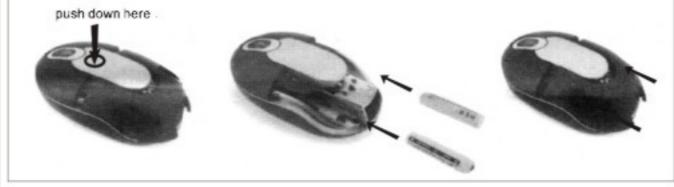

To remove the remote receiver, push the lower half of the button in center of the mouse (indicated below).

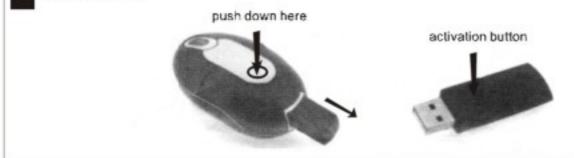

Plug the remote receiver into the USB port on your computer and press the activation button on the remote receiver.

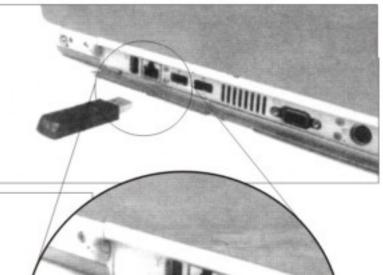

Turn over your mouse and press (with a pointed instrument – i.e. pen) the rubber button to the left of the optical mirror. If the mouse is not active repeat steps #4 and #5.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.