

NEC

User Manual for
N5106
Mobile Phone

November, 2006

Summary

Welcome to select N6207 mobile phone. This instruction manual explains the excellent performance of N6207 mobile phone for details. Besides basic function of talking, N5106 mobile phone and system network also provide you with practical multi-functions and service to facilitate your work and leisure activity.

N5106 mobile phone is specially designed for GSM900/1800/1900 network environment and is automatic three frequency mobile phone. With the trend that GSM is gradually becoming the standard of the communication system in the world, you will possess the free space for random communication in double frequency network.

We provide you with the multiple special fitting parts including charging battery and charger for your selection. Please refer to section 14 of this instruction manual for the detailed description on these fitting parts. If using fitting parts without permission from the providers, it is possible to result in danger; the resulted damage is beyond warranty.

N5106 mobile phone has passed the network access test from the PRC Ministry of Information Industry, all indexes reach the requirements for national standard and acquire the “telecom device network access license” issued by the Ministry of Information Industry (license number :XX-XXXX-XXXXXX). you come across difficulty when using N5105 mobile phone, you can query and get help by national hot line consulting telephone (*800-8xxxxxx*) and after service telephone (*800-8xxxxxx*) set by NEC company.

Our company reserves the right to modify the technical specification in this instruction manual without pre-notification.

Explanation for reading the manual

Different styles are used to describe different operation details in this manual as follows:

Operation	Content description	Example
Display content	Represented with normal character	0-9
General key	Except the function keys, all others are represented by normal character with frame	0-9
Function key	Function keys are represented with overstriking and frame	OK
Menu item	Represented by italics with boldface	<i>Hold the call</i>

Note: The pictures used in the manual are the function illustration pictures only, and maybe they are different from display in your mobile phone. Please take yours as the standard.

TABLE OF CONTENT

SUMMARY	II
SECURITY AND PERFORMANCE	7
1 START TO USE	12
1.1 BATTERY.....	12
1.1.1 <i>The disassembly and installation of battery</i>	12
1.1.2 <i>Battery charging</i>	12
1.1.3 <i>Use of battery</i>	13
1.1.4 <i>Indication of battery capacity</i>	13
1.2 CONNECTION OF NETWORK.....	13
1.2.1 <i>SIM card</i>	13
1.2.2 <i>Insertion of SIM card</i>	13
1.2.3 <i>Unlocking of SIM card</i>	13
1.2.4 <i>Connection to network</i>	14
1.3 INSERTION OF MEMORY CARD.....	14
1.4 IDLE SCREEN AND CONTENT.....	14
1.5 KEYS	16
1.6 INPUT MESSAGE	20
1.6.1 <i>Keyboard input</i>	20
1.6.2 <i>Input method of handwriting</i>	23
2 DIAL AND ANSWER THE PHONE	25
2.1 TURN ON/OFF PHONE.....	25
2.2 MAKE A PHONE CALL	25
2.2.1 <i>Direct dial</i>	25
2.2.2 <i>Make a phone call from phonebook</i>	26
2.2.3 <i>Quick dial</i>	26
2.2.4 <i>SIM card dial</i>	26
2.2.5 <i>Unsuccessful calls</i>	26
2.3 ANSWER THE CALL.....	26
2.4 DURING THE TALKING.....	26
2.4.1 <i>Adjust volume</i>	27
2.4.2 <i>Reject the call</i>	27
2.4.3 <i>New message</i>	27
2.4.4 <i>Answer the new call</i>	27
2.4.5 <i>Answering two calls simultaneously</i>	27
2.4.6 <i>Conference</i>	28
2.5 EMERGENCY CALL	28

3	MENU OPERATION.....	30
3.1	STRUCTURE OF MAIN MENU	30
3.2	SELECTION OF MAIN MENU	30
3.3	OTHER SELECTION MODES	30
3.4	FUNCTION TABLE OF MENU	30
4	SETTINGS.....	32
4.1	PHONE.....	32
4.1.1	<i>Receiver volume</i>	32
4.1.2	<i>Any key answer</i>	32
4.1.3	<i>Date & Time</i>	32
4.1.4	<i>Language</i>	32
4.1.5	<i>USB mode</i>	32
4.1.6	<i>Auto key lock</i>	33
4.2	PHONE MODES	33
4.2.1	<i>Startup the mode</i>	33
4.2.2	<i>Personal Setup</i>	33
4.3	DISPLAY	34
4.4	CALLS	34
4.4.1	<i>Call diversion</i>	34
4.4.2	<i>Call waiting</i>	34
4.4.3	<i>Auto redial</i>	35
4.4.4	<i>Quick dial</i>	35
4.4.5	<i>Minute tone</i>	35
4.4.6	<i>Call filter</i>	35
4.4.7	<i>Send my number</i>	35
4.4.8	<i>IP code</i>	35
4.5	SECURITY	36
4.5.1	<i>PIN</i>	36
4.5.2	<i>Phone lock</i>	36
4.5.3	<i>PIM</i>	36
4.5.4	<i>Change password</i>	37
4.5.5	<i>Bar calls</i>	37
4.6	NETWORK SERVICE	37
4.7	MY MENU	37
4.8	CONNECTION PROFILE.....	37
4.9	CALIBRATION.....	38
4.10	RESET.....	38
4.10.1	<i>Reset settings</i>	38

4.10.2	<i>Reset all</i>	39
5	MULTIMEDIA	39
5.1	CAMERA.....	39
5.2	MUSIC PLAYER.....	40
5.3	VIDEO PLAYER.....	41
5.4	FM RADIO.....	41
5.5	VOICE RECORDER.....	42
5.6	PAINTER.....	42
5.6.1	<i>Picture edit</i>	42
6	WAP	43
6.1	MENU OF WAP EXPLORER WHEN OFFLINE BROWSE.....	43
6.1.1	<i>Homepage</i>	43
6.1.2	<i>Bookmark</i>	43
6.1.3	<i>Go to URL</i>	43
6.1.4	<i>Go to last page</i>	43
6.1.5	<i>History</i>	43
6.1.6	<i>Offline browse</i>	44
6.1.7	<i>Settings</i>	44
6.1.8	<i>GPRS info</i>	44
6.2	MENU OF WAP EXPLORER WHEN ONLINE BROWSE.....	44
7	MY FAVORITES	45
7.1	MULTIMEDIA RESOURCE.....	45
7.2	USAGES OF RESOURCE.....	45
7.3	VIDEOS.....	45
7.3.1	<i>Videos</i>	45
7.3.2	<i>Download</i>	45
7.4	SOUNDS.....	46
7.4.1	<i>Download</i>	46
7.4.2	<i>Preset</i>	46
7.4.3	<i>Voice memo</i>	46
7.5	PICTURES.....	47
7.5.1	<i>Photos</i>	47
7.5.2	<i>Download</i>	47
7.5.3	<i>Preset</i>	48
7.5.4	<i>Painter</i>	48
7.6	MUSIC.....	49

7.7	MEMORY CARD	49
7.7.1	<i>Videos</i>	49
7.7.2	<i>Sounds</i>	50
7.7.3	<i>Pictures</i>	50
7.7.4	<i>Music</i>	51
7.7.5	<i>Format</i>	51
7.8	STORAGE STATUS	51
8	MESSAGES	52
8.1	MESSAGES	52
8.2	CREATE	52
8.2.1	<i>SMS</i>	52
8.2.2	<i>MMS</i>	53
8.3	RECEIVE MESSAGE	54
8.4	READ MESSAGE	54
8.5	OUTBOX	56
8.6	SENT	56
8.7	DRAFTS	57
8.8	MY FOLDER	57
8.9	EMAIL	57
8.9.1	<i>Email manager</i>	58
8.9.2	<i>Receive Email</i>	59
8.9.3	<i>Write Email</i>	59
8.9.4	<i>Inbox</i>	59
8.9.5	<i>Outbox</i>	60
8.9.6	<i>Drafts</i>	60
8.9.7	<i>Sent</i>	60
8.9.8	<i>Settings</i>	60
8.10	VOICE MAIL	60
8.11	SETTINGS	60
8.11.1	<i>SMS settings</i>	60
8.11.2	<i>MMS settings</i>	61
8.11.3	<i>Reset setting</i>	61
8.11.4	<i>Quick text</i>	61
8.11.5	<i>Show type</i>	62
8.11.6	<i>Storage status</i>	62
9	PHONEBOOK	63
9.1	GROUPING OF PHONE BOOK	63

9.2	FIND	63
9.3	CREATE	63
9.4	COPY	64
9.5	MOVE	64
9.6	DELETE	64
9.7	MULTI-DELETE	65
9.8	DELETE ALL	65
9.9	GROUPS	65
9.10	SHOW TYPE	65
9.11	MY NUMBER	65
9.12	STORAGE STATUS	65
9.13	PHONE LIST	65
9.14	SAVE TELEPHONE NUMBER	66
9.15	CREATE SECURITY GROUP CONTACT	66
10	ENTERTAINMENT	67
10.1	JAVA BOX	67
10.1.1	<i>Applications</i>	67
10.1.2	<i>Download</i>	67
10.1.3	<i>Storage status</i>	67
10.1.4	<i>Network settings</i>	67
11	CALL HISTORY	68
11.1	OUTGOING CALLS	68
11.2	RECEIVED CALLS	68
11.3	MISSED CALLS	68
12	ACCESSORY	69
12.1	ALARM	69
12.1.1	<i>Alarm on</i>	69
12.1.2	<i>Alarm off</i>	69
12.1.3	<i>Alarming</i>	69
12.2	SCHEDULE	69
12.2.1	<i>Function description</i>	69
12.2.2	<i>Select date</i>	70
12.2.3	<i>Create</i>	70

12.2.4	<i>Schedule list</i>	70
12.3	NOTEPAD	70
12.4	CALCULATOR.....	71
12.5	DICTIONARY	71
12.6	CURRENCY	71
12.7	WORLD CLOCK.....	71
12.8	COUNTDOWN	72
12.9	STOPWATCH.....	72
12.10	UNIT CONVERTER.....	72
12.11	CONNECTION TOOLS	72
12.11.1	<i>Bluetooth</i>	72
12.11.2	<i>PC tool</i>	73
12.11.3	<i>GPRS wizard</i>	73
12.12	STK	74
13	COMMON QUESTIONS	75
14	FITTINGS	76
15	MAINTENANCE GUIDELINE	77
16	RF EXPOSURE INFORMATION AND STATEMENT	78

Security and performance

Welcome to select NEC mobile phone. After you start using the phone, the background will send IMEI number to the management system of manufacturer, which helps you to query the purchase time and guarantee time of the phone under the situation of missing the warranty card and purchase receipt. Registration message will be sent in SMS and charged by the network provider as 0.10 or 0.15 yuan without other fee.

◆ Emergency service

In any country, if want to dial the emergency telephone, you can directly dial 112 (or other emergency service telephone), you must confirm the power of mobile phone is on and it is within the service area, then input the emergency service number (112 or other numbers) and tap **OK** to make the call.

In any digital network , 112 emergent telephone service is set. In England you can also use 999 backup emergent calling number, but you must insert valid SIM card.

Note: Because of the property of the mobile network, each emergency call is not sure to succeed.

Individual

- ◆ When using the radio frequency device including mobile phone, it is possible to have some disturbance on some medical devices with bad shielding performance, such as Acousticon or heart pacemaker. Before using the mobile phone, please consult with the producer of the medical device or your doctor.
- ◆ For the user with heart disease, please pay close attention to the setting of ring tone volume and vibration.
- ◆ In the places where the explosive gas or production process exist, such as oil warehouse, or chemical factory, please pay the close attention to restricts of use for radio frequency device. When your mobile phone is in idle, it still emits electromagnetic signals. If required, you should turn off the mobile phone.
- ◆ Please pay attention to the transportation safety. When driving, the mobile phone should not be used, if using it; it is suggested to stop the car first.
- ◆ When your mobile phone is missing or stolen, please immediately inform the telecom department to prohibit the SIM card from using. It will make you free from the economic loss caused by other pseudo calls.
- ◆ When you contact with telecom department or sales agents, they should know the IMEI number of your mobile phone, which is printed on the label of back of the mobile phone (remove battery or dial “*#06#” to find it). Please record the number and keep it safely for future use.
- ◆ To make your mobile phone misused, please adopt prevention measures, such as: set SIM card PIN number or personal security code or change the code in time as other person knows it.
- ◆ When leave the car, please keep the mobile phone at the unobvious place, it would better take it or lock in the luggage boot.
- ◆ Please keep the children from the mobile phone, charger or battery.

Mobile phone

The mobile phone includes the precise electric wires, magnet and battery system, which should be dealt with carefully, especially pays attention to the following important points:

- ◆ Your mobile phone can produce electromagnetic field; please do not place the magnetic storage media such as computer disk near to the mobile phone.
- ◆ When using the mobile phone near to the electric devices such as TV, telephone, radio and personal computer, it maybe leads to disturbance and effect on the performance of mobile phone.
- ◆ No matter when, please do not make the mobile phone and its fitting parts touch the liquid or keep them in the wet environment.
- ◆ Please do not keep the mobile phone in the environment with over-temperature or under-temperature.
- ◆ Please do not keep the mobile phone near to the flame, litten cigar or cigarette.
- ◆ Please do not scrawl on the mobile phone.
- ◆ Please do not fall the mobile phone off or behave any rude beating on the mobile phone.
- ◆ Please do not keep the mobile phone together with computer magnetic disk, credit card, traveling card or other magnetic objects. Otherwise the stored information in magnetic card or credit card is affected by it.
- ◆ Please do not keep the mobile phone or battery at the position with the temperature beyond 60°C, such as the car instrument panel, screensill or the back of the glass screen with direct shining.
- ◆ Please do not try to disassemble the mobile phone or any other accessories.
- ◆ Only little wet or anti-static cloth can be used to wipe the mobile phone. Please do not use dry or static cloth to wipe the mobile phone. Please do not use the cleanser with chemical reagent or grinding sand, otherwise the cleanser will damage the shell of the mobile phone.
- ◆ The receiver of mobile phone will produce some heat during the using normally; same as the mobile phone is charging.
- ◆ Please remember the recycle, the bandbox package for the mobile phone is very suitable for recycle.
- ◆ Please do not keep the mobile phone in the status of non-battery or empty battery capacity; otherwise some data may be lost.
- ◆ Some mental material included in the mobile phone may make you allergic, which is determined by your physique and health condition.
- ◆ Please do not put the mobile phone in the rear pocket of the trousers or skirt to prevent from damage when sitting. At the same time please do not put the mobile phone at the bottom of the bag to prevent from impact or strong extrusion.
- ◆ If vibration function is on, please keep the mobile phone far from heat sources (such as heater) and prevent it from sliding from the desk top for the vibration.
- ◆ Only handwriting pen authorized by NEC can be used. Use other handwriting pen maybe infract the warranty, and possibly damage the touch screen.
- ◆ Please plug and draw the hardwiring pen carefully, and plug the pen in the correct position without use to prevent from children.
- ◆ Please try to avoid scratching the touch pen. It is prohibited to use the normal pen, pencil, or other sharp instrument write on the touch screen.

Battery

- ◆ Please do not keep the batter device short circuit, which will damage on the battery, produce heat and even cause fire.
- ◆ It is prohibited to throw the battery into the fire for preventing from explosion. The discarded battery should be returned to the provider, or be put into he specified recycle bin; do not put them

into the home waste.

- ◆ Please do not make the metal, such as coin or key ring, touch the end point of the battery caused short circuit.
- ◆ Please do not remove the battery when the mobile phone powers on.
- ◆ Please do not put the mobile phone's battery into mouth, because the electrolyte will result in poisoning.
- ◆ One built-in battery in the mobile phone can only be replaced by the professional engineer. If using the battery with wrong type to replace, it is possible to result in explosion. Please deal with the used battery according to provider instruction.
- ◆ When using any battery and charger which is not specified by the provider, potential danger exists. The resulted damage on the mobile phone is beyond the warranty.

Note: If the battery is damaged, the material in the battery should be prevented from touching. If touching the skin, it should be washed with plenty of water, or get help from a doctor if necessary.

On the way

- ◆ The car must be securely controlled all along, please pay attention to driving.
- ◆ Please comply with all rules in the local transportation security regulations.
- ◆ Before sending and answering phone, you should closely notice the local law system on use for wireless phone and pay attention to it when using.
- ◆ Please send or answer call after stopping the car according to the requirements of driving condition.
- ◆ Except for emergent situation, it is prohibited to stop the car at the side of the highway for receiving or dialing the phone.
- ◆ The electronic system in the car, such as the lock brake, quick control and combustion ejection system generally are not affected by the wireless radio wave. The manufacturer of this type of devices will tell you whether these devices have good shielding function. If you have doubt that the wireless wave causes the car's failure, please contact the franchiser. Please do not disassemble the mobile phone before the quantified professional personnel checks it.
- ◆ When the airbag swells, it will produce strong external force. Please do not install or place wireless talking device above the airbag or within the touchable area of the airbag after it extends. If the car wireless talking is not installed correctly, once the airbag swells, it will result in serious damage.
- ◆ When renewing petroleum, please turn off your mobile phone. Same case also applies to the place where the bidirectional wireless device is prohibited for using. Please do not put the flammable and explosive substances together with the mobile phone or carry them together; for internal spark may result in combustion.

On the plane

- ◆ When on the plane or near to the plane, please turn off the mobile phone and take out the battery. The behavior to use the mobile phone on the plane is illegal, which may result in danger for the operation of plane, also damage the mobile phone network. The violator may be paused or canceled the mobile phone service, even prosecuted, or punished doubly.
- ◆ Under the emergent situation, it is allowed to use the mobile phone with the agreement of crewman in terms of security regulation.

Device from other manufacturers

- ◆ If using the devices, cable or fitting parts from the other providers without NEC production or

authorization, it is possible to result in invalidation for warranty; moreover, it has also influences on the normal use of the mobile phone. It is obligatory to use fitting parts of NEC.

Maintenance service

- ◆ The phone, battery and inside of charge have no part which the user can repair freely. Advise you to take your NEC mobile phone to maintenance agent authorized by NEC for repair. When you need the maintenance service, please consult with the network service provider or NEC in detail.

Non-ionic radiation

- ◆ A wireless device should connect to the antenna by the non-radiation cable (for example coaxial-cable). The antenna should not be installed near to the human body, except the metal shielding exists between them, such as metal roof. Only the antenna specially designed for this mobile phone can be used. The antenna without authorization or with fitting parts refitted or added by users own maybe damages the mobile phone or violates the related rules, which results in performance decrease or radiation with unqualified standards.

Effective use

- ◆ To obtain the best performance with the least power consumption, please pay attention to the following rules: when talking, please do not use the hand to cover the position of built-in antenna, which may affect the quality of talking and cause that the mobile phone works with the output power beyond the normal standard and shorten the talking and idle duration of battery.

Energy of radio frequency

- ◆ Your mobile phone is a kind of wireless transmitter and receiver with low power. Once the mobile phone turns on, it will receive and transmit wireless signal intermittently. The network system will control the transmitting power of the mobile phone.

Electromagnetic radiation

- ◆ Your mobile phone completely complies with the standard on the wireless radiation constituted by the nation authoritative organization and international health association. These standards of limitation are a part of the comprehensive rules and compose of permissive standard of public wireless radiation. These standards are gradually formed through the long-term and in-depth scientific research conducted by some independent scientific organization ICNIRP (International Commission on Non-ionizing Radiation Protection). These limit standards contain lots of security capacity so as to keep person safe, whatever the age or health status, and also consider the changeable factors of various kinds of measure condition.

Copyright permission

- T9™ text input and T9 mark is the registered mark for Tegic Communication.

“The authorization for T9 text input is as follows:

U.S. patent number :5,818,437,5,953,541,5,187,480,5,945,928,6,011,554 and 6,307,548; Australian patent number: 727539; Canada patent number: 1,331,057; England patent number:2238414B; Hongkong patent number: HK0940329; Singapore patent: 51383; Europe patent: 0 842 463 (96927260.8) DE/DK,FI,FR,IT,NL,PT,ES,SE,GB; Korea patent: KR201211B1 and KR226206B1; The patent for other nations are in the application process.”

- Execution standards for mobile phone and its attached parts production

Execution standard for mobile phone: Q/NM 005。

Execution standard for battery: GB/T 18287-2000。

Execution standard fro charger: YD/T 998-1999。

To continuous improvement for the product, the mobile phone type and attached parts' specification may be modified partly or completely, please forgive not to inform for it.

If the content described in this manual does not conform to your mobile phone, please take yours as the standard. NEC possesses the right of the final explanation for this instruction manual.

NEC reserves the right to modify the technical specification without the pre-notification.

NEC reserves the right to modify this manual without the pre-notification.

The manufacturer reserves the right to modify the product technical specification without the pre-notification.

1 Start to use

Before using the mobile phone, please read this section. The section will tell you how to install charge and maintain your mobile phone's battery. It also tells you the information about the digital GSM network and instructs you how to insert and unlock SIM card. The detailed information about it will be also stated in the section.

1.1 Battery


- The mobile phone contains one battery. When purchasing, the battery is not charged, but maybe supports to turn on the phone. A new battery should be charged for at least 16 hours, after the battery is used up for the first time, then it is charged fully for use; same as the second and third time, then the battery will easily reach the best status for use.

1.1.1 The disassembly and installation of battery

- When disassembling, make the mobile phone back face upward, and press the back cover's battery lock button at the bottom of the mobile phone, then slip the back cover downward and take off the back cover. Pull the tail of the battery upward and take out the batter.
- When installing, insert the clip at the top of the battery into the corresponding clamping slot in the phone and press the battery downward, then install the phone's back cover. Make sure that you have installed battery well before turning mobile phone on.

1.1.2 Battery charging

- Insert the adapter of the charger into the plughole of mobile phone as follows;

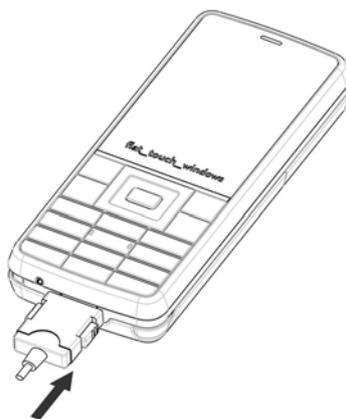

- Connect the charger with the power. At this moment, a sign of battery will sparkle indicating the battery is charging;
- When the power capacity reaches the fourth level, and charging sign changes to the power capacity, which means the charging is completed. During the charging, the battery, mobile phone and charger will become heated, which is normal phenomena;
- After the charging completed, disconnect the power and pull off the charger.

Warning:

When charging, the phone must be placed at the site with the temperature between -5°C and 55°C and use the charger from the provider. When using the charger without permission, it is possible to result in danger, moreover violate the permission and terms of warranty for mobile phone.

1.1.3 Use of battery

The phone idle duration provided by the manufacturer is based on the ideal work environment. In the practice, the work duration of battery will vary with the different network state, work environment and use mode.

Please deal with the battery according to local regulations; do not take it as the life waste.

1.1.4 Indication of battery capacity

When the mobile phone powers on, the level of battery capacity displays on the top left corner of the screen. The residual power capacity is represented by indication bars from one to four levels.

1.2 Connection of network

1.2.1 SIM card

Your network provider will provide you with a plug-in type of SIM card (user identification card). SIM card is the key for you to enter the digital GSM network. **Before using the mobile phone, you must insert valid SIM card into the mobile phone.**

All information related with network connection records in the SIM card, also including name, telephone number and short message. SIM card can also be taken out from your mobile phone and insert into any GSM mobile phone for use (new mobile phone automatically identifies SIM card.).

To prevent from loss and damage on the information in the card, please avoid touching the metal plate area and keep the SIM far from electric and magnetic field. You can not enter the GSM network as the SIM card damages.

Warning: Before taking out SIM card, the mobile phone must be turned off. It is absolutely prohibited to insert into or take out SIM card when the phone is connecting to external power, otherwise SIM card may be damaged.

1.2.2 Insertion of SIM card

Generally SIM card is put into a card, and it must be taken out carefully before installation.

- Turn off the mobile phone and remove the battery and other external power.
- Insert SIM card into the bottom of lugs and ensure the metal plane area is downward and the position of its corner is the same as which of clamping slot's corner;
- Push SIM card , lock SIM card and install the battery;
- If you need take out SIM card, please first turn off mobile phone and take out the battery, then remove SIM card.

1.2.3 Unlocking of SIM card

To prevent from illegal use, SIM card adopts PIN (personal identification number) code to encrypt for protection. When this function is selected (refer to section 4.5.1), each time you turn on the mobile phone, you must input PIN code to unlock SIM card for sending or answering calls. A user can also relieve SIM card protection (refer to section 4.5.1). In this case, SIM card is not prevented from illegal use.

- Long press **Pwr** to turn on the mobile phone;

- Input PIN code, tap **OK** to confirm. For example: if PIN is set as 1234, then input as following: **1** **2** **3** **4** **OK**. If you continue inputting wrong code for three times, then your SIM card will be locked. The mobile phone will query PUK code. (Please refer to the instruction of SIM card.)


Note: Your network operator will set a standard PIN number (from 4 bits to 8 bits) for your SIM card; you should change it to your private password as rapidly as possible. Please refer to section 4.5.4

1.2.4 Connection to network


After SIM card is decrypted successfully, the mobile phone will search your registered network or local available network automatically (It will display “network is connecting, please wait for a while” in the screen). Once the connection is successful, the network sign for the network operator will appear on the top of the screen. At present, your mobile phone is in idle status; you can send or answer calls.

1.3 Insertion of memory card


Before inserting, please push the memory card block as the direction on it, then open it as follows:

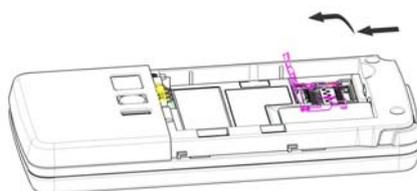

Insert the memory card as follows:

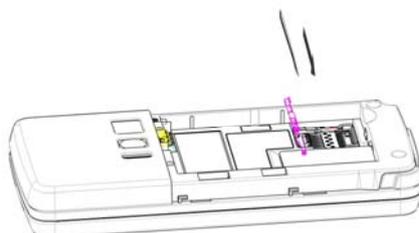

Close the card block as follows, and then lock it:

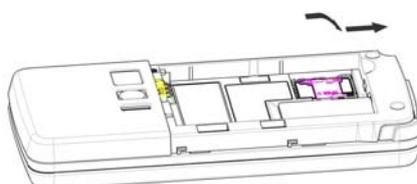

1.4 Idle screen and content

You can get the information needed via the indication and sign on the idle display screen.

	Current signal intensity
	GPRS applied (related with SIM card)
	Unread messages in indicate bar
	Unread WAP PUSH messages in indicate bar
	Messages memory is full


	Mobile memory is full
	MMS on the Phone is full
	SIM card memory is full
	WAP push messages is full
	Insert T-flash card
	Current Phone mode is Meeting mode
	Current Phone mode is Car mode
	Current Phone mode is pocket mode
	Current Phone mode is Personal mode
	Current Phone mode is Offline mode
	Start call filter
	Missed calls in indicate bar
	Indicate a universal Call diversion is set
	Indicate a CSD connection
	Indicate Schedule to come
	Indicate alarm clock to ring
	Alarm has been set
	Missed calls in idle
	Unread messages in idle
	Current battery capability left
06/06/06 (二)	Indicate the current date is June 6 th , 2006, Tuesday.
22: 22	Indicate the current time, which can be set as a 24-hour or 12-hour format. (It can also display time in foreign counties, which you have to change the setting.)
中国移动 (CMCC)	Indicate the network operator

Note:

1. Use the touchpen to tap the screen for entering the interface of dial plate, input number to make a call, etc;
2. Use the touchpen to tap the date on screen for entering the window of schedule to operate correspondingly;
3. Use the touchpen to tap the time on screen for entering the window of date to operate the date, time, alarm and world clock.

1.5 Keys

The index of function for keys is illustrated as following:

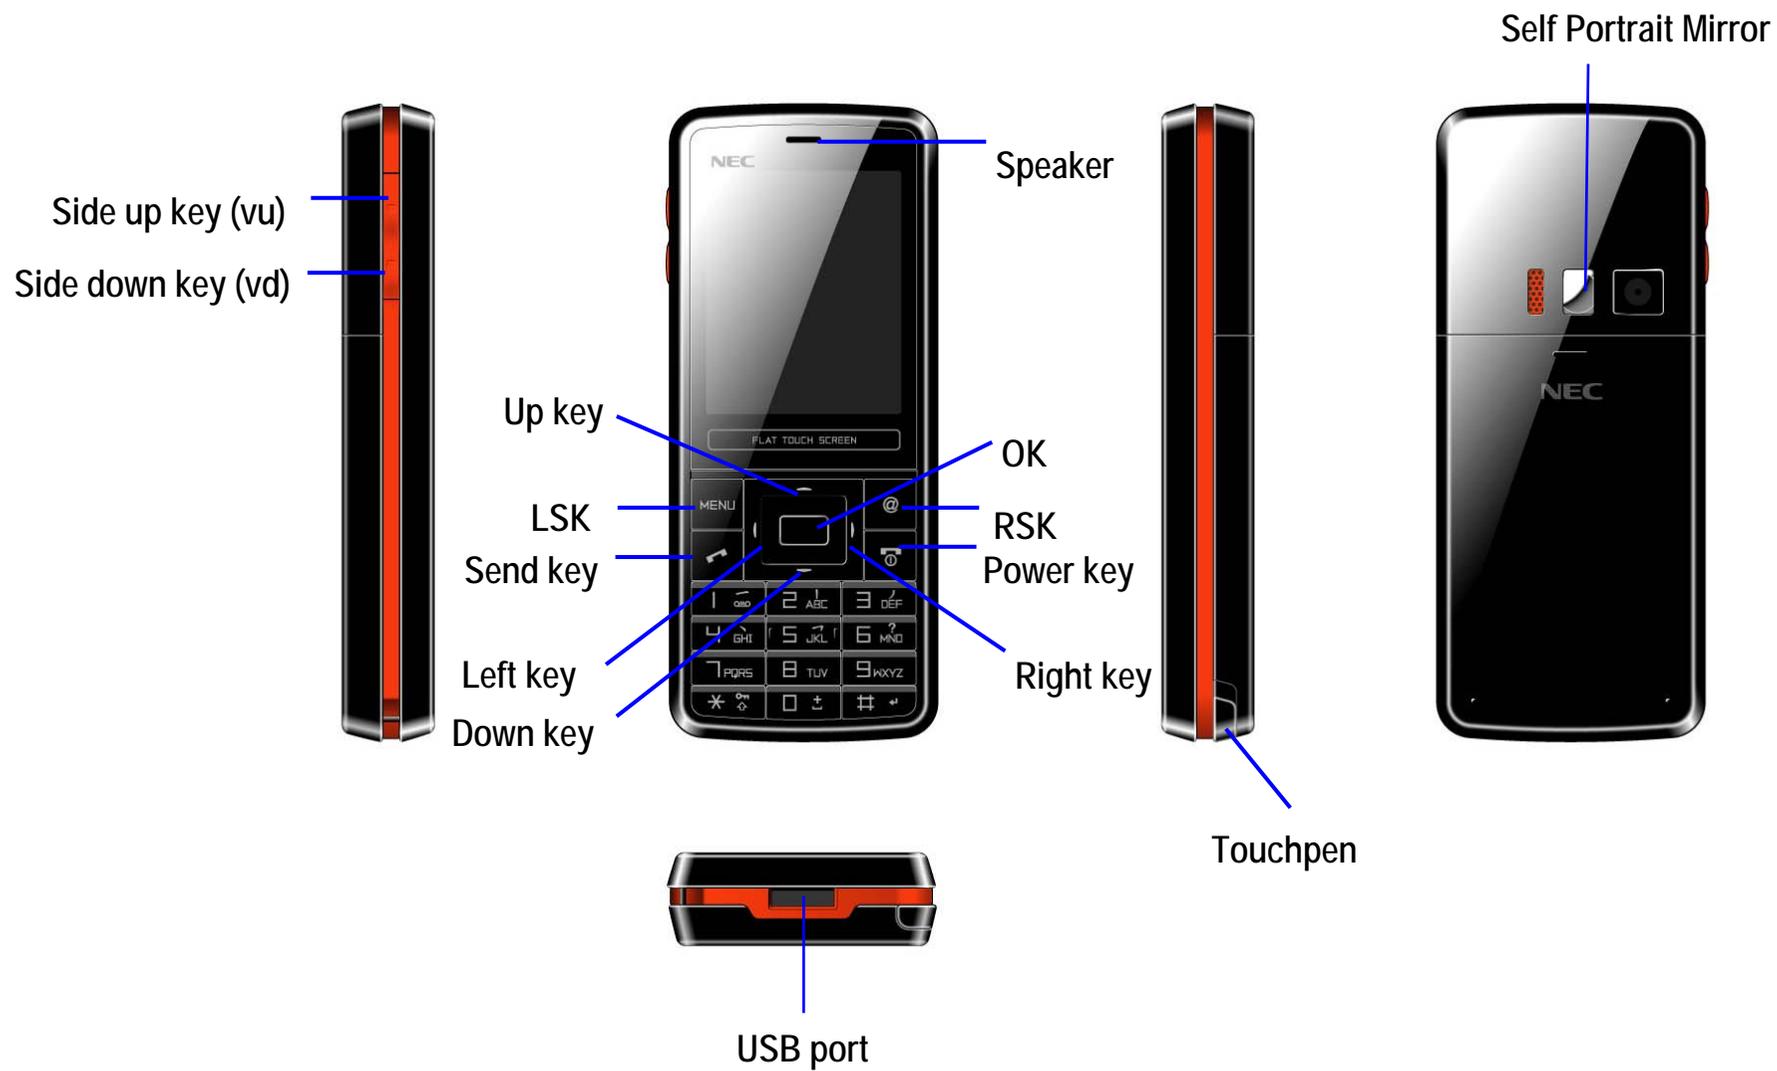

LSK	Conform, select, pop-up menu or activate select menu of input method u in the edit state
RSK	Cancel, delete, back, back to previous menu; Short press to enter internet on the idle screen
Up key	Move up, page up and on the idle screen : short press: enter phone modes; long press: switch meeting mode /last mode
Down key	Move down, page down and enter My favorites on the idle screen
Left key	Move left, page up/down and on the idle screen: short press to SMS window; long press to enter create SMS window
Right key	Move right, page up/down and short press to enter Phonebook on the idle screen
Side up key	Move up; short press to quickly mute the ring tone of incoming calls; short press to increase the volume of receiver; short press to scroll highlight or page down; short press to enter the screen of adjusting the volume of ring tone in the idle; long press to enter Camera in the idle
Side down key	Move down; short press to quickly mute the ring tone of incoming calls; short press to decrease the volume of receiver; short press to enter the screen of adjusting the volume of ring tone in the idle; short press to scroll highlight or page down
Send key	Dial out; answer incoming call; press send key to enter call history(press left/right key to switch type of call record)
Power key (Pwr)	Power on /off, hang up calls, terminate (return to idle screen)
* key(*)	Input * in dial screen; long press to turn on/off phone lock in the idle; switch input method in the editing; short press to select all content on the current page in the multi-select window.
# key(#)	Short press to activate symbol input and long press to next line in the editing; long press to input P in dial screen; short press to cancel all in the multi-select window.
0—9	Input number or word; long press to perform quick dial on the idle screen; short press to realize corresponding function in menu mode
OK	Events icon on the idle screen :short press to view information; long press to enter music player ; No events icon on the screen :short press to enter My menu; long press to enter music player.
0	Long tap to input + in dial screen; input space and some symbols in the editing; press 0 to enter my number window in the main screen
1	Long press to enter voice mail on the idle screen; enter settings in the main screen
2	Enter Multimedia in the main screen
3	Enter WAP in the main screen
4	Enter My favorites in the main screen
5	Enter Messages in the main screen
6	Enter Phonebook in the main screen
7	Enter Entertainment in the main screen
8	Enter Call history in the main screen
9	Enter Accessory in the main screen
Lock key	Long press to enable or disable Phone lock

When the alarm and schedule times out or missed call and unread messages (including WAP PUSH messages) prompt in the idle, the idle will display the corresponding icon (refer to section 1.4), use the touchpen to tap the corresponding icon to view the content directly. You can hold down **OK** key to access My menu. The options for My menu can be set in Settings - My menu.

Note: In this user manual, “tap” means to tap the screen down then release, while “long tap” means to tap the screen for more than 1seconds then release.

1.6 Input message

In order to make it convenient to input the characters in the phone, input methods as handwriting are specially built in N5106 mobile telephone, which makes you look up the relevant characters with less times of key-tapping.

1.6.1 Keyboard input

1.6.1.1 Number and character input

Key	Capital character	Lowercase character
1	@ 1 , ; : ? ! ()	@ 1 , ; : ? ! ()
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	. 0 -	. 0 -
*	*	*
#	Change case #	Change case #
	In text entry screen ,short press to activate symbol mode; long press to enter next line/ In standby screen or when making a call, hold down to insert the pause symbol P.	In text entry screen, short press to activate symbol mode; long press to enter next line / In standby screen or when making a call, hold down to insert the pause symbol P.

1.6.1.2 Switch the input methods

When you want to input characters, you must choose a kind of input method firstly. If you want to choose the appropriate input method, please press:  key.


The input methods built-in the microphone include as follows:

- Chinese stroke input law
- Chinese spelling input law
- 123
- T9 En
- ABC
- abc

The corresponding icon to input law is showed on the lower-left corner of the screen. Tap  switch to input method of handwriting

1.6.1.3 Stroke input law

The icon of stroke input law is:

 

Under the status of stroke input law, you may input the Chinese character according its stoke. Under this status, each key represents the stroke as follows:

Key	Corresponding stroke	Key	Corresponding stroke
1	Horizontal	4	Right-falling
2	Vertical	5	Horizontal and turning
3	Left-falling	6	? (Omnipotence key represents any stroke) hook

According to the Chinese character sequence, press the corresponding number key to carry out the stroke input. The stroke clue is showed on the lower-left corner of the screen and the candidate Chinese characters appear in the bottom row. Press **OK** or **0** to conform inputting.

You can press **U** key or **D** key to look over the candidate Chinese character across pages and use **L** key or **R** key to find out the Chinese character you need and then press **OK** key to input this Chinese character.

Phrase input: after you input the Chinese character, the corresponding Chinese characters will appear on below the screen for you to choose to make up phrase that you need.

During the input stroke, you may press **6** key to input “?” for replacing the unknown stroke. For example, when you want to input “好”, but don’t know how to input the first stroke “<”, you may press **6** key for replacing it. At this time, the interrogation mark will appear as the stroke clue. Then you can press the corresponding number key **3** (left-falling), **1** (horizontal), **5** (horizontal and turning) to the residual strokes according to the stroke sequence. You will see the Chinese character “好” appear in the candidate Chinese characters area. Press the **OK** key or press **2** key for confirmation and finish the input.

1.6.1.4 Chinese spelling input law

The icon of spelling input law is:



The spelling input law provided by this mobile telephone is intelligent. So it has fewer keys. When using the spelling input law, you only need to press the number key with the letter and input the spelling letters of Chinese characters wrote. The spelling on the screen will change along with it continually. You may press **L** key or **R** key to choose the spelling you need, press **U** key or **D** key to look over the spelling options across pages and press **OK** key, **0** key or corresponding number key to confirm your selection. At this time, the black cursor will appear on the candidate Chinese character. You may also press **U** key or **D** key to look over the candidate Chinese character across pages and press **OK** key to choose the Chinese character you need. At this time, the Chinese character you need will appear in the text input area.

The spelling input law is a intelligent input method. When finishing inputting, common word related to inputted character will appear in the select area. After selecting character may compose word quickly that increases input speed. When inputting new character, press number key directly character in candidate area will be updated automatically.

For example, inputting the “科”, you only need to press number key **5** and **3** (you may see the corresponding spelling letter on the keyboard), then press **R** key to choose the spelling “ke”. After you press **OK** key or **0** key for confirmation, the cursor will appear in the Chinese character selected row. Press **R** key to choose the Chinese character “科”. After press **OK** key, **0** or press corresponding number key to confirm your selection, the Chinese character “科” will appear in the text input area. (ü corresponds to V on the number key)

1.6.1.5 Number input law

The icon of number input law is:



The number input law is very convenient for number input. Input 0-9 ten numbers through — keys. You only need to press the corresponding number key in order to input the number.

1.6.1.6 English small letter input law

The icon of English small letter input law is:



Under the status of English small letter input law, press the number key once for the first letter on the key and twice for the second letter and analogize sequentially. If the inputted letter and the first letter are on the same key, please wait for the cursor to appear again and then input the new letter. For example, if you want to input “OK”, you only need to continuously press the number key three times for “O”, then continuously press the number key twice for “K” and the input is finished.

1.6.1.7 English capitalization input law

The icon of English capitalization input law is:



The detailed operation procedure is the same as one of English small letter input law.

1.6.1.8 Intelligent English input law

The icon of Intelligent English small letter input law is:



The Intelligent English small letter input law has the same intelligence as the spelling input law. Use number keys to input the corresponding letter. Each letter can be inputted through pressing the key only once and the word on the screen will change along with it. You may press key or key to choose the candidate word or key or key to look over the candidate words across pages and then 按 key to confirm your selection. At this time, the words you select will appear the text input area. For example, if you want to input “OK”, you only need to press the number key and (you may see the corresponding letter on the keyboard). Then you will see the word “OK” to appear in the candidate area for word. Press key to confirm your selection and finish the input.

1.6.1.9 Symbol input law

Press key to activate the symbol input law, which is used to input various kinds of symbols conveniently. When choosing the symbol input law, thirty-six symbols will appear on the screen. You may press up, down, left, right key to choose the symbol. After you find out the symbol you need, press key or key to finish the symbol’s input. When you press key again, exit the symbol input law and back to the input law you used at last time automatically.

1.6.2 Input method of handwriting

1.6.2.1 Input method of handwriting

Input method of handwriting is the main method to input character for this mobile phone, which adopts the advanced technology of character identification, so as to make you input Chinese and English in full screen conveniently and quickly.

Tap the icons of corresponding input methods to switch proper input method among Pinyin, Stoke, English/Number, Symbol and Handwriting. Tap  to switch to keyboard input method.

◆ Handwriting Chinese

Before use input handwriting Chinese, confirm the type of character first. Tap “”, and the cursor will display the current input position. Use the touchpen to write in the input area, pause for a while and the screen will automatically display the character identified, and spare character will display in the selected area. If the character displayed on the screen is not you required, tap the character in selected area to replace. This mobile phone has the function of intelligent Chinese, in detail that tap the spear character on the screen, it will display the second character formed with the first one usually. Tapping the second character directly will input it.

◆ Handwriting English

Except Handwriting Chinese, you can use Handwriting English to input English. Tap “” to complete the input.

◆ Handwriting number

Except Handwriting Chinese, you can use Handwriting number to input number. Tap “” to complete the input.

1.6.2.2 Input of Pinyin

When edit, tap “” to select input Pinyin, and use the touchpen to input Pinyin, then choose from the selected area, it will display in the input area; If the character displayed in the selected area is not you required, tap the arrow on the right side to flip pages for select other characters, then tap the character selected, it will display in the input area. Pinyin has the intelligent function as Handwriting Chinese. After select the handwriting character, the character that can usually form the words will display the selected area, which quickens the input speed with selecting the related characters. When write on the screen again, the character in the selected area will renew automatically.

1.6.2.3 Input of Stroke

When edit, tap “” to select input Stroke. During the process of inputting, tap “?” to input “?” for substituting the unknown strokes. Take “好” as an example, if you do not know how to input the first stroke “<”, you can tap “?” for substituting. At this moment, Stroke prompts the question mark, then tap the number of rest strokes as their order, you will see the character “好” displays in the selected area, and

tap “好” to complete the input.

1.6.2.4 Input of English and number

When edit, tap “” to activate the input panel of English and number. Directly tap to complete the input. Tap  to switch between capital letter and small letter. Directly tap the number in the display area to complete the input.

1.6.2.5 Input of Symbol

When edit, tap “” to select input Symbol. During the process of inputting, use the touchpen to tap the symbol in the table, it will appear the position of cursor. Tap “” and “” for more symbols; tap “” and “” to lock/unlock the input screen. When locked, you can input more than one symbol in this screen, or only can input one symbol.

2 Dial and answer the phone

After the setting of mobile phone is completed, you can dial or answer phone. This section will provide all basic information you needed.

Note: when using the earphone, please insert and pull carefully to avoid damaging the hole of earphone

2.1 Turn on/off phone

1. Under the status of phone power off, long press **Pwr** key to turn on phone, then the starting animation appears.
2. If PIN code is required, please refer to section 1.2.3.
3. In the status of power on, long press **Pwr** key to turn off phone.

2.2 Make a phone call

When the sign of network operator appears on the display screen, the phone enters the idle screen, and then you can dial or answer calls. The indication bar on top right corner of screen displays the intensity of network signal (Four level bars mean the strongest signal). The barrier has great influence on the quality of talking, so moving in a small range can enhance the intensity of signal effectively.

There are multiple dialing modes from idle screen, namely: direct dial, phone book dial, quick dial and SIM card dial.

2.2.1 Direct dial

Dial the domestic phone

The simplest way to make a call is to press the number key to input the phone number (If it is domestic long-distance call, the area code is needed.) then press **Send** key or **OK** key to call. While dialing, the screen will display the name and number. After the call connected, it displays the call time, the phone number and name of the other side.

After inputting the phone number via press the number key, directly tap **Send** or press **OK** to call; tap **Option** to activate the menu as following:

Select **Call** to call out telephone;

Select **IP dial** to insert IP number in the front of the phone number then dial out (The function is needed to set before use, and refer to section 4.4.8);

Select **Save** to save the telephone number (Refer to section 9.3 for detailed operation);

Select **Start countdown** to start the countdown (Refer to section 12.8 for detailed operation);

Select **Send SMS** to enter short message edit screen and complete the corresponding operation (Refer to section 8.2.1 for operation on function of short message);

Select **Send MMS** to enter MMS edit screen and complete the corresponding operation (Refer to section 8.2.2 for operation on function of short message).

After talking, press **Pwr** key to hang up the phone. The phone will display the call duration for this time.

Dial the fixed extension telephone

Some fixed extension telephone can not directly be dialed. You need to connect the main line first then dial the extension number. If you insert symbol “P” between the main number and the extension number when inputting the number, the phone will make the call for you and dial the extension number automatically. The method to input “P” is: long tap **#** (which will be displayed on your screen). You can input more than one “p” to increase the duration of inputting the extension number.

Dial international phone call

When dialing international phone call, you only need input the symbol “+” (Long tap **0** key until the symbol “+” displays on the display screen.), then input the country code and whole telephone number.

For example: if making a phone call to France, you need long tap **0** key until the symbol “+” appears, then input the country code of France “33” and whole telephone number.

2.2.2 Make a phone call from phonebook

In the main screen ,select Phonebook or press **Right** key to enter phonebook. Activate **Option** to select “find”, find corresponding person and select corresponding phone, then tap **Send** to dial out phone.

2.2.3 Quick dial

Quick dialing is also called abbreviated dial, you can respectively set 8 number keys as telephone number (refer to section 4.4.4 on setting).

In idle screen, long press the number keys from 2 to 9 which are set as quick dial to automatically dial corresponding set phone number. If the selected number key is not set as quick dial, the mobile phone will prompt “Phone number is empty”.

2.2.4 SIM card dial

In dial panel screen, tap number and **#** in turn to dial from SIM card. That is the phone number stored at the corresponding position in SIM card will display automatically. Directly press **OK** or **Send** key to dial out phone.

2.2.5 Unsuccessful calls

The phenomena of unsuccessful calls may appear during the dialing, for example: the line is busy, reject the call, the phone of other side is not within service area or the phone of other side is power off, etc. the phone will prompt “Call failed”. At this time if you set auto redial (refer to section 4.4.3), the phone will automatically redial, and the system will prompt “Continue?”. Press **OK** key or tap **Call** to redial or redial without operation for a while, and tap **Stop** to cancel it.

2.3 Answer the call

When a new call comes, tap **Answer** to answer the call.

After talking is over, press **Pwr** key or tap **Reject** to hang up the phone.

During the talking, the phone will prompt new call by short sound. At this time you can tap **Answer** to answer new call; moreover the previous call will become hold status. Please refer to section 2.4.4; if do not want to answer, you can press **Pwr** key or tap **Reject** key to reject the call.

2.4 During the talking

During the talking, activate **Option** :

Select **Hold** to keep current communication (related with SIM card), at this time both parties can not hear voice, meanwhile **Hold** menu change to **active**, select this menu and return to normal communication.

Select **Record** to transcribe current call content. When you are transcribing, the menu changes to **Stop recording**, select this menu to stop recording.

Select **Mute** to pause voice of current talking, at this time you can hear the voice of other side, but it can not hear your voice, which facilitates you to talk with other local person to during the talking. The menu changes to **Unmute**, select this menu to return to normal talking;

Select **Switch to BT**: talk with BT earphone. After selecting “**switch to BT**” ,this menu changes to “**switch to phone**”

Select **New call** to make the second phone call, or press number keys to make a new call during the talking, then press **Send** key to dial out phone;

Select **Phonebook** to enter phone book screen, and implement the corresponding operation, which facilitates to search a phone number during the dialing;

Select **Create SMS** to enter new short message screen and complete the corresponding operation (refer to section 8.2.1).

When dialing the extension, after hearing the prompt voice of the other side, directly dial the extension number, and only extension number displays on the screen. When extension dialing completed, tap **Back** to display the number of switchboard.

During the talking, tap **Handfree** to talk in speak, at this moment, **Handfree** becomes **Receiver**, tap **Receiver** to resume the normal talking.

2.4.1 Adjust volume

Press side up/down key to increase or decrease the receiver volume. The key position refers to the picture within section 1.5.

2.4.2 Reject the call

Press **Pwr** key to end the call. After the rejection, the duration of talking will display.

2.4.3 New message

During the dialing phone, if there is new message, the phone will have prompt voice to remind you.

2.4.4 Answer the new call

Refer to section 2.3 for the operation and content of answering the call, the different point is that after answering a new call, the previous call will keep hold. The previous talking can be activated by tap **Active**, and the new call will keep hold. Refer to section 2.4.5 for operation about answering two calls simultaneously.

2.4.5 Answering two calls simultaneously

When answering two calls, the current talking number displays at the first line, the other call will keep hold; two calls can be switched by tapping **Active**, or **Hold**

When the second call is active, activate **Option** and implement the following functions: Switch,End, End all, Record, Mute , **Switch to BT**, Conference (related with SIM card), Phonebook and Create SMS.

Select **switch** to switch communication;

Select **End** to reject current talking, so does press **Pwr** key;

Select **End all** to reject all talking;

Select **Record** to dial operation , the phone will record automatically once call connected, so does

directly tap record icon on the talking screen after call is connected.

Select **Mute** to pause voice of current talking, at this time you can hear the voice of other side, but it can not hear your voice, which facilitates you to talk with other local person to during the talking. The menu changes to **Unmute**, select this menu to return to normal talking.

Select **Switch to BT: talk with BT earphone**. After selecting “switch to BT” ,this menu changes to “switch to phone”

Select **Conference** to hold conference call or talk with the specified participant separately.

Select **Phonebook** to enter phone book screen, and implement the corresponding operation, which facilitates to search a phone number during the dialing.

Select **Create SMS** to enter new short message screen and complete the corresponding operation (refer to section 8.2.1);

During the talking, tap **Speaker** to talk in handfree, at this moment, **Speaker** becomes **Receiver**, tap **Receiver** to resume the normal talking.

2.4.6 Conference

During the conference talking, conference call can be held or talk with the specified participant separately. Tap **Option** to complete: Hold, Record ,Mute, **Switch to BT**, New call, Conference list, Phonebook and Create SMS.

Select **Hold** to hold the current talk (related with SIM card), at this time both parties can not hear the voice, meanwhile the menu changes to **Active**, select this menu to return to normal talking; or directly tap **Active** or **Hold**;

Select **Record** to dial operation , the phone will record automatically once call connected, so does directly tap record icon on the talking screen after call is connected.

Select **Mute** to pause voice of current talking, at this time you can hear the voice of other side, but it can not hear your voice, which facilitates you to talk with other local person to during the talking. The menu changes to **Unmute**, select this menu to return to normal talking;

Select **Switch to BT: talk with BT earphone**. After selecting “switch to BT” ,this menu changes to “switch to phone”

Select **New call** to make the second phone call, or make a new call during the talking, then press **Send** key to dial out phone;

Select **Conference list** to enter the window of conference list, tap **Option** to activate , which may **End** and **Split**, select **End**, end the talking with all members; select **Split**, split the member selected from conference talking;

Select **Phonebook** to enter phone book screen, and implement the corresponding operation, which facilitates to search a phone number during the dialing.

Select **Create SMS** to enter new short message screen and complete the corresponding operation (refer to section 8.2.1).

If a new call comes during the conference talking, please refer to section 2.4.4 for processing.

2.5 Emergency call

In any country using the digital GSM network, if your phone is within the area covered by network (it can be aware by checking network signal intensity on top right corner of screen.), you can call the emergency service. if your phone is within the area covered by network, you can make an emergency call even you have not SIM card.

”112” is a standard emergency number of GSM, which can be used in any GSM network of the world.

3 Menu operation

This section will help you get to know the function and structure of the mobile phone's menu, and in detail explain how to user-define the functions of mobile phone for meeting your needs, moreover represent you how to use basic operation function.

3.1 Structure of main menu

The function menu of the mobile phone contains: Settings, Multimedia, WAP, My favorites, Messages, Phonebook, Entertainment, Call history and Accessory.

3.2 Selection of main menu

In the menu screen, tap the menu icon or press **OK** to enter the corresponding menu.

3.3 Other selection modes

In the idle screen, all function keys define the special menu function, which facilitates you to directly enter menu function, illustrated as following:

Note: if the phone is locked, unlock it before use.

The default shortcut keys of special function are as follows:

Function key	Items of function menu
LSK	Enter function menu
RSK	Enter Internet
Up key	Short press: enter phone modes Long press: switch meeting mode /last mode
Down key	Enter my favorites
Left key	Short press: enter SMS Long press: create SMS
Right key	Enter phonebook
Side up key	Short press: adjust the ring volume Long press: enter Camera screen
Side down key	Adjust the ring volume
OK	Short press: enter my menu Long press :enter music player
Send key	Enter call history screen
Power key	Short press: Return to idle screen; long press : power on/off
Long press 	Enable/Disable key lock
Long press  - 	Quick dial; enter menu in menu mode(Note: long press 1 to enter voice mail on the standby)
Number + 	Dial fixed number on SIM card

3.4 Function table of menu

Settings

Phone
Phone modes
Display
Calls
Security
Network service
My menu
Connection profile

	Calibration Reset
Multimedia	Camera Music player Video player FM radio Voice recorder painter
WAP	Homepage Bookmark Go to URL Go to last page History Offline browse Settings GPRS info
My favorites	Videos Sounds Pictures Music Memory card Format Storage status
Messages	Create Inbox Outbox Sent Drafts My folder Email Voice mail
Phonebook Entertainment	Java box
Call history	Outgoing calls Received calls missed calls
Accessory	Alarm Schedule Notepad Calculator Dictionary Currency World clock Countdown Stopwatch Unit converter Connection tools SIM application

4 Settings

4.1 Phone

“Phone” is to set the service status of mobile phone, which includes Receiver volume, Any key answer, Date & Time, Language, USB mode and Side key lock.

4.1.1 Receiver volume

Press side up/down key to increase or decrease the receiver volume. The key position refers to the picture within section 1.5.

4.1.2 Any key answer

To set any key answer (Except for Power key ,RSK and Side key).

4.1.3 Date & Time

To set the time, date and corresponding format, use side up/down key to select the content, press **OK** or tap the content needed to modify to enter the corresponding window for modification:

Show clock: time displays in the idle;

Local time: Set local time;

Remote time: Set remote time;

Time format: Adjust the format of the time;

Date: Input the correct date;

Date format: Set the format of the date.

Time zone: Set time zone entering World clock.

4.1.4 Language

In the window of “Language”, there are two choices namely simplified Chinese and English, use side up/down key to select content, finally tap **Select** or press **OK** key or tap the corresponding menu, confirm the content needed to modify; tap **Back** to cancel the content selected.

4.1.5 USB mode

There are two modes: Modem mode and UDisk mode.

Modem mode: Enable Modem mode, and then the system can be used for data synchronization and modem but U-disc is disabled..

UDisc mode: If you enable the U-disk mode, you phone can be used as a U-disk. However, once you enable this mode, synchronization and modem are disabled.

Note: After switching mode, the system will auto-restart. The new mode can take effect after restart

4.1.6 Auto key lock

Using this function, the side key will lock automatically after each power on to avoid wrong operation.

On/off :set the auto lock on or off. **Auto lock time**: allow to set 10 Sec, 30 Sec and 60sec as auto lock time.

4.2 Phone Modes

Phone modes are a group of preset characteristic definition, which is easy and quick to start. The mobile phone provides a group of default modes including Normal mode、 Meeting mode、 Car mode、 Pocket mode、 Personal and Offline mode. Every mode has a set of default value, and the user can change and save the mode according to ones favorite.

4.2.1 Startup the mode

When select the mode needed, use side up/down to select the content, and tap press **OK** key or directly tap the item to start up, at this moment, the current working mode of mobile phone will set completely according to the selected mode.

4.2.2 Personal Setup

In the screen of mode, tap **Edit** to enter the Personal Setup, which the user can use it to set the parameter of each mode, including the following items:

Ring tone to set the ring tone of incoming calls among Sounds and Music, Enter the screen of sound, tap **Play** to play the ring tone selected, tap **Stop** to stop playing; tap **OK** or tap corresponding item to set it as ring tone;

Ring volume to adjust the volume of incoming calls, use side up/down or tap the volume icon to increase/decrease the volume ; tap **OK** or press **OK** key to complete setting, and the phone prompts “Ring volume changed”;

Ring type to set the alert type of incoming calls, for instance: if continuous is expected, only use side up/down to select **Continuous**, tap **Select** or press **OK** key or tap the corresponding menu to confirm the selection, and the phone prompts “Alert tone is set! ”;

SMS tone to set the ring tone of SMS between Sounds and Music, Enter the screen of sound, tap **Play** to play the ring tone selected, tap **Stop** to stop playing; tap **OK** or tap corresponding item to set it as ring tone;

MMS tone to set the ring tone of MMS between Sounds and Music, Enter the screen of sound, tap **Play** to play the ring tone selected, tap **Stop** to stop playing; tap **OK** or tap corresponding item to set it as ring tone;

Msg volume to adjust the volume of messages, use side up/down or tap the volume icon to increase/decrease the volume ; tap **OK** or press **OK** key to complete setting, and the phone prompts “Ring volume changed”;

Key tone to set the key tone on/off;

Alarm volume to adjust the volume of alarm, use side up/down or tap the volume icon to increase/decrease the volume ; tap **OK** or press **OK** key to complete setting, and the phone prompts “Ring volume changed”;

Power on/off tone to set the tone of power on/off;

Vibrator to set the vibrator of power on/off;

SHF auto answer to set SHF auto answer on/off(available for plug in earphone).If selecting On,the system will auto answer when there is a incoming call;if no,the function is disabled

4.3 Display

Display includes: Wallpaper、Color style、Brightness and Backlight time。

Wallpaper to choose the favorite pictures as wallpaper from preset, photos, painter, download and pictures in card.Tap **Preview** to view the picture, press **OK** key to view the picture in full screen, press side up/down key to view the previous or next picture.Tap **Back** to previous menu.In the screen of picture view, activate **Option** to do the operation of *Full screen view* ,*Auto view* ,*Set as wallpaper* and *property*;

Color style : There are four choices to select, use side up/down key to select view the effect when setting, finally tap **Select** or press **OK** key or tap the corresponding menu, confirm the content needed to modify. Tap **Back** to cancel the content selected;

Brightness: to set the background brightness among High, Normal,and Power saving, after selecting , tap **Select** or press **OK** tap the corresponding menu, confirm the content needed to modify。 Tap **Back** to cancel the content selected;

Backlight time to set the background Backlight time among 5 Sec, 10Sec,15 Sec,,30 Sec and 60 Sec, tap **Select** or press **OK** key or tap the corresponding menu, confirm the content selected。

4.4 Calls

“Calls” is to confirm whether to use the call function or not. When entering the function, it will always show the practical setting.

4.4.1 Call diversion

“Call diversion” is to transfer calls to the specified phone according to your request.

Within the setting of “Call diversion”, its success depends on network and SIM card. Mobile phone will prompt the setting properly.

When setting the option, you need to input the correct phone number for correctly transferring the call to the specified phone. If it is failed, please check the transferred number set in the mobile phone is correct or not.

Unconditional when the option is set, all calls will be transferred to the specified number;

Busy when the option is set, the incoming call will be transferred to the specified number when your mobile phone is busy;

No Reply when the option is set, the incoming call will be transferred to the specified number when you do not answer the call;

Unreachable when the option is set, the incoming call will be transferred to the specified number when you are not in the service area (For example, when the network signal is not good or the signal environment is very poor);

Cancel diverts to select the call diversion which is needed to cancel, tap **Select** or press **OK** key to cancel the diversion, press **Back** key to the return the last menu;

Status to view the diversion status of all current calls.

4.4.2 Call waiting

“Call waiting” is to set whether permitting the call waiting or not. If it is closed, the phone is busy. For

example, when the third part is calling and it hears the busy tone.

4.4.3 Auto redial

“Auto redial” is to set whether permitting to redial automatically or not. Select **On** the system will redial when the dialed call does not get through; select **Off** the system will not redial when the dialed call does not get through.

4.4.4 Quick dial

“Quick dial” can be set in the mobile phone. This is to use the number key of 2~9 to represent different phone number. When using on the idle screen, long press some certain number of 2~9 to dial the corresponding number. If the number key is not set with the phone number, the mobile phone will prompt “Phone number is empty”.

After enter the screen of setting the quick dial, there is different prompt for various situation of setting quick dial according to the number key selected. If the number key has been set as quick dial, the bottom of mobile phone will display the number and contact person specified; if not, it will display “Not bind”.

To bind the number, tap OK to enter the number editing screen for inputting the number manually or get the number from phonebook.

To cancel the binding, tap Delete or press OK to delete the binded number, and then it will prompt.

If a quick dial set, number icon is . If no, icon is .

4.4.5 Minute tone

“Minute tone” is to set the minute prompt on /off. If it is on, there will be minute prompt in the process of call. If off, then there is no minute prompt at all.

4.4.6 Call filter

Call filter can provide you with the prevention from disturbed calls, which has “White list” and “Black list”. “Black list” is to save your undesired calls (30 persons are most) . “White list” is to save your desired calls (30 persons are most) . Only one item can be enabled once.

4.4.7 Send my number

“Send my number” is to select whether displaying your own phone number on the phone of other side or not. The function needs the support of the network provider.

Note: the function needs the support of the network.

4.4.8 IP code

IP code setting: input IP code needed, the preset code is “17951” without setting, and the effect is same with normal call.

4.5 Security

The menu of “Security” includes the following settings: PIN、Phone lock、PIM、Change password、Bar calls。

4.5.1 PIN

On: enable PIN of SIM card。 To power on the phone with inputting PIN code, or dial emergency call 112。

Off: disable PIN of SIM card, To power on the phone without inputting PIN code。

Note:

PIN code is related with SIM card, and is the operating password of SIM card.

The password of mobile phone is the one of it self and not related with SIM card.

For example: After the function has been set up as Mobile Phone Locked (SIM card does not start using PIN code), mobile phone is at the state of being locked. Now only inputting the password, others cannot use when borrowing your mobile phone, but may dial up while insert SIM card into another mobile phone.

When setting up PIN to start and not Mobile Phone Locked, only input PIN code into the mobile phone to use it normally. Or if changing other SIM card, it may be used normally.

After changing the password, please remember the set-up password, or the owner cannot read any important personal information either. Contact with the maintenance server if necessary.

4.5.2 Phone lock

This function is to prevent other person from using the phone without permission. After locking the phone, the password is needed to unlock it. The default is 1234, and you can change it from **Settings - >Security- >Change password**.

At once: select this item, and input the correct password to lock the phone at once ;

Auto: Input the correct password, the phone will lock automatically;

Off: Input the correct password to turn off the phone lock。

4.5.3 PIM

PIM protect is the Personal Information Manager code. You must enter this code before you access important personal information such as Phonebook, Messages, Call History, My favorites, Schedule and Notepad so that it can prevent others from viewing the information without your authorization. The default setting of PIM code is 1234.

On/Off : When PIM code is on, you are prompted to enter the code if you want to view any personal information. When PIM code is off, you do not need to enter the code when viewing personal information and the information will not be protected.

Protected items : to set the protected items, and the correct password is needed。 Enter the screen of protected items, tap the items for protection then tap **OK** to confirm the setting, and the system will prompt.

4.5.4 Change password

PIN: modify PIN password;

Phone/PIM: modify phone/PIM password.

4.5.5 Bar calls

The network operators will provide you with a 4-digit password (1234) to enable or disable this function.

Incoming calls:

- **When roaming:** Reject all incoming calls when roaming.
- **All incoming:** Reject all incoming calls.

Outgoing calls:

- **International:** All outgoing international calls cannot be dialed out;
- **Local calls:** Only local calls can be dialed out;
- **All outgoing:** All calls cannot be dialed out.

Cancel all: Cancel all bar calls. The correct password is needed (The default password is 0000.).

Change password:

- **Change restriction password of call:** You can change the restriction password provided by the network.

4.6 Network service

When your mobile phone is roaming abroad, you need to select the network for it to connect the international GSM network. Generally, you can select the network mode of auto select (see below), or you also can select to search the available network automatically or manually (see below). If you attempt to connect a network which does not have the valid roaming agreement you local network, the mobile phone will prompt "Network connection failed".

Automatic: Your mobile phone will search the original network first, and then search through the network list in SIM card. If there is no available network, any network which has the valid roaming agreement with your local network will be connected

Manual: Your mobile phone will scan for available network and provide you with the list of current network. You can select the preferred network, and the phone will prompt such information as successful or failed during the connection with network.

Preferred network: .to view the name and ID of current network, tap **Back** to previous menu;

4.7 My menu

To enter the window of My menu, and tap **Option**: **Replace**, list the spare items (10 items most), select the item desired to add in My menu, tap **Select** or press **OK** key to confirm adding (Only **Create** is available when My menu is empty.) ; In my menu (Less than 7 items), tap **Option** to:**Insert before** insert before the item selected; **Insert after** insert after the item selected; **Replace**: replace the current item to another one; **Delete**: delete the item selected; **Delete all**: delete all items.

4.8 Connection profile

To set the connection method to visit network, activate **Option**:

Save as: to save the changed connection setting of network as other setting. The system setting will not be covered, and it will prompt;

Profile: to select the connection method to visit network among WAP, MMS and Java;

View: to view the name, homepage and bearer type and so on of current connection;

Tap the connection of non-system setting, and then enter the window of connection setting to complete the following operations:

Profile title: to view or edit the name of profile;

MMSC: look over or edit the number of MMS;

Homepage: to view or change the address of homepage;

Gateway: include **IP address** (for example 010.000.000.172 for CMCC) ; **Port number** (for example 9201 for CMCC); **Connect type:** to select between HTTP and WSP.

Bearer type: to select the bearer type of network visited, use side up/ down key to highlight the type you wanted, tap **Select** to activate it:

◆ GPRS only: only use GPRS network;

◆ CSD only: only use CSD network.

GPRS settings: to change the connection setting of GPRS, select the setting needed to change, tap **Select** to enter corresponding window:

◆ APN: to set the name of network;

◆ User name: user name of network service;

◆ Password: password of network service.

CSD settings: to change the connection setting of CSD, select the setting needed to change, tap **Select** to enter corresponding window:

◆ Dial-up number: dial-up number for network service;

◆ Call type: to set the call type between ISDN and Analogue;

◆ User name: user name of network service;

◆ Password: password of network service.

DNS settings: input DNS address 1 and DNS address 2.

4.9 Calibration

When you feel the phone cannot react accurately after you use the touchpen to tap some place on the screen, calibration is needed, which ensures the touch screen of phone can react correctly for tapping action.

1. on the screen of “Settings”, tap “Calibration” to enter the calibration screen;
2. use the touchpen to tap the center of cross according to the hint. After three times, the screen displays “Calibration OK”.

4.10 Reset

If you enable “PIM protect”, then when you try to reset you phone, it will pop up “Input security password”. Only if you input the correct password can you carry on **Reset settings/Reset all**

4.10.1 Reset settings

“Reset settings” is to resume all original default value. After selecting, the mobile phone will prompt “Reset settings”. After confirming, the system resumes the default value and prompts “Reset setting...”. Using this function will not clear the data of phonebook and message saved by you own. It only changes the

setting of the working environment, such as the selection of ring tone and phone modes, etc.

4.10.2 Reset all

“Reset all” is to resume all original default value. After selecting, the mobile phone will prompt “Reset all? ”. After confirming, the system will prompt “Deleting all …”. Using this function will clear the data of phonebook and message saved by you own. After completion, the phone will power off automatically, and it is needed to restart.

5 Multimedia

5.1 Camera

The use of application program “Camera” may allow you to take photos for the people or event around you at any time, and the changing mode could be made easily across different modes. Photos is saved in the application program of “Photos” within “My favorites”, which could be renamed under the same application, and all photos by Camera are in JPG format.

In case that the remaining storage capacity in mobile phone is insufficient to take new photos, the deletion of old ones is required to release space. For this purpose, you may check the storage state via capacity inquiry.

Note: The preview and the shooting at the place where light is insufficient might decrease the image quality.

Entering the camera shooting screen the image portended to be taken will display on the screen of mobile phone, and tap  or press **OK** key to take the photo; tap  to activate the menu.

Select **Shoot modes**: to set the shoot mode among Single mode, Burst mode and Video mode;

Select **Environment**: to set the shoot environment between Normal, Darkness;

Select **Frame**: Set the frame among five ones when shooting. (only available for Single mode)

Select **Effect**: to set the shoot effect among Normal, Sepia and Monochrome;

Select **Photo size**: to set the photo size among 64×64, 176×144, 176×220, 320×240, 640×480 and 1280×1024;

Select **Image quality**: to set the image quality among Super fine , Fine and Normal;

Select **Self timer**: It is allowable for the self-shooting duration to be 5/10/15/20 seconds or off;

Select **Save place**: to set the save place of photo between Phone and Memory card;


Select **Photos**: to browse the photos on the phone or memory card;

Select **My videos**: to browse the videos on the phone or memory card and perform corresponding operation

Select **Other settings** :you can: Select **Shutter sound**: to make three shutter sounds available for confirmation of the selection by pressing **OK** key; Select **Burst number** : set the continuous shooting number (only available for Burst mode) ;Select **interval** : set the continuous shooting interval (only available for Burst mode) ; Select **Video file size**: to set video file size and allow to set between normal size and mail size(only available for video mode);Select **Show icon** : to set up the open or close of the display icon.; Select **Flicker control**: Set frequency of flicker control including 50HZ or 60HZ;
 Note: In **photo size**, it only supports 176×220 and in Video Mode only 176×144; In **Burst mode** it only supports 176×220. It doesn't supports burst in **photo size**.

During the process of shooting, use side up/down to change the shoot zoom for viewing the part of image in detail and use left /right key to change the brightness.

The icons on the shoot screen are:

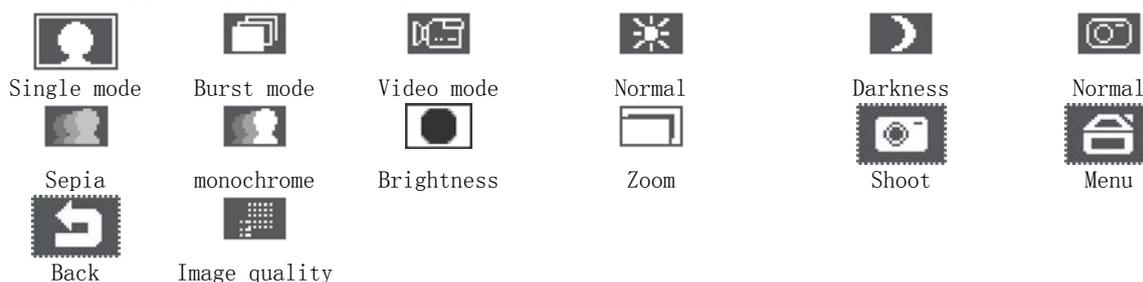

After completing shoot in single mode,tap **Save** to save it and activate **Option** :

Save: Save current photo into designated position;

Send MMS: Send the photo by MMS;

Send Email: Send the photo by Email;

Send via Bluetooth: Send the photo via Bluetooth(refer to section 12.11.1);

Set as wallpaper: Set the photo as wallpaper

Set as CLI: Set the photo as CLI

After completing shoot in Burst mode,activate **Option** :

Save: Save single photo;

Save all: save all photos;

Auto show: Show the photos as slide;

Thumbnall : view the photos as thumbnall,press **single**,view the photos as single .press **back**,the system will clew “Discard ?”select **Cancel** back to the view window ,select **OK** not save photos .

Select the video mode (the phone can also record the sound at the same time) complete shoot ,press **Option** :

Play :play the video ;

Save :save the video .

Note: In video mode,if videos are saved on the phone, video time may vary along with actual spare room of Phone; if on the memory card, video time is 60 minutes.

5.2 Music player

On the play screen, by taping Left/ Right and **OK** or the control key to realize the function control:



Tap **Option** to enter the music lib and play list then by pressing side up/down to select one item tap Select or **OK** to enter into it.

On music lib or play list screen, tap play or press **OK** to play desired item. Tap side up/down key to increase or decrease music volume

5.3 Video player

The handle of Video player the same as Music player.

5.4 FM radio

To listen radio stations with mobile phone, please connect compatible headset to mobile phone first. Headset is the equivalence of radio antenna. So please let it hang on the free. Note that the quality of the radio broadcast depends on the coverage of the radio station in that particular area.

Select Radio, it will prompt "Plug in earphone" when the earphone is not plug in properly.

If it has no channel in "My stations", it will prompt "Auto-search or not?" Press **OK** key to start searching for stations. Search stops when a station is found. At the same time the channel is saved in "My stations" automatically.

Press **Option** now, you can do following operations:

Press "*My stations*" to enter the radio screen.

Select "*Close the station*" to close the station

Select "*Manual search*" to enter into FM searching screen. You can choose channels by pressing "left" or "right" key. After that, press **Option** key, select "*Save*", the station will be deposited into "*My stations*". You could select "*Input frequency*" also, enter, and then input a 4 digit number like: 0876 in "Input frequency" screen. Press **OK** to confirm the input and go back to "*FM search*" screen automatically or press **Delete** to delete what you have input then exit by press **Back** key.

Select "*Auto-search*", to search the channel automatically.

Select "*Delete*", to delete the channel you are listening

Select "Minimize" to make the radio minimum.

What have saved in *My stations* are the channels saved when searching manually and automatically. Scroll to *My stations*, press and enter into "My stations" screen. If you have searched before, channels are shown in screen. Otherwise, channel list is empty.

Press **Option** now, you can do following operations:

Press "*My stations*" to enter in the radio screen.

Select "*Manual search*" to enter into FM searching screen. You can press left or right key to choose the channels you like. After that, press **Option** key, select "*Save*", the station will be deposited into "*My stations*". You could select "*Input frequency*" also, enter, and then input a 4 digit number like: 0876 in "Input frequency" screen. Press **OK** to confirm the input and go back to "*FM search*" screen automatically or press **Delete** to delete what have input then exit the screen by press **Back** key.

Select "*Auto-search*", to search the channel automatically.

Select "*Delete*", to delete the selected channel.

Select "*Delete all*", to delete all the channels which saved in "*My stations*". During the deleting, press **OK** to confirm, or press **Cancel** to cancel the operation.

You can press **Pwr** key to go back to standby display to do other operations.

Notes:

The radio is turned off when there is a call or an active call.

The quality of the radio broadcast might be affected by approaching to objects with radiation such as : TV and computers

5.5 Voice recorder

This function can note by voice into voice recorder window ,activation **Option** :

Select **record**: Select record or tap  or press **OK** key:start record ,then press **stop** or **OK** key to stop record .Press **OK** key again to play the record and **OK** a third time to stop playing .Tap **save** to save the record and tap **Cancel** to return to record screen.

You can hear effect of saved record in My farvorites-Sounds-Voice meno. Please refer to section 7.4 about Sounds operation;

Select **Play list** : into the play list window ,select the recorder which you want to play ,press **Play** or **ok** key to play recorder in the recorder window;

Select **Storage type**: Select phone or memory card to save recorder.

5.6 Painter

You can edit and save photo that you love in the Painter

5.6.1 Picture edit

If you have edited pictures ,names of these pictures will be display in the editing area;if no edited pictures, the editing area is no list.

Tap **Options** to select in the pop-up menu:

Select **Edit** :edit selected picture(available for edited picture);

Select **Create** : enter painter to utilize imagination editing picture;

Select **Open** : open and modify picture on the phone or download;

Select **Delete** :delete selected picture;

Select **Multi-delete** : enter the window of play list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press  to cancel select all) ;

Select **Delete all** : delete all pictures;

Select **Rename** : rename selected picture;

Select **Send MMS** : send picture as MMS;

Select **Email** : send picture as Email;

Selend **Send via Bluetooth** :send picture via Bluetooth;

In the edit window,tap **Option** :

Select **Save**: Save current photo that has edited;

Select **Save as**: Save photo as other name for different modification;

Select **Brush** : Set width of brush-pencil by taping check box before brush;

Select **Palette** : Change color of brush-pencil by taping basic color;Set basic color of brush by taping palette to adjust color;Adjust lightness by taping Lightness.

Finally you can look over current color of brush-pencil in the display area of brush-pencil.

Select **Eraser**: Remove the places that is not be wanted;

Select **Clear**: Remove all content on the painter then reedit content;

Select **Frame** : Set frame for content on the painter. There are 3 frame to be selected;;

Select **Signet**: Add icon and word to the content of painter

6 WAP

The phone has WAP function, which can be used to view Wireless Mark-Up Language (WML) used in webpage, and make you keep close touch with the whole world and provide more convenience to access the web.

To use WAP, you need:

1. Please consult your network operator and service provider whether they provide the service and related information of price and how to use the service;
2. Set WAP explorer correctly on your phone
3. Use WAP explorer to view webpage and make other operations.

The phone has GPRS function which can be used to access webpage by the way of both normal data calling and GPRS based on GSM network.

Note: Using GPRS function to access webpage depends on whether network operator provides the function and whether you apply for it.

6.1 Menu of WAP explorer when offline browse

6.1.1 Homepage

Homepage can make user access internet easily and directly. Scroll to **Homepage** and tap **Select** or press **OK** key to access homepage.

6.1.2 Bookmark

Bookmark is used to save desired websites and set them by names for easily to remember. You can view websites stored in bookmark, and scroll to **Bookmark**, tap **Select** or press **OK** key to enter the window of bookmark; tap **Option** to select **Go to URL** view websites in bookmark, press **Pwr** key to cancel logging on; select **View** to view the title of current bookmark selected and the information of URL; **select Edit to edit the bookmark; select Rest to reset the bookmark as initial content. If the bookmark is not set, only Edit is available.**

Note :you can view NEC's content web to win more pictures ,games and ring tone. The web is

<http://www.necdream.com.cn>

6.1.3 Go to URL

Input desired website, then tap **OK** to view it.

6.1.4 Go to last page

To view the webpage visited for the last time, scroll to **Go to last page to** tap **Select** or press **OK** key to browse this webpage, or directly tap **Go to Last page** to log on the website.

6.1.5 History

To view the history of websites address browsed, tap **Option** : select **Browse** to browse current page; select **Delete**: delete the histry selected; select **Delete all**: delete all history.

6.1.6 Offline browse

During the browse, tap **Option** to select *Save snapshot*, to save the current webpage you browse. When offline browse, tap **Option** to select *browse* to browse the webpage saved; select *Delete* to delete the webpage saved; select *Delete all* to delete all Webpages saved.

6.1.7 Settings

To set Connection profile、Clear cache、Image download、Background music and Security:

Connection profile: enter the window of Connection profile, tap the corresponding item or press **OK** key to activate the profile;

Clear cache: to clear the cache of browse;

Image download: to set the download of images on/off;

Background music: to set the background music on/off;

Security: to set the function of security on/off.

6.1.8 GPRS info

To view the information of GPRS, scroll to *GPRS info*, tap **Select** or press **OK** key to enter the window for viewing GPRS info of sent and received, as well as clearing the history.

6.2 Menu of WAP explorer when online browse

When online browse, tap **Option**:

Add to bookmark: add the current URL as bookmark;

Homepage: browse the homepage which has been set;

Bookmark: enter the bookmark menu to do the corresponding operation;

Go to URL: input the website desired to browse, tap **OK** to browse the webpage;

Refresh: to refresh the webpage for linking again;

Stop: to stop browsing;

Activate **Option**, select *Show URL* display the URL of current webpage, tap **Option** to select *Add to bookmark* add the current URL as bookmark; select *Send URL* send the current URL as message.

select *Save snapshot* save the current webpage for offline browse.

select *Save picture* save the current picture to “My favorites” (It is available only when the cursor is on the picture.)

select *Save music* save the current music to “My favorites” (It is available only when the music is playing.)

Offline browse: to browse the webpage saved offline;

History: to view the history;

Settings: to set the operations including Clear cache, Image download and Background music;

GPRS info: to view GPRS info.

Select **Back** to enter the previous webpage within history; tap **Back** or press **Pwr** key to exit the browser.

7 My favorites

7.1 Multimedia resource

“My favorites” is used to browse, set, and utilize pictures and music resources in the mobile phone, as well as inquire about the capacity. (If PIM security password is set, the correct password is required to enter the window of My Favorite, the detailed content of PIM security password refers to section 4.5.3).

7.2 Usages of resource

The multimedia resource has different usages according to various types.

Picture: used for the background of desktop;

Music: used for all kinds of prompt voices in mobile phone as following:

- ① Incoming calls
- ② SMS
- ③ MMS
- ④ Schedule
- ⑤ Alarm

Note: The prompt voice of system does not belong to this scope except the option of on/off, such as minute tone, etc.

7.3 Videos

7.3.1 Videos

Some videos you shot are saved in videos, press **OK** to view the effect of videos, the detailed operation refers to section 5.3. In the window of play list, tap **Option** to activate the menu:

Select **Rename**: change the name of video selected;

Select **Copy to card**: Copy video to memory card;

Select **Move to card**: Move videos to memory card (Original saved position does not remain moved document.);

Select **Send MMS**: send the video as MMS;

Select **Send Email**: send the video as E-mail;

Select **Send via Bluetooth**: Send the video you desired to others by Bluetooth. (Refer to Section 12.11.1)

Select **Delete**: delete the video selected;

Select **Multi-delete**: enter the window of play list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all)

Select **Delete all**: delete all videos;

Select **Property**: to view the name, date, size, format and DRM of video.

7.3.2 Download

Some sounds you downloaded are saved in Download, enter the window of play list, press side up/down key to select sound, press **OK** to play it. By tap **Option**, you can do operation as follows:

Rename, Copy to card, Move to card, Send MMS, Send Email, Send via Bluetooth, Delete, Multi-delete, Delete all and Property. (Refer to Videos)

7.4 Sounds

7.4.1 Download

Some sounds you downloaded are saved in Download, enter the window of play list, press side up/down key to select sound, tap **OK** to play it. Tap **OK** again to stop it. Tap **Option**:

Select **Rename**: change the name of sound to your own favorite one;

Select **Set as**: After selecting ring tone, set it as ring tone, SMS tone or MMS tone.

Select **Copy to card**: Copy sound to memory card;

Select **Move to card**: Move sounds to memory card(Original saved position does not remain moved document.);

Select **Send MMS**: send the sound as MMS;

Select **Send Email**: send the sound as E-mail;

Select **Send via Bluetooth**: Send the sound you desired to others by Bluetooth.(Refer to Section 12.11.1)

Select **Delete**: delete the sound selected;

Select **Multi-delete**: enter the window of play list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;;

Select **Delete all**: delete all sounds;

Select **Property**: to view the name, date, size, format and DRM of sound.

7.4.2 Preset

Some preset sounds are saved in Preset, enter the window of play list, press side up/down key to select sound, tap desired item or press **OK** key to play it. Press **OK** key again to stop it. Tap **Option**:

Select **Set as**: after selecting, set the sound as Ring tone ,SMS tone or MMS tone.

Select **Property**: to view the name, size, format and DRM of sound.

7.4.3 Voice memo

Some sounds you downloaded are saved in Download, enter the window of play list, press side up/down key to select sound, tap to play it. Tap **OK** to stop it. Tap **Option**:

Select **Rename**: change the name of record to your own favorite one;

Select **Set as**: After selecting ring tone, set it as ring tone, SMS tone or MMS tone.

Select **Copy to card**:Copy record to memory card;

Select **Move to card**:Move record to memory card(Original saved position does not remain moved document.);

Select **Send MMS**: send the record as MMS;

Select **Send Email**: send the record as E-mail;

Select **Send via Bluetooth**: Send the record you desired to others by Bluetooth.(Refer to Section 12.11.1)

Select **Delete**: delete the record selected;

Select **Multi-delete**: enter the window of play list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all records;

Select **Property**: to view the name, date, size, format and DRM of record.

7.5 Pictures

7.5.1 Photos

Some photos you taken are saved in Photos and you can view the effect of photo in this window.

Press side up/down key to select the photo which you want to view, tap **Option**:

Select **View**: view effect of photo;

Select **Rename**: change the name of photo to your own favorite one;

Select **Copy to card**: Copy photos to memory card;

Select **Move to card**: Move photos to memory card (Original saved position does not remain moved document.);

Select **Delete**: delete the selected photo;

Select **Multi-delete**: enter the window of photo list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all photos;

Select **Property**: to view the name, date, size, width, Height, format and DRM of photo.

Tap corresponding item or press **OK** to view the effect of photo, press **OK** to view the photo in full screen, enter the display window, activate **Option**:

Select **Full screen view**: View the selected photo in full screen;

Select **Auto view**: view the photo automatically;

Select **Edit**: Edit photo selected;

Select **Set as wallpaper**: set the selected photo as wallpaper;

Select **Save as CLI**: Save the select photo as CLI;

Select **Send MMS**: send the photo as MMS;

Select **Send Email**: send the photo as E-mail;

Select **Send via Bluetooth**: Send the photo you desired to others by Bluetooth. (Refer to Section 12.11.1)

Select **Delete**: delete the selected photo.

7.5.2 Download

Some photos you downloaded are saved in Download and you can view the effect of photo in this window. Press side up/down key to select the photo which you want to view, tap **Option**:

Select **View**: view effect of photo;

Select **Rename**: change the name of photo to your own favorite one;

Select **Copy to card**: Copy photos to memory card;

Select **Move to card**: Move photos to memory card (Original saved position does not remain moved document.);

Select **Delete**: delete the selected photo;

Select **Multi-delete**: enter the window of photo list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all photos;

Select **Property**: to view the name, date, size, width, Height, format and DRM of photo.

Tap corresponding item or press **OK** to view the effect of photo, press **OK** to view the photo in full

screen, enter the display window, activate **Option**:

Select **Full screen view** : View the selected photo in full screen;

Select **Auto view**: view the photo automatically;

Select **Edit**: Edit photo selected;

Select **Set as wallpaper**: set the selected photo as wallpaper;

Select **Save as CLI**: Save the select photo as CLI;

Select **Send MMS**: send the photo as MMS;

Select **Send Email** : send the photo as E-mail;

Select **Send via Bluetooth**: Send the photo you desired to others by Bluetooth.(Refer to Section 12.11.1)

Select **Delete**: delete the selected photo.

7.5.3 Preset

Some preset photos are saved in Preset, enter the window of photo list, press side up/down key to select photo, tap **Option**:

Select **View**: view effect of photo;

Select **Property**: to view the name, size,width,height, format and DRM of photo.

Press **OK** to view the effect of photo, tap **OK** to view the photo in full screen, enter the display window, activate **Option**:

Select **Full screen view**: view the photo in full screen;

Select **Auto view**: view the photo automatically.

Select **Set as wallpaper**: set the selected photo as wallpaper;

7.5.4 Painter

Some pictures you drawn are saved in Painter and you can view the effect of picture in this window.

Press side up/down key to select the picture which you want to view, tap **Option**:

Select **View** : view effect of picture;

Select **Rename**: change the name of picture to your own favorite one;

Select **Copy to card**: Copy pictures to memory card;

Select **Move to card**: Move pictures to memory card(Original saved position does not remain moved document.);

Select **Delete**: delete the selected picture;

Select **Multi-delete**: enter the window of picture list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all pictures;

Select **Property**: to view the name, date, size, width,height,format and DRM of picture.

Press **OK** key to view the effect of photo, press **OK** key to view the picture in full screen, enter the display window, activate **Option**:

Select **Full screen view**: View the selected photo in full screen;

Select **Auto view**: view the picture automatically;

Select **Edit**: Edit picture selected;

Select **Set as wallpaper**: set the selected picture as wallpaper;

Select **Save as CLI**: Save the select picture as CLI;

Select **Send MMS**: send the picture as MMS;

Select **Send Email** : send the picture as E-mail;

Select **Send via Bluetooth**: Send the picture you desired to others by Bluetooth.(Refer to Section

12.11.1.)

Select **Delete**: delete the selected picture.

7.6 Music

Some music you downloaded is saved in Music, Press **OK** to play music and view the effect of music, the detailed operation refers to section 5.2. In the window of play list, tap **Option**:

Select **Rename**: change the name of music selected;

Select **Set as**: after selecting, set the music as ring tone of incoming calls, SMS tone, MMS tone,;

Select **Copy to card**: Copy music to memory card;

Select **Move to card**: Move music to memory card (Original saved position does not remain moved document.);

Select **Send MMS**: send the music as MMS;

Select **Send Email**: send the music as E-mail;

Select **Send via Bluetooth**: Send the music you desired to others by Bluetooth. (Refer to Section 12.11.1)

Select **Delete**: delete the selected music;

Select **Multi-delete**: enter the window of music list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all music;

Select **Property**: to view the name, date, size, format and DRM of music.

7.7 Memory card

To view the video, picture, and music saved in the memory card.

7.7.1 Videos

Some videos you shot are saved in My video, Press **OK** to view the effect of videos, the detailed operation refers to section 5.3. In the window of play list, tap **Option** to activate the menu:

Select **Rename**: change the name of video selected;

Select **Copy to phone**: Copy video to Phone;

Select **Move to phone**: Move videos to Phone (Original saved position does not remain moved document.);

Select **Send MMS**: send the video as MMS;

Select **Send Email**: send the video as E-mail;

Select **Send via Bluetooth**: Send the video you desired to others by Bluetooth. (Refer to Section 12.11.1)

Select **Delete**: delete the video selected;

Select **Multi-delete**: enter the window of video list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all videos;

Select **Property**: to view the name, date, size, format and DRM of video.

7.7.2 Sounds

Some sounds you downloaded are saved in Download, enter the window of play list, press side up/down key to select sound, tap selected item or press **OK** to play it. Tap **OK** again to stop it. Tap

Option:

Select **Set as**: After selecting ring tone, set it as ring tone、SMS tone or MMS tone.

Select **Rename**: Change the name of sound to your own favorite one;

Select **Copy to phone**: Copy sounds to the phone;

Select **Move to phone**: Move sounds to phone(Original saved position does not remain moved document.);

Select **Send MMS**: send the sound as MMS;

Select **Send Email**: send the sound as E-mail;

Select **Send via Bluetooth**: Send the sound you desired to others by Bluetooth.(Refer to Section 12.11.1)

Select **Delete**: delete the sound selected;

Select **Multi-delete**: enter the window of play list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion。 (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all sounds;

Select **Property**: to view the name, date, size, format and DRM of sound.

7.7.3 Pictures

Some photos you taken are saved in Photos and you can view the effect of photo in this window. Press sideup/down key to select the photo which you want to view, tap **Option**:

Select **view**: view effect of photo

Select **Rename**: change the name of photo to your own favorite one;

Select **Copy to phone**: Copy photos to phone;

Select **Move to phone**: Move photos to phone(Original saved position does not remain moved document.);

Select **Delete**: delete the selected photo;

Select **Multi-delete**: enter the window of photo list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion。 (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: delete all photos;

Select **Property**: to view the name, date, size, width, height, format and DRM of photo.

Press **OK** key to view the effect of photo, press **OK** key to view the photo in full screen, enter the display window, activate **Option**:

Select **Full screen view**: View the selected photo in full screen;

Select **Auto view**: view the photo automatically;

Select **Edit**: Edit photo selected;

Select **Set as wallpaper**: set the selected photo as wallpaper;

Select **Save as CLI**: Save the select photo as CLI;

Select **Send MMS**: send the photo as MMS;

Select **Send Email**: send the photo as E-mail;

Select **Send via Bluetooth**: Send the photo you desired to others by Bluetooth.(Refer to Section 12.11.1)

Select **Delete**: Delete the selected photo.

7.7.4 Music

Some music you downloaded is saved in Music, tap **OK** to view the effect of videos, the detailed operation refers to section 5.2. In the window of play list, tap **Option**:

Select **Set as**: After selecting, set the music as ring tone of incoming calls, SMS tone, MMS tone,;

Select **Rename**: Change the name of music selected;

Select **Copy to phone**: Copy music to phone;

Select **Move to phone**: Move music to phone(Original saved position does not remain moved document.);

Select **Send MMS**: Send the music as MMS;

Select **Send Email** : Send the music as E-mail;

Select **Send via Bluetooth**: Send the music you desired to others by Bluetooth.(Refer to Section 12.11.1)

Select **Delete**: Delete the selected music;

Select **Multi-delete**: enter the window of music list, press side up/down key to select the checkbox of item, Press **OK** key to confirm the deletion. (During the process of Multi-delete, press ***** key to select all and press **#** to cancel select all) ;

Select **Delete all**: Delete all music;

Select **Property**: View the name, date, size, format and DRM of music

7.7.5 Format

To format the memory card via phone, select **My favorites —Format**.

Note: After format, the file saved on the memory card will loss.

7.8 Storage status

It queries the situation of used space by Video, Sound, Picture, Music and Java. It also shows the used space and the total space.

8 Messages

This section will introduce message services supported by GSM. Some service may be not supported by local or roaming GSM.

8.1 Messages

Your phone can receive the edited text message via the service center. You also can send a new message or reply a message (via the service center) if the network supports. If your service provider supports message service, you can receive/send messages optionally. (If PIM security password is set, the correct password is required to enter the window of Messages, the detailed content of PIM security password refers to section 4.5.3).

The functions of messages include: Create, Inbox, Outbox, Sent, Drafts, My folder, Email and Voice mail.

MMS (Multimedia Messaging Service, MMS) contains the content of word, pictures videos and sounds. You can not only send or receive pictures and word, but also receive the file with sounds and videos. (If PIM security password is set, the correct password is required to enter the window of Messages, the detailed content of PIM security password refers to section 4.5.3).

Note: MMS service needs the support of the network operator or service provider.

The phone only can receive MMS with 100KB most, if beyond this limit, it can receive this MMS but can not read. At the same time, the phone only can send MMS with 100KB most.

The phone can receive MMS with more than one page, ie. Each page has one picture, one song and word, and MMS contains much this kind of pages. If MMS has pictures, the phone will adjust the size for display normally.

Note: you maybe need to pay fare for each sent MMS to the network operator or service provider.

MMS has the following format:

- Picture: **JPEG、GIF、WBMP、PNG**
- Sound: **MIDI、AMR、MP3、AAC**
- Video: **3GP、MP4**

If the messages received contains the nonsupported content, this content will not be displayed or played or there is an error prompt.

Note: Many causes can cause to send MMS sent failed, so please do not use MMS to send the important content.

8.2 Create

8.2.1 SMS

When create new message, select **Create**, and choose **SMS** within the type, tap **Select** or press **OK** key to enter the edit screen of creating new message.

A) TO

Directly tap "To" to enter PB to select receiver or tap blank area to enter the screen of inputting the phone number. At this moment, you can tap **simulation key** to input phone number or tap **PB** to select the number of contact person or select the contact person within the group from phonebook: **PB** to enter the screen of contact person, press **U** or **D** key to select the receiver, or directly tap the checkbox in front of

receiver, tap **OK** to complete the section into Create SMS screen. In create SMS screen, press **OK** key again to enter the screen of contact list and activate **Option**: *Create* to add the receiver; *Phonebook* to enter the screen of contact person and add the contact person; *Groups* to send the edited message to the group numbers; The newly contact to send the edited message to the newly contact; *Delete* to delete the selected receiver; *Delete all* to delete all receivers. When receivers are over 50, the phone prompts “Too many selected”.

On the screen of “Create”, to operate as followings:

Select *Send* to send current message (It will be valid only when the contact person is added.);

Tap **Back** the system prompts “Save? ”, which save this message into Drafts for future use to avoid the repeated input. The content of Drafts refers to section 8.7 (It is available only when the content is edited.) .

Note: Receiver is 50 at most once when sending messages..

B) Content

Tap scroll bar to select “Content”, activate **Option**:

Select *Insert contact* to insert the contact person and corresponding number;

Select *Insert quick text* to insert frequent word about related subject provided by the phone in present message to avoid the repeated input;

Select *Save as quick text* to save the message as quick text;

Select *Save to drafts* to save the message. (It is available only when the content is edited.)

Directly tap the content to enter the edit screen, which refers to section 1.6.

C) Send messages

Before sending message, you must input the number of SMS center. This step needs to be set only once, please refer to section 8.11.

When the message is sending, the phone will prompt “Send to...”; if sending is failed, the phone will prompt “Send failed!” and the message which failed sending or unsent messages will save to “Outbox”.

If sending is successful, the phone will prompt “Sending successfully”, the sent message will be put into “Sent”.

8.2.2 MMS

MMS (Multimedia Messaging Service, MMS) contains the content of word, pictures, sounds and videos. If MMS is beyond the limit, the phone can receive it but can not read. The phone only can receive 80 pieces of MMS most. MMS centre will send the user a message for new MMS, and the user can select to receive MMS automatically or manually.

When create new message, select *Create*, and choose *MMS* within the type, tap **Select** or press **OK** key to enter the edit screen of creating new message.

A) TO

In the edit screen of MMS, Directly tap “To” to enter PB to select receiver or tap blank area to enter edit screen to input phone number or Email address. In the edit screen, activate **Option**: *Phonebook* to enter the screen of contact person and add the contact person; *Groups* to send the edited message to the group numbers; *Preview msg* to preview the message; *Information* to view the information of receiver, subject, size, date and time; *Save to drafts* to save MMS to Drafts (It is available only when the content is edited.)

B) Subject

Select “**Subject**” to enter the edit screen for inputting the subject of MMS.

C) Content

Select “**Content**”, activate **Option**: *Preview msg* to preview the message; *Information* to view the information of receiver, subject, size, date and time; *Save to drafts*: to save MMS to Drafts (If not contact person and subject, only *Preview msg, Information, Save to drafts is available*) .

Directly tap to enter the edit screen of content, activate **Option**: *Text editor*: to edit the content of MMS; *Insert*: to insert picture, video, sound and quick text as the content of MMS; *Preview msg*: to preview the message; *Arrange*: to set the arrange of MMS among *Text first* and *Picture first*; *Delete*: to delete the content of MMS; *New slide*: to insert new page for editing multiage MMS; *Clear slide*: to clear content of MMS; *Delete slide*: to delete current page of MMS .

D) Send messages

If contact person is not available, to create it; if it is available, to enter the contact list to view or edit all contact persons. Sending MMS will take more time than SMS. If sending fails, the messages will save to “Outbox” for user to resend.

8.3 Receive message

When receiving a message, the phone will give a prompt sound (The setting of this character refers to section 4.2.2.) and then the message will be put into Inbox. The screen will display an icon of small envelope to prompt there is a message you have not read yet (refer to section 1.4) , and the message will be saved automatically in the phone or SIM card (refer to section 8.11.). The maximum number of messages to be saved (including those to be sent) is dependent on the storage capacity of the phone and SIM card.

8.4 Read message

“Inbox” is to store the messages received (including SMS, MMS and WAP PUSH). Each message has an icon to indicate its status.

	Read messages saved on the phone		Read messages saved on SIM card
	Unread messages saved on the phone		Unread messages saved on SIM card
	Unread WAPPUSH		Read WAPPUSH
	Unread MMS		Read MMS

A) Read SMS

Select the message to read, press **OK** to view information .Tap **Option** to do as follows:

Select *Read* to read desired item or tap desired item to read;

Select *Reply* to reply SMS, MMS , make a call or IP dial to the addresser;

Select *Forward* to edit current message in the edit screen and forward it to the desired number; refer to section 8.2.1;

Select *Save sender number* to save the phone number; refer to section 9.3;

Select *Move to my folder* to move the message to “My folder” (It is invalid for unread message.) in order to reuse it, refer to section 8.8;

Select *Delete* to delete current message and back to “Inbox”, (If “Inbox” is empty, it will back to the screen of message.);

Select *Multi-delete* to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select *Delete all* to delete all messages in “Inbox”;

Select *Sort* to sort messages in “Inbox” by time or by type.

When reading, tap **Option**:

Select **Reply** to reply SMS to the addresser.

Select **Forward** to edit current message in the edit screen and forward it to the desired number; refer to section 8.2.1;

Select **Get number** to get the phone number in messages and to save it to phonebook or make a call;

Select **Delete** to delete current message and back to “Inbox”, (If “Inbox” is empty, it will back to the screen of message.);

Select **Copy to SIM card (phone)** to copy the information from phone (SIM card) to SIM card (phone);

Select **Save as quick text** to save this SMS as quick text.

B) Read WAP PUSH

Select the message to read, and tap **Option**:

Select **Read** to read the message selected or directly tap the message to read it;

Select **Move to my folder** to move the message to “My folder” (It is invalid for unread message.) in order to reuse it, refer to section 8.8;

Select **Delete** to delete current message and back to “Inbox”, (If “Inbox” is empty, it will back to the screen of message.);

Select **Multi-delete** to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select **Delete all** to delete all messages in “Inbox”;

Select **Sort** to sort messages in “Inbox” by time or by type.

At reading WAP PUSH screen, tap **Link** to directly connect WAP to do corresponding operation. Activate **Option**:

Select **Go to URL**: go on the current link address ;

Select **Add to bookmark** : to save the link address in message into bookmark;

Select **Delete** to delete current message;

C) Read MMS

Select the message to read, and tap **Option**:

Select **Receive** to receive MMS;

Select **Delete** to delete MMS.

After operation, tap **Option**:

Select **Read** to read received MMS

Select **Reply** to reply the sender as SMS, MMS or call;

Select **Forward** to edit current message in the edit screen and forward it to the desired number; refer to section 8.2.2;

Select **Move to my folder** to move the message to “My folder” (It is invalid for unread message.) in order to reuse it, refer to section 8.8;

Select **Delete** to delete current message and back to “Inbox”, (If “Inbox” is empty, it will back to the screen of message.);

Select **Multi-delete** to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select **Delete all** to delete all messages in “Inbox”;

Select **Sort** to sort messages in “Inbox” by time or by type.

At reading MMS screen, directly tap OK or press **OK** to view detailed content of MMS. Activate **Option**:

Select **Reply** to reply the sender as SMS, MMS ,call or IP dial to the current addresser.;

Select **Forward** to edit current message in the edit screen and forward it to the desired number; refer to section 8.4;

Select **Delete** to delete current message and back to “Inbox”, (If “Inbox” is empty, it will back to the screen of message.);

Select **Move to my folder** to move the message to “My folder” (It is invalid for unread message.) in order to reuse it, refer to section 8.8;

Select **Get number** to get the phone number or email address in messages and to save it to phonebook or make a call;

When reading, tap **OK**, then tap **Option**;

Select **play** to play current information

Select **Save image** to save the image in MMS;

Select **Save audio** to save the audio in MMS.

8.5 Outbox

“Outbox” is to view the details of messages (SMS and MMS) which failed sending, tap **Option**;

Select **Resend** to resend the message; refer to section 8.2;

Select Read to selected information or tap selected information to directly read;

Select **Delete** to delete current message and back to “Outbox”, (If “Outbox” is empty, it will back to the screen of message.);

Select **Multi-delete** to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select **Delete all** to delete all messages in “Outbox”;

Select **Sort** to sort messages in “Outbox” by time or by type.

When reading, tap **Option**;

Select **Resend** to resend the message; refer to section 8.2;

Select **Edit** to access the edit screen of message and edit the message, refer to section 8.2;

Select **Delete** to delete current message and back to “Outbox”, (If “Outbox” is empty, it will back to the screen of message.).

As MMS, it has the operation **View**、**Save image** and **Save audio** when reading。

8.6 Sent

“Sent” is to view the details of messages which have been sent, press **OK** to read it or tap corresponding item to directly read and tap **Option**;

Select **Read** to read desired information in Sent;

Select **Move to my folder** to move the message to “My folder” in order to reuse it, refer to section 8.8;

Select **Forward** to edit current message in the edit screen and forward it to the desired number; refer to section 8.2

Select **Get number** to get the phone number in messages and to save it to phonebook or make a call;

Select **Delete** to delete current message and back to “Sent”, (If “Sent” is empty, it will back to the screen of message.);

Select **Multi-delete** to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select **Delete all** to delete all messages in “Sent”;

Select **Sort** to sort messages in “Sent” by time or by type.

When reading, tap **Option**:

Select **Forward**, you can edit current information in edit information window then to send it

Select **Delete** to delete current message and back to “Sent”, (If “Sent” is empty, it will back to the screen of message.).

8.7 Drafts

“Drafts” is to store the messages which have not been edited or unsent, then tap **Option**:

Select **Read** to read desired information in Drafts;

Select **Edit** to access the edit screen of message and edit the message.

Select **Delete** to delete current message and back to “Drafts”, (If “Drafts” is empty, it will back to the screen of message.);

Select **Multi-delete** to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select **Delete all** to delete all messages in “Drafts”;

Select **Sort** to sort messages in “Draft” by time or by type.

You can read desired information by pressing **OK** or tap the desired message. When reading, tap **Option**:

Select **Edit** to access the edit screen of message and edit the message

Select **Delete** to delete current message and back to “Drafts”, (If “Drafts” is empty, it will back to the screen of message.).

8.8 My folder

“My folder” is to store messages delivered from inbox and outbox, activate **Option** to operate as followings:

Select **Read** to read desired information in My folder;

Select **Delete** to delete current message and back to “My folder”, (If “My folder” is empty, it will back to the screen of message.);

Select **Multi-delete** to delete messages optionally, tap the checkbox in front of messages, tap OK or press **OK** key to confirm the deletion;

Select **Delete all** to delete all messages in “My folder”;

Select **Sort** to sort messages in “My folder” by time or by type.

You can read desired information by pressing **OK** or tap the desired message. When reading, tap **Option**:

Select **Edit** to access the edit screen of message and edit the message;

Select **Forward** to edit current message in the edit screen and forward it to the desired number; refer to section 8.2

Select **Get number** to get the phone number or email address in messages and to save it to phonebook or make a call; refer to section 9.14;

Select **Delete** to delete current message and back to “My folder”, (If “My folder” is empty, it will back to the screen of message.).

8.9 Email

Note: MMS service needs the support of the network operator or service provider.

8.9.1 Email manager

Email function of the phone can receives and sends Email not only WAP station supports but also POP3 ,SMTP and so on support. It makes you more convenient and quicker when receiving and sending Email. Before you use Email function, you have to understand the related knowledge first:

Mailbox: Register some Internet stand to apply for one mailbox belongs to yours that is “the mailbox” in this handbook. This mailbox is not in yours telephone, but in the computer system called the Email server of network operation business for you providing this kind of service. Your all received and the sent mails are relayed by this server for you.

Server: It is computer system of the network operation business providing this kind of service for you. You can obtain name of this server providing the service for you by consulting the network operation business. In the Email window, tap **Settings** to choose content set and then tap **Edit** to enter Email setting window:

Set default: set the current mailbox as default one

Edit:

1. Name: It is your mail service operation business name
2. SMTP: It is specially used to send Email. All mails that don't be sent successfully can be moved into Outbox automatically (smtp.XXX.com);
3. Port: Add SMTP the port number (please consult yours mail service operation business);
4. POP3: It is the server that specially used to receive the mail. Once you connect the network to enter the mailbox, the telephone can download automatically new mail from POP3 server, when you choose to receive the mail, the new mail will be downloaded into Inbox in the phone (pop3 .XXX.com);
5. Port: POP3's port number (please consult your mail service operation business);
6. Address: It is the address that receives the mail. This is you address on Internet. Your mail that other people send will deliver in your Inbox according to this address. This address is the system assigns for you when you apply for the mailbox, once produces, the user might not change. This phone when use email function, may use the ordinary data call way to connect the Internet, may also use the GPRS way to connect the Internet, in which way is decided by you in “the network service” under “**the digit dialing establishment**” .When you start the email function, the telephone can connect the Internet by the way which determined by you;
7. Password: Password is determined by you when you apply for email. When you register the mailbox, the server can confirm your status according to your user name and the password.

Note:

Here mentions the user name and the password are different with you connecting Internet's user name and the password; When connecting the Internet ,you must input the user name and the password as the identification authentication you connect the network to need ,but here the user name and the password are you necessary as confirms a mailbox the legitimate owner to enter mailbox.

Ordinary data call way, by continually net time cost; But the GPRS way, by you the data quantity charge which downloads from the Internet.

In front of the use email not yet establishes the email account , the phone can prompt you to have to carry on the mailbox setting.

If you use the GPRS way to connect Internet, then you should set Bearer type as GPRS only in “Connection profile”. Please refer to section 4.8.

8.9.2 Receive Email

Select **Receive** in Email screen, the phone will connect internet automatically and the phone will register your mailbox. If disconnect internet, the prompt will pop-up to alert. You can try to connect again.

If the mail will be bigger than 150K, the telephone will prompt you unable to download; when entering Inbox, you may examine mail content received.

Activate **Option** :

Receive: receive current selected Email into Inbox on Phone and the system will give a corresponding prompt;

Previous page: View Email list of previous page in the Inbox;

Next page: View Email list of next page in the Inbox;

Email content detail: View **From, Title, Priority** and **size** of current selected Email.

Note:If you defined one default mailbox in the “mailbox settings” ,the telephone could directly register this default mailbox.

8.9.3 Write Email

Select **Write Email** in Email window and then enter Write Email window to write Email.

1. Select “TO”, tap **Option** :Select **Phonebook**: Select Email address from receiver list in that has all contacts recorded Email address in Phonebook. Those contacts that don’t be recorded Email address won’t display in the screen. If there isn’t Email address of contact, the screen will prompt “**No related record!**”; Select **Edit**: Edit receiver Email address. Refer to text editing process; Select **Set priority**: Set Email priority: **Low, normal and High**; Select **Save to drafts**: save current edited Email into Drafts(Available after adding receiver Email address).
If you don’t edit contact after taping “TO” ,directly tap blank area behind “TO” to edit contact Email address and then tap **OK** or press **OK** key to return to receiver list window. In the receiver list window, tap **Option** : **Add** to edit new contact; **Edit** to edit selected contact address; **Delete** to delete selected contact. If edited contact, tap **OK** to enter receiver list window.
2. Select “CC” copy and send the Email to others. Refer to 1;
3. Select “BCC” Send Email secretly to others;
4. Select “Subject” Input Email title. Refer to section 1.6;
5. Select “Content” Input content of Email;
6. Select “Attachment” Add attachment to Email.

After editing, tap **Send** to send Email

8.9.4 Inbox

Inbox is used to save Email received. In the Inbox screen, tap **Option** :

Select **Read**: view information including From, Subject, Date and Content

Select **reply**: send to addresser;

Select **Forward**: forward Email to other receiver;

Select **Delete**: delete current Email from Inbox;

Select **Multi-delete**: delete some Email once(During the process Multi-delete, tap **Option** to Conform ,Select all and Cancel all)

Select **Delete all**: delete all Email from Inbox.

8.9.5 Outbox

Outbox is used to save Emails that aren't sent successfully. In the Outbox, tap **Option** :

Select **Resend**: resend Emails that aren't sent successfully;

Select **Read**: view information including From, Subject, Date and Content;

Select **Delete**: delete current Email from Outbox;

Select **Multi-delete**: delete some Email once (During the process Multi-delete, tap **Option** to Conform ,
Select all and Cancel all)

Select **Delete all**: delete all Email from Outbox.

8.9.6 Drafts

Draft is used to save Emails that have been edited and get ready to send in future. In the draft tap **Option** :

Select **Read**: view information including From, Subject, Date and Content;

Select **Edit**: select receiver renewedly and modify Email content, refer to Write Email;

Select **Delete**: delete current Email from Drafts;

Select **Multi-delete**: delete some Email once (During the process Multi-delete, tap **Option** to Conform ,
Select all and Cancel all);

Select **Delete all**: delete all Email from Draft.

8.9.7 Sent

Sent is used to save Emails that have been sent successfully. In the Sent ,tap **Option**:

Select **Read**: view information including From, Subject, Date and Content;

Select **Forward**: forward Email to other receiver;

Select **Delete**: delete current Email from Sent;

Select **Multi-delete**: delete some Email once (During the process Multi-delete, tap **Option** to Conform ,
Select all and Cancel all);

Select **Delete all**: delete all Email from Sent.

8.9.8 Settings

Refer to Section 8.9.1

8.10 Voice mail

Voice mail service is a kind of network service. You can subscribe this service from your service provider. The Voice mail centre number must be set before using this service. Select the screen of message, highlight up/down the scroll bar to select the Voice mail, press **OK** key to enter the screen of Voice mail.

Select **Listen** to enter the screen of dialing, dial the number in the voice mail box and retrieve the voice mails.

Select **Edit** to set the number in the voice mail box (Please contact the service provider for details of number for your voice mail centre).

8.11 Settings

In the message screen, activate **Option**:

8.11.1 SMS settings

This function is to set parameter related to the operation of message such as Vivid message, Signature,

SMS center, Delivery report, Storage type, Validity period.

Vivid message

To set Vivid message on/off.

Signature

To set Signature on/off.

SMS center

For supporting this service, the number of SMS center will be provided by your network operator.

Delivery report

The function is to confirm whether the other side has received the message. If closing it, the function is invalid.

Storage type

The save location of messages can be selected including SIM and phone. The storage capacity of SIM card is limited, but when phone fails, the SIM card can be installed into other phone. The storage capacity of phone is comparatively large, but when it fails all information can not be exported.

Validity period

The maximum time to store messages has 4 options: 12 hours, 1 day, 1 week and Max.

8.11.2 MMS settings

Profile: to set the profile of connection;

Send: to set Validity period、 Read report、 Delivery report、 Priority。

Validity period: to select the validity period of storing messages in MMS center among 12 hours, 1 day, 1 week and max;

Read report: to enable the function of read report on/off. When the function is on, the network will inform the user whether the message is read or not;

Delivery report: Two options: ON/OFF, which requires the gateway to send the delivery report;

Priority: Three options: Low、 Normal and High。

Receive: *to set the way of receiving and replying MMS.*

Auto receive: Two options: Auto and Manual, which is to receive automatically or manually;

Reply: to set whether the system reply the other side automatically。

Filter: to set a filter list, and storage the number or email of contact person which not want to receive, then the system will not receive MMS from these address. The filter list is most 20 items (phone number or email address). If beyond this limit, the system will prompt “List full Can’t add! ”. Tap **Option**:

View to view selected phone number or Email address

Create to add new phone number or email; (20 most)

Edit to edit the selected content;

Delete to delete the selected content.

8.11.3 Reset setting

To resume all original default value as the system prompt, if so, the setting of message (SMS and MMS) will resume to original default value.

8.11.4 Quick text

You can attain a very satisfied message text only to modify quick text a little. Using quick text can save editing time. Insert **common phrase when editing a message**.

In the message window, tap **Option** to select *Quick text* and then enter Quick text list window:

Press **OK** to modify selected phrase.

Tap **Option** to do as follows:

Select *Create* to edit new phrase and save to phone;

Select *Edit* content of desired quick text;

Select *Delete* to delete selected phrase.

8.11.5 Show type

Select type of message display including Name and content.

8.11.6 Storage status

This function displays storage status for SMS, including phone and SIM card.

9 Phonebook

This section describes various kinds of functions of phonebook. In main menu, press side key to select the icon of phonebook for entering the functions of phonebook (If PIM security password is set, the correct password is required to enter the window of Messages, the detailed content of PIM security password refers to section 4.5.3).

9.1 Grouping of phone book

In the phonebook of this mobile, all contact persons can be grouped. Among them, a special group is SIM card group. The difference between it and other groups is: Its corresponding name can be only stored for a telephone number. SIM card can keep some important telephone numbers at any time, and make you find out the telephone number needed when use it on other mobile telephone. But for SIM card the number of records and the character and figure of each record are limited, which is decided by the capacity of SIM card.

Except SIM card group, other groups consist of many records and the contents of everybody's record include Groups, Name, Mobile, Home, Office, Company, Department, Title, Fax, Address, Birthday, Email, Memo and Portrait.

When creating a new record, it will be put into the default group if not specified.

9.2 Find

After entering the phonebook, tap **Option** to select *Find*, and the search types for selecting will display as following:

Select *Name*: to input a special word to search the record with the special word within all recorded names;

Select *Number*: to input a special phone number to search the record with the special phone number within all recorded numbers.

You can also search contact by taping quick designate button .You need only tap corresponding button with the first alphabet of name and find desired contact from those whose name has the alphabet as first one.

9.3 Create

After entering into the phonebook, activate **Option** key and select the *Create*. Firstly to confirm the storage type, including two options: "Phone" and "SIM". If "full memory" appears, which means the mobile phone's memory has no enough space to save the record. The memory of phone must be cleaned up for more space.

When the storage type is "Phone", on the screen of new record, it may input Groups, Name, Mobile, Home, Office, Company, Department, Title, Fax, Address, Birthday, Email, Memo and Portrait.

Select Groups, directly tap the group icon to select the subgroup via side key, tap **Select** or press **Ok** key to confirm the selection or directly tap the group needed;

Input Name, Company, Department, Title, Address, Email and Memo, it will enter the edit screen of character. Please refer to the section 1.6 for operation of editing character.

Input Mobile, Home, Office, Fax, Address and Birthday, it will enter into the dial panel, directly tap to input the content, then tap **Ok** or press **Ok** key for confirmation.

Select Portrait, tap the icon in the middle of screen or press **Ok** key to enter the portrait list, then tap **Preview** to view the CLI. Tap **Set** or press **Ok** key to set it as CLI of contact person

After completing the input, tap **OK**, the mobile phone will prompt "Successfully".

When the storage type is "SIM", it may only input name and one phone number.

9.4 Copy

“Copy” is a shortcut provided to replace the mobile phone or copying the information. It is possible to copy the records on the phone with multi-ways except. Company, Department, Title, Fax, Address, Birthday, Email, Memo and Portrait can not be copied.

Copy current: Copy the current contact of select person. If the contact is save on the SIM card, to select the content among: *Mobile*、*Home* and *Office*; If saved on the phone, the 3 phone numbers of each record will save as 3 records with same names in SIM card;

Multi-copy: Select the type of copying between *From phone* and *From SIM*.

Select *From phone*: copy to SIM card, the 3 phone numbers of each record will save as 3 records with same names in SIM card.

Select *From SIM*: each record in SIM card will take one place in the phonebook of mobile phone, and select the save place. When copying, the record will be copied to the Unfiled group in the mobile phone. In the screen of multi-copy, select the person that needs to be copied, tap the checkbox in front of item, tap **OK** or press **OK** key to confirm the selection. During copying, tap **Option** to select *Select* , *Select all* or *View*;

Copy all: choose the linkman that needs to be copied, then tap **OK** key for confirmation. You may choose *From phone* and *From SIM*.

If the space is not enough during the copying, it will prompt “SIM is full” and “Phone is full”.

9.5 Move

Move is a shortcut function provided for replacing the mobile phone and copying the information. If moved, the original place will not save the content moved. It can move the phone records in the phonebook with multi-ways. Company, Department, Title, Fax, Address, Birthday, Email, Memo and Portrait can not be copied.

Move current: Move the current contact of select person to phone or SIM card. If the contact is save on the SIM card, to select the content among: *Mobile*、*Home* and *Office*; if saved on the phone, the 3 phone numbers of each record will save as 3 records with same names in SIM card.

Multi-move: Select the type of moving between *From phone* and *From SIM*.

Select *From phone*: move to SIM card, the 3 phone numbers of each record will save as 3 records with same names in SIM card.

Select *From SIM*: each record in SIM card will take one place in the phonebook of mobile phone, and select the save place. When moving, the record will be moved to the Unfiled group in the mobile phone. In the screen of multi-move, select the person that needs to be moved, tap the checkbox in front of item, tap **OK** or press **OK** key to confirm the selection. During moving, tap **Option** to select *Select*, *Select all* or *View*;

Move all: Move all contacts from phone or SIM to SIM or phone. If you move record on the phone to SIM card, the 3 phone numbers of each record will save as 3 records with same names in the SIM card.

If the space is not enough during the moving, it will prompt “SIM is full” and “Phone is full”.

9.6 Delete

The function of deleting the records in phonebook is set in this mobile phone. You can delete the records of SIM card and phone one by one or by package, and also delete them multiply. Select *Delete* the

system will prompt, tap **OK** or press **OK** key to delete the current highlighted data of the person selected, tap **Cancel** not to delete the record.

9.7 Multi-delete

Select the type of deletion between *From phone* and *From SIM*. In the screen of multi-delete, select the person that needs to be moved, tap the checkbox in front of item, tap **OK** or press **OK** key to confirm the selection. During moving, tap **Option** to select *Select*, *Select all* or *View*.

9.8 Delete all

Select *Phone* to delete all record on the phone one-off;

Select *SIM* to delete all record on SIM card one-off;

Select *All* to delete all record on the phone and SIM card one-off.

9.9 Groups

Put the phone records into different groups as various property for convenient use.

The phone has **20** groups, and tap **Option**:

Select *Send SMS* send SMS to all group members;

Select *Send MMS* send MMS to all group members;

Select *Edit* to rename, select group icon and ring tone (rename is not available for unfiled group).

In the group list, tap **OK** to enter the selected group, then tap **Option** to *Add*, *Call*, *IP dial*, *Send SMS*, *Send MMS*, *Delete (group)*, *Delete (phone)*, *Delete all (group)*, *Delete all (phone)* (Unfiled group does not have *Delete (group)* and *Delete all (group)*) .

9.10 Show type

To set the display type of contact list, including *All*, *Phone* and *SIM*.

9.11 My number

In the idle screen, enter the main menu, then select the options of “*Phone book*” “*Option*” and “*My number*” in turn to input, change and view the own number. If no setting, it will prompt “Empty number”. Tap **Edit** or press **OK** to enter the edit screen.

9.12 Storage status

The function of storage status capacity is set in this mobile phone, which makes user clearly understand the current usage situation of the mobile phone.

Storage status mainly provides the total and used amount of SIM card and mobile phone.

9.13 Phone list

List all the records in the phonebook according to the pronunciation of name and alphabet. After selecting the record, you may press **Send** key to dial the telephone. Tap **Option**:

Select *Call* to dial out the phone number selected;

Select *IP dial* to insert IP number in the front of the phone number then dial out (The function is needed to set before use, and refer to section 4.4.8);

Select *Send SMS* to perform the function of SMS;

Select *Send MMS* to perform the function of MMS;

Select *Email* to send Email to selected contact(Only available for contacts on the phone);

Select *Send name card* to send out the content of name card as SMS, MMS or via Bluetooth, refer to section 8.2;

Select **Edit**: to edit the content of records in the phone according to the new record;

Select **Copy**: to move the data selected to mobile phone (SIM card);

Select **Move**: to move the data selected to mobile phone (SIM card);

Select **Delete**: to delete the selected phone record.

9.14 Save telephone number

When you dial a new telephone (refer to section 2.2), inquiry the call history (refer to section 11) and view SMS or MMS (refer to section 8.4), you may choose the option of saving telephone number in the pop-up menu to save it in the phonebook.

Note: the menu of saving telephone number doesn't appear in the main menu.

9.15 Create security group contact

By tap settings-Security-PIM to enable security mode, you can enter contact list window by input correct password. If no setting, enter security group screen by long pressing *****key in the Phonebook window to input password (1234). Tap **Option**:

Select **Find**: Refer to section 9.2

Select **Create**: Select contacts on phone then scroll to group and tap group icon to enter groups window. In this window, select group as "security group" by taping side up/down key. Tap **Select** or **OK** to conform content selected or tap directly "security group" to select. The other operations refer to section 9.3

Select **Copy**: Refer to section 9.4;

Select **Move**: Refer to section 9.5;

Select **Delete**: Refer to section 9.6;

Select **Multi-delete**: Refer to section 9.7;

Select **Delete all**: Refer to section 9.8;

Select **Groups**: Refer to section 9.9;

Select **My number**: Refer to section 9.11;

Select **Storage status**: Refer to section 9.12;

Select **List all**: Display all contact record on Phone/SIM card including security content. After selecting this option, **List all** changes into "**List secret**": select this option only display security content.

Relieve security mode on **Setting-Security mode-PIM** or directly press **Pwr** to relieve security mode.

Note: After enabling Security mode firstly, "Security" appears in the groups. There is security function after only "Security" selected.

Security mode detailed operation refers to section 4.5.3

10 Entertainment

10.1 Java box

The wireless JAVA looks like a jewel box following with mobile phone. You may find all kinds of JAVA software at any time. After downloading them, you may enjoy many services of Internet through mobile phone such as downloading all kinds of games, cartoons, mini-novel, and so on. You may also carry out all kinds of online applications such as network game, receiving or sending email, securities stock, information query, etc. to change it into a game or stock machine.

10.1.1 Applications

To view the Java application downloaded, if no setting, it will display “No Java applications, use WAP to download”。

10.1.2 Download

To edit the address of bookmark. Select the bookmark needed to edit, press **OK** key or tap the corresponding bookmark, select *Edit* to enter the edit window, input URL address, and the process of editing refers to section 。

10.1.3 Storage status

To view the current storage status.

10.1.4 Network settings

The detailed setting of WAP refers to section 4.8。

11 Call history

The call history covers recently Outgoing calls/Received calls and Missed calls as well as the function of deleting records.

Tap **Menu** to enter main menu, press side key to select Call history, tap  to enter it. You may view time, date and phone number of Outgoing calls/Received calls/Missed calls (Call duration does not include in the detailed information.).

11.1 Outgoing calls

On the screen of Call history, press side up/down key to select the option of Outgoing calls, tap the history selected or press **OK** key to enter Outgoing calls screen. Tap **Option** to do the operations as followings:

Select **Call** to dial out the phone number selected, refer to section 2.2;

Select **IP dial** to insert IP number in the front of the phone number then dial out (The function is needed to set before use, and refer to section 4.4.8);

Select **Send SMS** to perform the function of SMS, refer to section 8.2.1;

Select **Send MMS** to perform the function of MMS, refer to section 8.2.2;

Select **Save** to save the necessary numbers to phonebook, refer to section 9.2;

Select **Delete** to delete the current record selected;

Select **Delete all** to delete all records;

On the screen of View details, activate **option** key to operate as followings:

Select **Call** to dial out the phone number selected, refer to section 2.2;

Select **IP dial** to insert IP number in the front of the phone number then dial out (The function is needed to set before use, and refer to section 4.4.8);

Select **Send SMS** to perform the function of SMS, refer to section 8.2.1;

Select **Send MMS** to perform the function of MMS, refer to section 8.2.2;

Select **Save** to save the necessary numbers to phonebook, refer to section 9.2;

Select **Delete** to delete the current record selected.

11.2 Received calls

The operation of Received calls is same as Dialed calls.

11.3 Missed calls

The operation of Missed calls is same as Dialed calls.

12 Accessory

12.1 Alarm

There are five alarms which can be set. The function and operation of five alarms are completely same. You can set the alarm clocks on/off.

On the screen of alarm, it displays the status of the five alarms.

Alarm on/off is represented by different icons. If the alarm is on, alarm time and name will display after On- icon. If it is off, alarm time and name will display after Off-icon.

12.1.1 Alarm on

The user highlights an alarm and tap **Select** or press **OK** key to view the status and the detailed settings.

If you want to alarm on, first to confirm the alarm time is right. For instance, if you attempt alarm on at 00:00, to select "**Time**" on the display screen to enter the screen of time setting, input the time needed, then tap **OK** to confirm.

Secondly you need to conform the period is right. If not set the item, the alarm works once. If to set others, enter the item of "**Period**", including three options:

Once: the alarm only works once and then it will be off;

Daily: the alarm works at the same time everyday;

Day of the week: the alarm works on some day or days of week;

Sound: to set up the alarm tune;

Name: to set up alarm name;

Snooze: to set the alarm to ring 5 times every 5 minutes.

Finally, to select **Status:** to set the alarm on/off., the system will prompt "Start alarm? ", tap **OK** or press **OK** key to complete the operation.

12.1.2 Alarm off

The user selects one alarm on, tap **Select** or press **OK** key to enter the status of the alarm. Tap **OK** or press **OK** key to close it when the system prompt "Stop alarm?" after taping Status .

12.1.3 Alarming

When the set time is reached, the phone will play the alarm tone (If the setting is on.) and display the alarm time on the screen.

Even if the phone is power off, the phone still works. Press Side key or **OK** key to make it mute At this time, tap **Close** to stop the alarm, and it will prompt "Power on". Select **OK** or press **OK** key to power on, Select **Cancel** or **Pwr** exit the screen.

Please notice if the date and time have changed the alarm still works as the original time. Therefore, please confirm the alarm date and time changed for next time.

12.2 Schedule

12.2.1 Function description

After entering the Calendar, the monthly calendar for current date will be displayed. Use side up/down key to select the preferred date. Any date with event record will be represented with orange frame. Tap **Option** key to activate the menu, which covers: Select date, Create and Schedule list

12.2.2 Select date

Using this function, you may select any day (within valid time limit) and press navigation key, side up/down key or tap right icon to input date on the calendar screen, then complete other functions. For the first access, the current date is shown; upon the selection of any other day, tap **OK** to return the calendar, it will display the date selected. Tap **Back** to return the calendar, it will display the date before entering “Select date” (Note: it may not be the calendar, which depends on your operation.) .

12.2.3 Create

“Create” is used to add new events, and you need to input the relevant information for events, then to set date and time for reminding.

On the screen of Calendar and event Schedule, tap **Option** key to activate the menu, select **Create** to add events.

The setting of new events covers the following contents:

Date: Refer to the date to be reminded for event, which may be set by entering the date ;

Time: Refer to the time to be reminded for event, which may be set on the screen of “Time”;

Memo: Refer to the description of event, with contents to be input on the screen of edit, refer to section;

Round: Refer to the ring to be reminded for event;

Period: Refer to the period of event;

Status: Refer to make the schedule item on/off.

Finally tap **Save** to save the setting, and tap **Back** to exit.

12.2.4 Schedule list

“Schedule list” is used to view all scheduler. Simply tap **OK** to enter scheduler list of corresponding date. Activate the key **Option** for following operations:

View: to view the content of selected scheduler;

Create: to add a new scheduler;

Delete: to delete the selected scheduler;

Delete all: to delete all schedulers.

Send via Bluetooth: to send scheduler by Bluetooth;

Send all via BT: to send all scheduler by Bluetooth;

View summary: to view number of used and available schedulers.

Tap **Back** to return schedule list

12.3 Notepad

Notepad is used for any simple record and memo, and tap **Option**:

Edit item: edit the item selected;

Send SMS: send the content of item via messages;

Delete: delete the item selected;

Delete all: delete all items.

12.4 Calculator

Using calculator can do the arithmetic including addition, subtraction, multiplication and division. After entering the screen of calculator, you may directly input the number to account, and the number and character input will display on the screen of edit:

Take the calculation of 123456789×7.2 as an example:

First step: enter digits "123456789", and tap \pm to change between positive and negative;

Second step: tap operation symbol "x" (\times : \times ; $+$: $+$; $-$: $-$; \div : \div);

Third step: enter digit "7.2", whereby the dot can be made by \cdot ;

Fourth step: tap operation symbol "=" ($=$);

The result will display in the edit window.

Tap \leftarrow to delete the content and tap **CE** to clear the content and start new calculation, and tap **Back** key to exit the calculator screen.

Press **Pwr** key can cancel the input, exit the calculator screen and back to idle screen, or tap **Back** key to exit after clearing the edit screen.

In case that the calculation of any digit divided by zero produces a result other than zero, or the result is above 999999999 or below -999999999, the prompt "E" shall occur to indicate an error.

12.5 Dictionary

Dictionary provided in this cell phone supports the inter-translation across English and Chinese, which means that the entered word may be translated from English/Chinese into Chinese/English.

Dictionary is activated by the selection with the soft key **OK** or press **OK** key. Upon the completion of word or text enter, tap **OK**, and word containing this character string is shown in this bilingual dictionary box. Press the direction key "up" or "down" to search for the target word, then tap **OK** for its detailed information, and tap **Back** to return to word enter box.

12.6 Currency

Using this function, an amount of currency may be exchanged to other equivalent foreign currency.

This cell phone has one type of preset currency exchange, which is changeable, and may be reset with various currency exchange rates. For this purpose, select the item to be set with direction key "up" and "down" as well as scroll bar, then tap **Select** or press **OK** key to enter respective setting box. After the setting for exchange rates, the amount of currency to be exchanged to will be displayed.

12.7 World clock

With an easy operation method, the worldwide clock provides great convenience for travelers all over the world.

Under the box of worldwide clock, **Vu** & **Vd** may be used to move the time zone indicating line located. During the course of movement, items located in the lower position, including time zone, name of city, time and date, will change by your random selection respectively. And the name of famed city within this time zone is shown when shifting this indicating line, in such mode, tap **Select** or press **OK** key to set the time of city selected to its local time.

So far, this cell phone could provide following cities correspond to respective time zones:

City	Time zone	City	Time zone	City	Time zone
Beijing	East zone 8	Los angels	West zone 8	Moscow	East zone 3
Hongkong	East zone 8	Mexico	West zone 6	Baghdad	East zone 3
Taipei	East zone 8	Chicago	West zone 6	Kuwait	East zone 3
Singapore	East zone 8	Ottawa	West zone 6	Teheran	East zone 3
Pyongyang	East zone 9	Miami	West zone 5	New deli	East zone 5
Seoul	East zone 9	Washington	West zone 5	Calcutta	East zone 5
Tokyo	East zone 9	New York	West zone 5	Rangoon	East zone 6

Osaka	East zone 9	London	Zone 0	Hanoi	East zone 7
Manila	East zone 9	Madrid	East zone 1	Bangkok	East zone 7
Sydney	East zone 10	Rome	East zone 1	Jakarta	East zone 7
Hawaii	West zone 10	Paris	East zone 1		
Alaska	West zone 9	Frankfurt	East zone 1		
Seattle	West zone 8	Berlin	East zone 1		

12.8 Countdown

This function is mainly applicable to the prompt operation at given time. Such as: dial up after ten minutes, etc. It provides no content for prompt, and easy for operation.

The countdown may be used in following methods: select the menu option *Accessory — Countdown* under accessory box after entering main menu, the cell phone displays the countdown status, whereby the countdown time may be entered. For example: if you need to be reminded after forty five minutes, just tap the digit key "45" under normal standby mode, then tap **Start** or press **OK** key to start countdown and tap **Cancel** or press **OK** key to cancel it. The cell phone will prompt: "Countdown start!" The cell phone will prompt in 45 minutes that the set time is available.

- Note:
- Enter values for minutes;
 - Values for minutes shall not exceed 99 (countdown values entered for minutes under standby mode) .
 - The prompt box may produce under standby mode for the availability of countdown time. The prompt for other working states shall be made by a prompt tune.

12.9 Stopwatch

The stopwatch box is shown on the screen of cell phone by selecting the option stopwatch menu.

The time starts from zero by tapping **Start** or press **ok** key, may be stopped by tapping **Pause** or press **ok** key, and may continue by tapping **Go on** or press **ok** key; or may return to zero by tapping **Reset** (in such case, time may be re-started), or may exit from stopwatch box by tapping **Back**.

12.10 Unit converter

Use this function you can exchange the unit .in to Unit converter window ,select the content you want to set ,press **Select** or **ok** in to edit window ,select the conversion number and unit , input the conversion number ,system will convert the result .

12.11 Connection tools

12.11.1 Bluetooth

Since devices with wireless Bluetooth technology communicate using radio waves, your device and the other device do not need to be in direct line-of-sight. The two devices only need to be within 10 metres (32 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices. There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or service provider.

You can connect wirelessly to other compatible devices with Bluetooth technology or send Fax by Bluetooth connection.

Activation: Turn Bluetooth on/off. If you select turn off Bluetooth, the phone will end all Bluetooth connection and you can't send /receive data. When performing the other process, please consider it that Bluetooth connection will consume battery meter and shorten time of phone operation.

My devices: View Device list. Activate **Option** :**Search more**: to search partnership existed, if you haven't

added devices or want to add new devices, select **Search more**, the system will search new devices automatically, then show the result. Press **Back** to return device list. Creating a partnership between two devices involves entering the same personal identification number (PIN) on both devices. Creating a partnership between two devices is a one-time process. Once a partnership is created, the devices can recognize the partnership and exchange information without entering a PIN again. Make sure the two devices are within a range of 10 meters from one another, and Bluetooth is turned on and in discoverable; select **Rename** to enter a new name for the partnership; select **Delete** to delete added devices; select **Delete all** to delete all devices in device list;

Visibility: to turn on/off visibility of the phone. If select off, phone won't be found by the other user;

. **My phone's info** : to view corresponding information of phone, including phone's name that can be changed and phone's address;

BT data exchange : Turn on/off function of BT data exchange;

Bluetooth services : to view Bluetooth services, including Headset, Handfree, Dial-up network, FTP data transfer and OPP data transfer.

You can use Bluetooth device to receive call and dial for internet explore after Bluetooth is connected..

12.11.2 PC tool

This cell phone is capable to transmit phone book, preferred rings & pictures to user using the connection between data lines (special accessory) and PC computer. When data lines are used, this cell phone supports Windows 95, Windows 98, Windows NT, Windows 2000 and windows XP. If data lines are not included in the purchase of cell phone, place an order from your local retailer. To activate the function as to transmit documents, the installation of synchronized software is required in PC computer.

12.11.3 GPRS wizard

It stands for General Packet Radio Service (GPRS). Using GPRS technique, user is able to send or receive data through cell phone network. In this sense, GPRS is a way for data transmission, which supports user's wireless connection with internet data network. And the GPRS application covers such services as WAP, multi-media information, short message, the downloading of JAVA application program, and GPRS dial-up program (e.g. Internet & e-mail) .

Events to be noted before the use of GPRS technique:

1. Consult the local network operator or service supplier for the availability or the application procedure (if GPRS not available) for GPRS service;
2. Save GPRS settings necessary for each application concerning GPRS data transmission;

Price for GPRS and other applications

Both the use of GPRS connection and various applications concerning GPRS data transmission need to be paid respectively. The payment for normal data dial-up is calculated by the time duration of internet connection, while that for GPRS mode is calculated by the data amount downloaded from internet. Please consult local network operator or service supplier for detailed information relevant to price.

12.12 STK

STK (SIM TOOL KIT) allows to operate its own software based on SIM card. STK card can receive and send short message data of GSM. This mobile phone supports the service for various network operators.

13 Common questions

The mobile phone can not power on.

- The phone can not make call and power off due to lower battery. Please charge the battery.

The mobile phone can not to dial some calls.

- The Call barring has been set, which restricts the use of mobile phone, please check and cancel it.

Someone else is answering my call.

- The mobile phone has been set to transfer your call to another number, please check and cancel it.

The Display information

During the operation, the mobile phone may prompt the display information due to following error operations:

"Insert SIM card"

- SIM card must be inserted into mobile phone before used, or taken out (If already exists) for cleanup the golden area with dry cloth and then insert again.

"Network not available"

- Your mobile phone is out of the area covered by network (or the physical barrier might exist between your phone and transmitter), and unable to dial or answer calls. Please close to the window if indoors.

"Emergent call only"

- If your mobile phone is out of the area covered by network of service supplier, and another network within your area may allow you to dial emergent call subject to the intensity of signal.

"Invalid SIM card"

- The SIM card has been locked, which is unable to accept the SIM card inserted. Please insert correct SIM card or contact with the distributor.

"Enter PUK code"

- SIM card has been locked due to the wrong input of PIN code for three times continuously. Therefore, you must apply a special eight-digit PUK code from the network supplier to unlock the SIM card (PUK code may be supplied with PIN code at same time).

Warning: If input wrong PUK code for ten times continuously, SIM card will be locked permanently. You must apply a new SIM card from the network supplier.

14 Fittings

Charger

- It will charge the Li battery quickly and completely. The charge duration varies subject to the capacity of battery.

Li battery (One piece)

- The Li battery 830 mAh can provide the standby duration lasting for 300 hours or call duration lasting for 180 minutes subject to practical using condition.

Note: Only the approved battery, charger and other accessories by manufacturer of mobile phone may be used. Using other types of accessories will infringe the approval and warranty of this mobile phone and cause the danger.

15 Maintenance guideline

Welcome to use mobile phone produced by NEC Company. Whereby a failure occurs in the use of your mobile phone, you are requested to contact with distributor or consult NEC maintenance center; whereby the repair is needed, your mobile phone may be sent/brought to local maintenance center (The specific maintenance centers shown in the voucher of warranty provided with mobile phone.) ; whereby a maintenance center is not available in your place, you are requested to bring the mobile phone and copy of its receipt to distributor for EMS mailing.

You shall be cautious to the use of mobile phone as it is made using excellent design and technique. To prolong the life of mobile phone, you are required to perform the obligations specified in the warranty terms as followings:

- Keep the mobile phone and its accessories away from the children;
- Keep the mobile phone dry all the time as rain water, moisture, various liquid, and water contain mineral materials, which may corrode the electronic circuit;
- Do not use, store the mobile phone in places containing dusts, which may damage its removable parts;
- Do not store the mobile phone in the excessive hot place, as the high temperature might shorten the life of electronic parts, damage the battery, and deform or even melt some plastic parts;
- Do not store the mobile phone in the excessive cold place, or the humidity may form inside of the mobile phone when the temperature of mobile phone rises (up to normal temperature), which may damage the circuit board;
- Do not attempt to disassemble the mobile phone as the operation by unprofessional personnel will damage it;
- Do not throw, beat or shake the mobile phone, or the internal circuit board might be damaged;
- Do not clean and wash the mobile phone with strong chemical product, ambulant, or strong detergent;
- Do not dye the mobile phone, or it will obstruct the removable parts so as to affect the normal work;
- To change the antenna, only authorized or matchable antenna shall be used. Any use of unauthorized antenna or modified accessories may damage the mobile phone and infringe the relevant regulations for wireless devices.

All above recommendations are also applicable to your mobile phone, battery, charger and each fitting part. If they can not work normally, please bring/send them to the qualified maintenance organization nearest to you for repairing.

16 RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types N5106 (FCC ID: S5D-KMP6J1CT1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.214 W/kg and when properly worn on the body is 0.082 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.