
Winterm[™] 9000 Series XPE-Based Terminals Quick Reference Guide

Issue: 071702

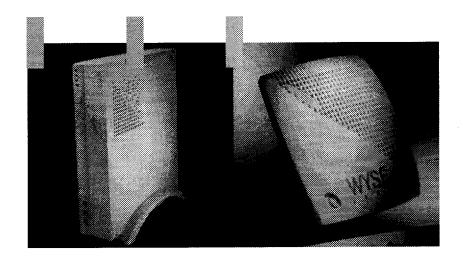



FCC Statement

This equipment has been tested and found to comply with the limits for either Class A or Class B digital devices (refer to "Terminal Requirements Compliance"), pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Caution

Changes or modifications not covered in this manual must be approved in writing by the manufacturer's Regulatory Engineering department. Changes or modifications made without written approval may void the user's authority to operate the equipment.

Terminal Requirements Compliance

FCC Compliance

The Models 9235LE and 9440XL terminals meet Class B requirements.

IEC/EN Compliance

The Model 9235LE and 9440XL terminals meet Class B requirements.

Canadian DOC Notices

Refer to the previous section, "Terminal Requirements Compliance," to find out to which terminal model each of the statements below refers.

Class A

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Réglement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

Class B

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le Réglement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

IEC/EN Notice

These products conform to the requirements of IEC950 and EN60950.

These products conform to requirements of EN55022 for Class A equipment or EN55022 for Class B equipment (refer to "Terminal Requirements Compliance").



For use with supplied power adaptor. Replace only with the same or equivalent type as recommended by the manufacturer.

Model 9235LE Terminals

For use with External Power Supply DVE Model DSA-0301-05 or certified equivalent model supplied by the manufacturer.

Model 9440XL Terminals

For use with External Power Supply Flytech/CARRY-I Model FT-8006A or certified equivalent model supplied by the manufacturer.

Noise Suppressor

A noise suppressor (ferrite bead) must be installed on the network cable of your terminal. This installation is necessary to maintain compliance with U.S. FCC B limits and European CISPR B EN55022 Class B limits. The noise suppressor is supplied by the manufacturer and is packed in your terminal's shipping carton.

Cable Notice

The use of shielded I/O cables is required when connecting this equipment to any and all optional peripheral or host devices. Failure to do so may cause interference and violate FCC and international regulations for electromagnetic interference.

Mounting and Connecting the Terminal

The Quick Start Guide included in the shipping carton provides instructions for mounting and connecting the terminal. The terminal may be placed on a desktop, or it may be mounted on a wall using an optional wall-mount bracket available from Wyse Technology.

Caution

Mount and connect the terminal only as directed in the Quick Start Guide (and in the wall-mount bracket instructions if used). Be sure that there is sufficient space around the terminal for ventilation. Follow all precautions listed in the Quick Start Guide.



Note

On the Model 9235LE the amber power LED may stay on for up to a minute after plugging power into the unit. The user should not press the power button to boot up until the amber light goes out.

The following items are provided in the box with each terminal and should be used with the installation:

- Keyboard and mouse (may or may not be included)
- Power cord (may or may not be included)
- Power supply
- Noise suppressor (ferrite bead)
- Desktop mounting stand (if required)
- **Quick Start Guide**



□ Caution

To ensure regulatory compliance, use only the power supply included in the shipping carton, or a Wyse-approved equivalent, with the terminal. Also, the noise suppressor (ferrite bead) included in the box with the terminal must be installed on the network cable as described in the accompanying instructions. Refer to the regulatory notices in the front matter of this document for details.



Note

A 3-button wheel mouse may be used.