

75mm

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED RSS Warning:

This device complies with ISED licence exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:
 (1) l'appareil ne doit pas produire de brouillage, et
 (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED Radiation Exposure Statement:

This equipment complies with ISED RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet appareil est conforme aux limites d'exposition de rayonnement RF ISED établies pour un environnement non contrôlé. Cet émetteur ne doit pas être co-implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur. L'appareil doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Tous les changements ou modifications non expressément approuvés par le responsable de la conformité pourraient vider l'utilisateur de son autorisation d'exploiter l'équipement.

NEED HELP?

Resources & Support
support.wyze.com

Community
forums.wyze.com



Scan the QR code to learn more

WYZE Plug

QUICK START GUIDE

65mm

IN THE BOX

Wyze Plug x1 Quick Start Guide x1



 


STATUS LIGHT

- Off
Socket power off
- Slow blue flashing light
Connecting to WiFi
- Solid Blue
Socket power on
- Fast blue flashing light
In pairing mode

SETUP

- 1 Download the Wyze app and create an account.
- 2 Insert Wyze Plug into an outlet.
- 3 The Wyze Plug's status light will flash blue showing it's in pairing mode. If it is not flashing blue, press and hold the on/off button until the light begins to flash blue.
- 4 Open the Wyze app and tap the 3 dots on the top right corner of the Home Page. Select "Add a Product" and then select Wyze Plug. Follow the instructions in the Wyze app to finish setup.

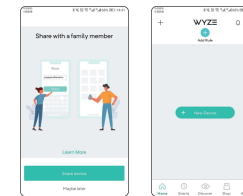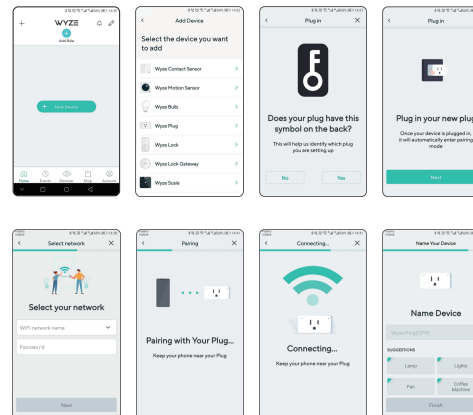

Specification

Input: 120V~, 60Hz
 Output: 120V~, 15A Max
 Power: Max. 1875W
 Overload: 5A Max. 660W Tungsten