

8. RETURNING THE 8002R PIN PAD

If you need to return your PIN Pad device for service or replacement, contact your service provider or sales representative for instructions.

Note: Do not try to service, repair or adjust the PIN Pad device in any way; doing so will void your warranty.

Caution: Risk of explosion if the battery is replaced by an incorrect type. Please dispose of used battery according to the instructions.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

XAC Automation Corporation
886-3-577-2738
www.xac.com.tw

The above information is the exclusive intellectual property of XAC Automation Corporation and shall not be disclosed, distributed or reproduced without permission of XAC Automation Corporation.

8002R PIN PAD INSTALLATION GUIDE



XAC Automation Corporation

1. CONNECTING THE 8002R PIN PAD TO A PC/TERMINAL

The 8002R device can be used to connect with PC/terminal. It supports RJ12 offset, USB interfaces via different cable types such as RJ12 offset and standard USB via mini din type connector.

Input voltage/current: 5V/400mA(USB) or
12V/200mA(RJ12 offset)

Operating Temperature: 0 ~50

Note: Turn off or unplug the PC/terminal whenever you connect or disconnect the PIN Pad. Be sure the PC/terminal is not processing data when powered off.



Figure 1



Figure 2



Figure 3

2. 8002R PIN PAD DEVICE SETUP

The 8002R device displays the message READY FOR SALE. This ready message indicates the device is ready for use.

3. CONTACTLESS READER

Aim the center position of the card to the contactless logo, and watch the LEDs for read status. A green light represents a good read.



Figure 4



Figure 5

4. MAGNETIC STRIPE READER

Find the card reader slot on top of PIN Pad. User can swipe magnetic card in both direction, left to right or opposite. (Figure 6)



Figure 6

5. USING THE PIN PAD

To complete a transaction, the PIN pad device displays the following prompt, ENTER PIN. Key in your PIN and press [ENTER]. The device returns to the ready message after it successfully receives the PIN entry.

Note: If the PIN is entered incorrectly, press [CANCEL] and re-enter it.

6. CLEANING

Periodically clean the PIN Pad device with a clean cloth dampened with water and a mild soap or cleaner. Do not use harsh chemicals.

7. MAINTENANCE

Stringent quality-control standards are followed in manufacturing all PIN Pad devices. Numerous tests are performed on each unit before leaving the factory to ensure quality and reliability.