

## **Wireless Pro Controller For Wii U**

### **USER MANUAL**

#### **Introduction:**

Thank you for purchasing the Wireless Pro Controller for Wii U. This product has been designed to enhance your gaming experience. To ensure the best performance of your product, please read this manual carefully and keep it for future reference. Should you have any difficulties using this product, please contact Customer Support.

#### **Warranty**

This product is guaranteed for a period of one year from the date of purchase. Please refer to the included warranty card for more details.

#### **Package Contents:**

- Wireless Pro Controller x 1
- USB - Mini USB Charging Cable x 1
- User Manual x 1
- Warranty Card x 1

L Button  
Left Analog Stick  
Channel LED  
Battery LED  
Right Analog Stick  
R Button  
D Pad  
-/Select Button  
HOME Button  
Power Button  
+/Start Button

ZR Button  
Mini-USB Charging Socket  
ZL Button  
SYNC Button  
RESET Button

#### **Specifications:**

- Vibrant glow in both light and dark gaming situations
- Designed for accessibility & extended gameplay comfort
- Built-in rechargeable battery lasts for hours on single quick charge
- Bluetooth wireless connection
- Connect up to four Pro Controllers at one time for multiplayer action
- Dual analog sticks and ergonomic button layout
- Please note - Not compatible with original Wii system or games

#### **Charging Instructions:**

When the controller battery is low, the battery LED will glow RED.

Please follow the steps below to charge the controller:

- Connect the mini USB end of the charging cable to the charging mini USB socket of the controller (located on the top of the controller)
- Connect the standard USB end of the charging cable to a USB port on the Wii U console, a USB port on a computer or a USB power adaptor
- Charging will begin automatically  
(Please note, Wii U console or computer must be powered on to provide power for charging)
  - The battery LED will glow ORANGE when the battery is charging
  - The battery LED will turn off when the battery is fully charged

#### **Pairing Instructions:**

- Fully charge the Wireless Pro Controller (see Charging Instructions)
- Power on the Wii U console and TV
- Press the SYNC button on front of the Wii U console to display the controller pairing screen
- Press the SYNC button on the back of the controller (all four channel LEDs will start blinking)
  - Channel LED will stop blinking and stay on the corresponding channel number when the controller successfully connects to the Wii U console

#### **Controller Glow:**

- Controller LED's will glow BLUE when the controller is successfully connected to the console
  - Quickly press the power button to turn the button LED's off
  - Quickly press the power button to turn the button LED's on

#### **Resetting the Controller:**

Press the RESET button (located on the back of controller) if the following occurs:

- Game crashes; or
- Controller cannot sync to the console

#### **PRECAUTION AND MAINTENANCE**

Read, understand and follow all instructions, cautions and warnings listed in this manual and in the Wii U Operations Manual. Failure to follow instructions could result in personal injury or damage to the console.

The controller must be used with care to avoid injury. The manufacturer will not be liable for injuries resulting from improper use of the controller. If you have any physical conditions, consult with a physician before using the controller.

Stop using this product and consult a doctor if you or your children have any of the following symptoms: convulsions, loss of awareness, involuntary movement, eye or muscle twitching, altered vision and/or disorientation.

Stop using this product immediately if you begin to feel tired or if you experience discomfort or pain in your hands and/or arms while playing your game. If the condition persists, consult a doctor.

- Avoid prolonged use of this product. Take breaks every 30 minutes.
- Route the charge cable so that it is not likely to be walked on or tripped over. Make sure the charge cable is not placed in positions or areas where it may become pinched or damaged. Do not wrap the charge cable around any part of the body.

- Do not allow children to play with charge cable.
- Do not use additional attachments other than those recommended or provided by the manufacturer unless otherwise specified.
- Do not submerge the controller in water or expose the controller to heavy moisture.
- Keep away from areas where dirt or liquid can get into the controller.
- Do not operate the controller in or near water.
- Do not operate the controller with wet hands.
- Keep the controller away from direct sunlight and extreme temperatures.
- Store the controller in an area away from dust and humidity.
- Do not use the controller in any way other than its intended use.
- Do not use the controller if damaged in any way.
- Do not disassemble any part of the controller.
- This product contains small parts that may cause choking if swallowed. Not intended for use by children under 3 years of age.
- Use a dry cloth to clean the controller; never use chemicals.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.