

# ***hama***<sup>®</sup>

THE SMART SOLUTION

00173167

00173168

00173169

## **Mobile Bluetooth<sup>®</sup> Speaker POCKET CLOCK**

## **Mobiler Bluetooth<sup>®</sup>-Lautsprecher**

**GB**

Operating Instructions

**D**

Bedienungsanleitung

**F**

Mode d'emploi

**E**

Instrucciones de uso

**RUS**

Руководство по эксплуатации

Работна инструкция

**BG**

Istruzioni per l'uso

**I**

Gebruiksaanwijzing

**NL**

Οδηγίες χρήσης

**GR**

Instrukcja obsługi

**PL**

Használati útmutató

**H**

Návod k použití

**CZ**

Návod na použitie

 
**SK**

Kullanma kılavuzu

 
 
 
**TR**

Manual de utilizare



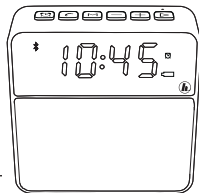


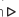
**RO**

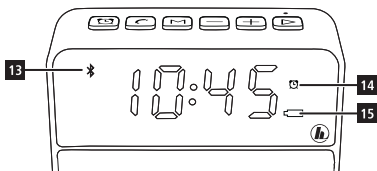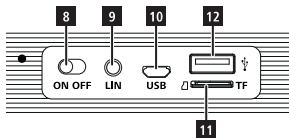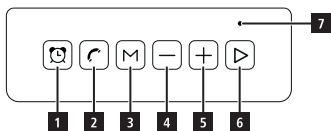





**Controls and Displays**

1. Function button 
2. Function button 
3. Function button 
4. Track/Volume 
5. Track/Volume 
6. Function button 
7. Microphone
8. On/off switch
9. AUX-In socket
10. Micro-USB charging connection
11. microSD card slot
12. USB Type-A (host) reader
13. *Bluetooth*<sup>®</sup> mode indicator
14. Alarm function indicator
15. Battery indicator

Thank you for choosing a Hama product. Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device, please pass these operating instructions on to the new owner.

**1. Explanation of Warning Symbols and Notes****Warning**

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

**Note**

This symbol is used to indicate additional information or important notes.

**2. Package Contents**

- 'Pocket Clock' mobile *Bluetooth*<sup>®</sup> speaker
- Micro-USB charging cable
- 3,5 mm audio cable
- 3,5 mm antenna cable
- These operating instructions

---

### 3. Safety Notes

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Since the battery is integrated and cannot be removed, you will need to dispose of the product as a whole. Do this in compliance with the legal requirements.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not open the device or continue to operate it if it becomes damaged.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Be considerate. Loud volumes can have a detrimental effect on your surroundings.
- Dispose of packaging material immediately according to locally applicable regulations.

- Do not modify the product in any way. Doing so voids the warranty.
- Keep this product, as all electrical products, out of the reach of children!
- Do not operate the product outside the power limits given in the specifications.

### 4. Switching on the product

#### 4.1 Switching on the product

- Slide the **On/off switch** (8) to the **ON** position to switch the speaker on.
- The device emits a sound to confirm that it is ready for use; the display lights up.

#### 4.2 Switching off the product

- Slide the **On/off switch** (8) to the **OFF** position to switch the speaker off.
- The display lighting goes out.



#### Note – Automatic shutdown

- Note that the speaker will automatically turn off after 10 minutes without action (no audio playback/no *Bluetooth*® function).

### 4.3 Battery charging function

#### Warning – rechargeable battery

- Only use suitable charging devices with USB connections for charging.
  - As a rule, do not use charging devices or USB connections that are defective and do not try to repair them yourself.
  - Avoid storing, charging or using batteries in extreme temperatures.
  - When stored over a long period of time, batteries should be charged regularly (at least every three months).
- Connect the included Micro-USB charging cable to the speaker's **Micro-USB port** (10).
  - Connect the unused plug on the Micro-USB cable to an available USB port on your computer or another suitable USB device. Please refer to the operating instructions for the charger used.
  - The **battery indicator** (15) flashes during charging. When the battery is fully charged, the **battery indicator** (15) shows full and is constantly lit.
  - Please charge the speaker for at least 4 hours before using it for the first time.

#### Note – Charging

- It takes about 3 hours to fully charge the battery.
  - The speaker's battery can be charged whether the speaker is on or off.
- The actual battery life varies depending on use of the device, the settings and the ambient conditions (rechargeable batteries have a limited service life).

### 4.4 Audio playback via the included audio cable (3.5 mm jack)

- Ensure that the speaker is turned off.
- Connect your mobile terminal device (MP3 player, smartphone, etc.) and the AUX input (9) of the speaker using the included 3.5 mm audio cable.
- Set the volume on your terminal device to a low level.
- Switch on the speaker as described in **4.1 Switching on the product**.
- Start and control audio playback on the connected terminal device accordingly.
- If the device does not automatically start in AUX mode, press the **M function button** (3) repeatedly until the device uses the desired source for playback.

- Press and hold the **Track/Volume +** button (5) to increase the volume.
- Press and hold the **Track/Volume —** button (4) to reduce the volume.
- Briefly press the **► function button** (6) to pause playback.

 **Note**

- The speaker is only suitable for the playback of MP3 files.

#### 4.5 **Bluetooth®** Pairing

 **Note**

- Check whether your mobile device (MP3 player, mobile phone, etc.) is *Bluetooth®*-capable.
- If not, you can only use the speaker with the included audio cable.
- Note that the maximum range for *Bluetooth®* is 10 metres without obstacles such as walls, people, etc.
- Make sure that your *Bluetooth®*-capable terminal device is on and *Bluetooth®* is activated.

- Make sure that your *Bluetooth®*-capable terminal device is visible for other *Bluetooth®* devices.
- Make sure that the speaker is located within the *Bluetooth®* range of max. 10 metres.

- Switch on the speaker as described in **4.1 Switching on the product**.
- The device emits an acoustic signal; the **Bluetooth® mode indicator** (13) begins to flash. If the device does not automatically start in *Bluetooth®* mode, press the **M function button** (3) repeatedly until an acoustic signal sounds. The device then searches automatically for a connection.
- Open the *Bluetooth®* settings on your terminal device and wait until 'Pocket Clock' appears in the list of *Bluetooth®* devices found.
- Select 'Pocket Clock' and wait until the speaker is listed as connected in the *Bluetooth®* settings on your terminal device. An acoustic signal confirms that connection was successful.
- The **Bluetooth® mode indicator** (13) stops flashing and is now constantly lit.