



Quick Start Guide

Xtreamer WinKey



FCC STATEMENT

1.This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

www.xtreamer.net

Welcome & Connecting

Thank you for choosing Xtreamer WinKey – a premium micro-PC you can connect to any HDMI capable TV/monitor and the one you can take with you everywhere. This Quick Installation Guide will provide you with basic knowledge about connecting and operating the device as well as some useful tips and essential links.

Connect Xtreamer WinKey to an HDTV or an HDMI capable monitor and to power and press the Power button. The device will start and Microsoft Windows 10 will boot to initiate the Setup Wizard. Use Xtreamer AirMouse Pro or another controller device to operate Xtreamer WinKey.

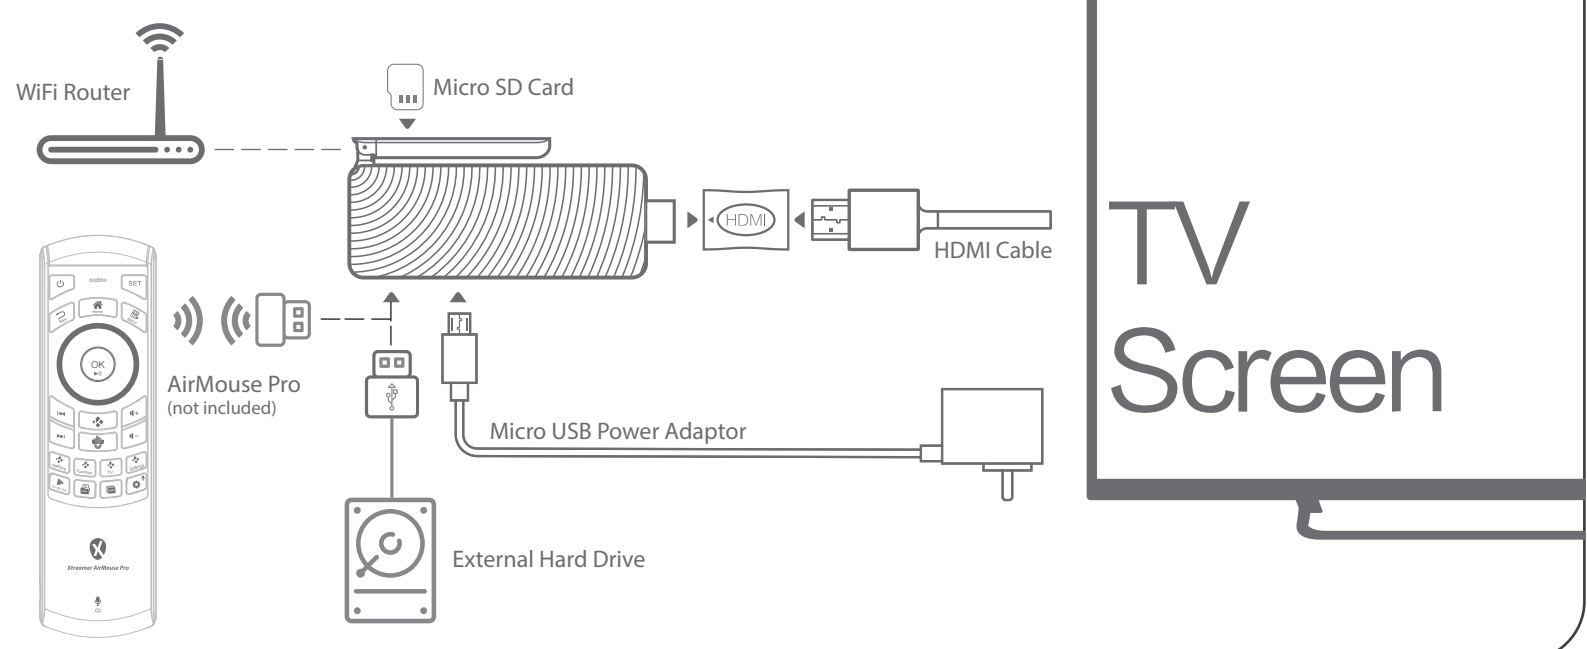

Parts Name & Specs

Operating System:

Windows 10

Processor:

Intel® Atom™ Z3735F(Quad-core)

Base Frequency:

1.33 GHz

Burst Frequency:

1.83 GHz

System Memory:

2 GB DDR3L memory, 1.35V, 1333 MHz

Flash Storage:

32 GB eMMC storage soldered down,

Micro SD slot

Graphics:

Intel® HD Graphics, 1x HDMI 1.4a

24/7 Operation:

Full speed

Cooling methods:

Fanless

Audio:

Intel® HD Audio via HDMI, supporting multi-channel digital audio

Peripheral Connectivity:

802.11b/g/n Wireless Connection, USB 2.0 Hostx1,

Micro USB 2.0 Hostx1, Bluetooth 4.0, Micro SD card slotx1

Measurements:

110 mm x 39 mm x 12 mm

Power Requirements:

5V, 2A wall-mount AC-DC power adapter

Environment Operating Temperature:

-5°C to +50° C

Storage Temperature:

-20° C to +40° C

Package Content:

Xtremer WinKey (Licensed Windows 10 pre-installed)

HDMI extender

OTG micro USB cable

Power Adapter

Quick start guide

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.


-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

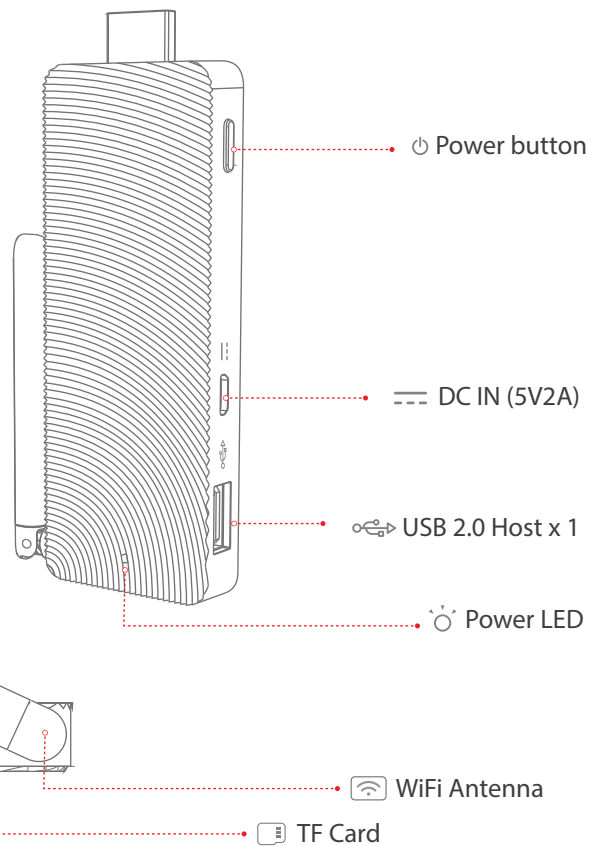

Useful Tips

Necessary Settings

Connect to a Wireless network via Start → Settings → Networks&Internet

Adjust your graphic settings via Start → Settings → System → Display → Advanced Display Settings

Audio\Sound settings are available from the system tray.

Interface Language change

You can change Windows display language by going to Start → Settings → Time&Language → Region&Language.

Please note that Windows will need to download additional language pack.

You can also download the Language Interface Packs directly from the Microsoft site.

Using USB Hub

Please note that if you connect a powered USB hub to your WinKey, you will be able to add peripheral devices, USB storage device etc.

Manage your Storage

Since Xtremer WinKey has limited internal storage we strongly advise to purchase and install a micro-SD card and/or connect an external USB drive.

This will allow you to save all files and install all nonessential programs to these additional storage devices and keep your internal storage clean and your device fast.

Useful Links

Main company website: www.xtremer.net

Forum: <http://forum.xtremer.net>

Knowledge base: <http://forum.xtremer.net/Support/>

If you have any questions about the Windows 10 functions and features, please refer to the Microsoft Support Site: <https://support.microsoft.com/en-us>

