



2TouchPOS Installing
Epson TM-U220B Ethernet Kitchen
Printer
Quick Reference

Contents

About this Document	3
Epson TMU220B Ethernet Kitchen Printer	4
Configuring Kitchen Printer in 2TouchPOS	4

About this Document

This document was written for 2TouchPOS version 3.03.4900.

Epson TMU220B Ethernet Kitchen Printer

1. Click on Windows Start button.
2. Click on Devices and Printers
3. Click on Add Printer, Add a local printer and next
4. Click in the circle for Create a new port. Click on down arrow, a pull down menu will appear, select Standard TCP/IP Port. Click Next.
5. Hostname or IP address enter 192.168.192.168. Click next.
6. Windows will be installing printer.
7. Additional port information required screen pops up, make sure the Device Type is Generic Network Card. Click Next.
8. Install the printer driver screen, under manufacturer select "**Generic**" and under Printers select "**Generic/Text Only**". Click Next.
9. Click Next.
10. Rename Printer from Generic / Text Only to NetKitchen168. Net illustrates it's a network printer. Kitchen illustrates it's a kitchen printer and 168 is the last three digits of the IP address. Click Next.
11. Make sure Share this printer so that others on your network can find and use it is marked. Click Next.
12. Print a text page. Click Finish.

Configuring Kitchen Printer in 2TouchPOS

1. From an empty speed screen, touch "**Options**", "**Admin**", "**System Settings**", & "**Printer**" buttons.
2. From the Available Printers Screen, Touch "**New**" Button.
3. Because a new printer is being added, the description box will be filled in with printer name, to find the network name, touch "**Find**" Button.
4. Select Printer, USB Thermal printer, then touch "**Select**" button.
5. To select a Printer Model, click on pull down arrow and select printer name.
6. Touch "**Test Print**" and save button.