


MANUAL

Wireless Remote Controller

1. Functions Features:

- 1.1 To control the alarm host to arm and disarm.
- 1.2 With the emergency key for urgent help.

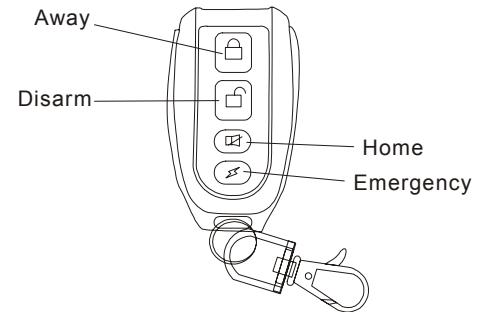

2. Specifications:

- 2.1. Operating power: 27A 12V alkaline battery
- 2.2. Emitting distance: ≥100m (in open area)
- 2.3. Service life: ≤2 years

3. Installation and Usage:

- 3.1. For users to take along.
- 3.2. Generally, press the "Away" key to arm before leaving home; and press the "Home" key to disarm;
- 3.3. Please replace the batteries after one year usage and a shorter control distance.

4. Instruction for configuration

A. Add

- 4.1 【Start to program】(Please refer to 【Start to Program】in Section VI.)
- 4.2【Wireless configuration】:[70 + ENT+ 00 + ENT](At this time, "Learn" light keep on)
- 4.3 Press any key on remote controller twice successively, if you hear "Di----" form the alarm host and see the "Learn" light flashes five times and off, it indicates successfully added.

B. Cancel

- 4.1 【Start to program】(Please refer to 【Start to Program】in Section VI.)
- 4.2【Wireless configuration】:[71 + ENT+ 00 + ENT]if you hear "Di Di---" form the alarm host and see the "Learn" light flashes two times and off, it indicates successfully cancelled.

Notes: 1. You can only add 1 remote controller each time, totally 8 available to be added.

2. All the remote controllers are cancelled after your cancelling operation. You have to do the adding operation if you need one or more.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER 'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation

