 
 


Mi Music Alarm Clock

Operations

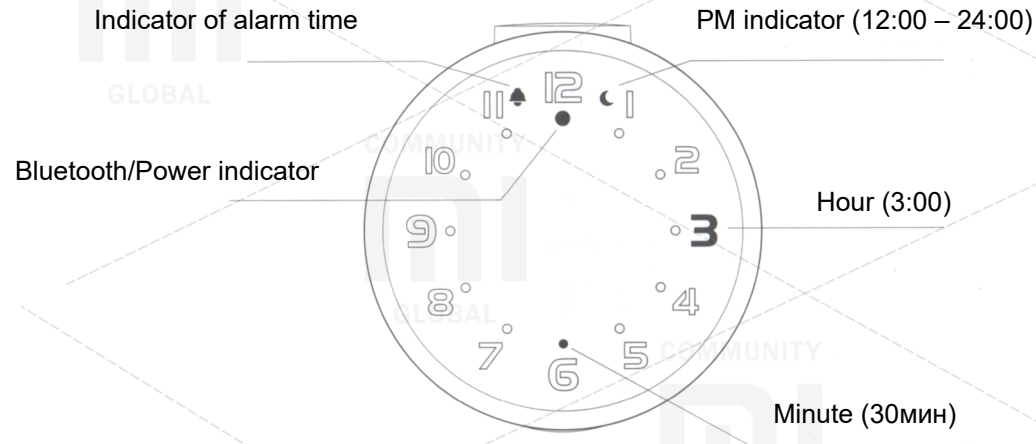

Front side of Mi Music Alarm Clock

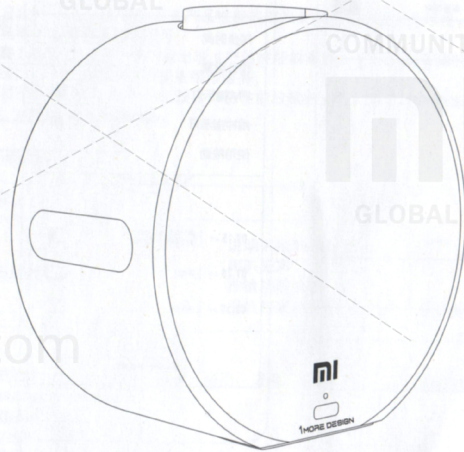

Back side of Mi Music Alarm Clock

On/OFF

In the off state, press and hold the alarm button for 3 seconds; To turn off the alarm, press and hold the power button for 5 seconds.

Bluetooth connect

The first time you use the alarm, Bluetooth automatically activates the pairing mode. Mi Music Alarm Clock remembers the previously connected device and subsequently automatically mates with it. To connect a new Bluetooth device, press and hold the power button for 3 seconds to turn on Bluetooth pairing.

Music playback

After successfully pairing the alarm clock with the device, turn on the music playback function, and enjoy listening to your favorite tracks.

Alarm settings

In either mode, press the power button twice to open the alarm settings. Scroll the button clockwise to set the minutes; Counterclockwise to set the clock. After a single press of the button, all settings are saved, if you double click on the button, settings are not saved. LED digital display indicates a clock, a round small dot indicates minutes. After 12 hours, an «crescent moon» appears on the alarm clock, indicating PM's afternoon (12:00 - 24:00).

Alarm settings

In any mode, the second double-click on the power button opens the alarm setting mode. Scroll the button clockwise to set the minutes; Counterclockwise to set the clock. Open the alarm call settings. If the alarm has already been paired with your device, an alarm icon will appear when you enter the alarm settings.

Setting the Alarm Clock

In any mode, the third time you press the power button, the alarm melody mode is activated. Scrolling the power button, select a melody. Click once on the button to save the settings, click twice to not save the settings.

Turn off the alarm

In any mode, the third time you press the power button, the alarm melody mode is activated. Scroll the power button to the right or left until you hear a voice prompt to turn off the alarm. Press the button once to turn off the alarm.

During an alarm call

1.You can press once or scroll the power button, otherwise the alarm will ring for 3 minutes, after which the repeat mode will turn on. After 9 minutes, you will hear again the alarm clock. The repeat mode is enabled only 2 times.

2.Double-click the power button to turn off the alarm.

 
Other

If no operations are performed for 8 seconds when the function setting mode is activated, the alarm clock switches to the main time demonstration mode.

Press and hold the reset button for 2 seconds to reset the settings, after which the alarm can reset.

Night mode: in the period from 23:00 - 7:00 the volume of the audio signal is reduced; Bluetooth indicator and warning signal can be disabled without user settings.

Function button

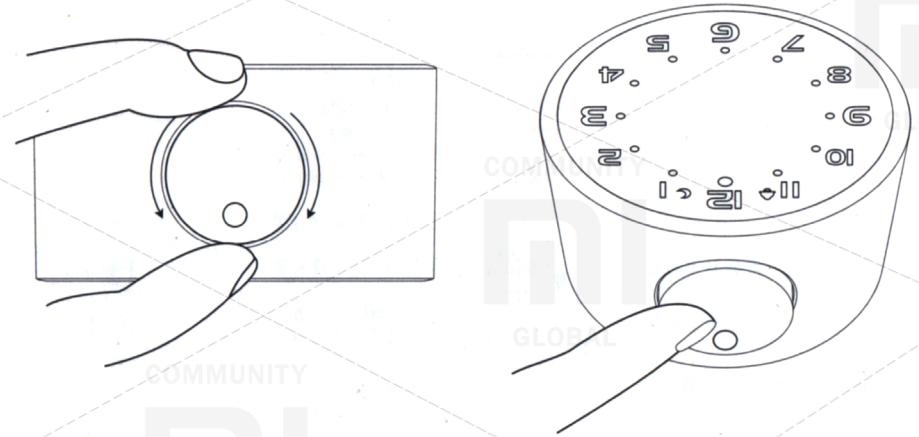

Single-click	Double click	Long press	Scrolling the button clockwise	Scrolling the button counter clockwise	Long press and scrolling
Confirmation Play / Pause	Switching modes A) Time settings B) Alarm settings C) Select an alarm tone / Cancel D) Turn off the alarm	On/Off Looking for Bluetooth devices	Volume up Minutes setting	Volume down Hours setting	Clockwise: next track Counter clockwise: previous track

Indicators

Mode	Status of indicator	Sound signal
Enable	Bluetooth LED Lights blue LED and 26 LED indicators for 1 second	1.The device is on
Restoring communication with device	Bluetooth LED indicator continuously flashes blue twice at intervals of 5 seconds / 10 seconds	2.The device is fully charged / charged at half / charge level low
Connecting mode	Bluetooth LED indicator flashes alternately blue and red	Search for Bluetooth devices
Devices connected	Once Bluetooth LED indicator flashes blue and off for 7 seconds	Search for Bluetooth devices
Charging	During charging Bluetooth LED light is red; Once fully charged the red indicator disappears	
Disabling	Bluetooth LED indicator lights red for 1 second; all lights are off	The device is off

Quick setting

This device is already on the list of Mi Smart Home devices, supports the MIUI system, and can also interface and interact with other Mi Smart Home devices.

1. Installing the APP

To install the Mijia application (Mi Home), find and download it to the APP Store or scan the QR code.

2. Adding a new device

Open the application, click on the «my devices» icon and add «Mi Music Alarm Clock» to your list. After the successful addition of the device, find it in the list of «Smart Devices».



Even more smart devices you can find on the site mi.com or purchase devices in the mobile application Mi «Smart Home»

Mi Music Alarm Clock

The image displays four sequential screens of the Mi Music Alarm Clock app, each with specific features labeled:

- Screen 1 (Main Alarm):** Shows the current time (07:20), next alarm (07:20), and a list of existing alarms (07:15, 07:20, 09:30). It includes a 'Sleep mode' toggle and an 'Add an alarm' button.
- Screen 2 (Sleep mode):** Features a 'Sleep mode' title, a 'Set a timer' field, a 'Countdown' timer (00:00:00), and an 'On button' at the bottom.
- Screen 3 (Repeat selection):** Shows options for 'Repeat selection' (Repeat-single, Default melody) and 'Melody selection' (Default melody).
- Screen 4 (Settings):** Contains 'Time synchronization', 'Synchronization', 'Snooze Mode settings', 'Setting of alarm', 'Alarm indicator', and 'Help' options.

Warranty

Warranty service is carried out in accordance with the law on «Consumer Rights of the People's Republic of China» and «Law on the quality of China's products.» Warranty service includes:

Within 7 days from the date of purchase, in case of a problem from the «Fault List», the Xiaomi Service Center determines the cause of the problem, after which you can choose the return or one-time free replacement of the same model.

Within 15 days from the date of purchase, in case of a problem from the «Fault List», the Xiaomi Service Center identifies the problem, after which you choose a one-time free replacement of the same model or repair.

Within 12 months from the date of purchase, in case of a problem from the «Fault List», the Xiaomi Service Center determines the problem, after which you are provided with free repair.

Conditions, that are not included in the warranty service

Conditions, that are not included in the warranty service

List of circumstances under which warranty service is impossible:

1. Damage resulting from improper use of the device, its care or storage;
2. The warranty has expired;
3. Damage caused by force majeure;
4. Breakdowns that have occurred as a result of maintenance of the device in unauthorized service centers or unauthorized persons.

Name	Toxic and hazardous substances and elements					
	Pb	Hg	Cd	CrVI	PBB	PBDE
Circuit board components	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Housing	O	O	O	O	O	O
Panel, adhesive tape and other small additional components	O	O	O	O	O	O

This table is provided in accordance with SJ / T 11364.

O: Toxic and harmful substances in all components of this device are contained below the limit value in accordance with GB / T 26572.

X: the presence of toxic and noxious substances in at least one of the components of this device in an amount exceeding the limit value, according to GB / T 26572.