 



# Smart-ukulele Populele

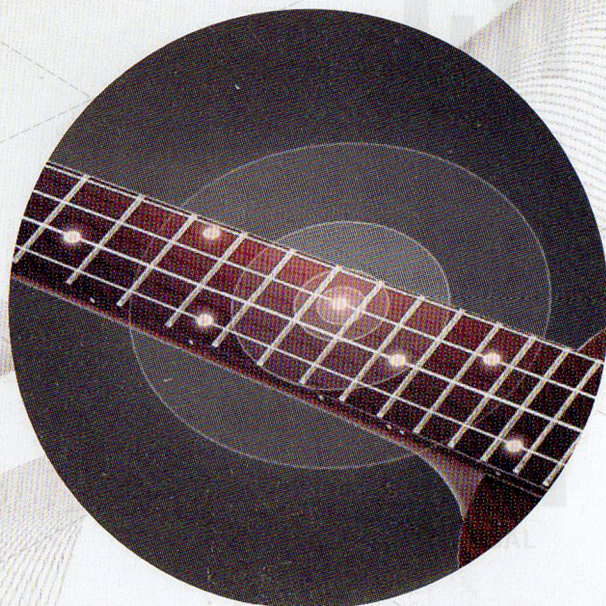

Manual


01
 
## Description of Populele

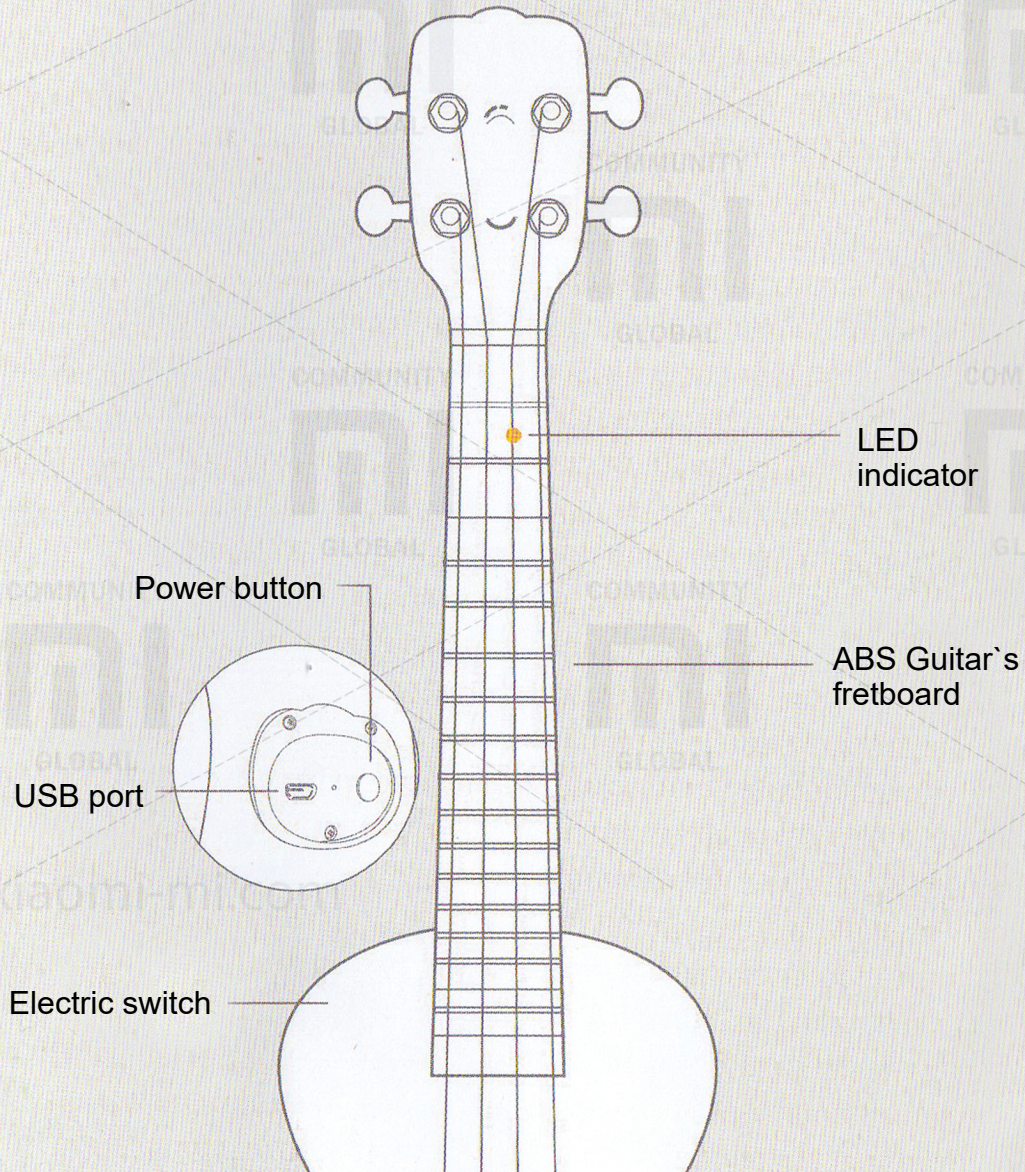

02


## Accessories Populele

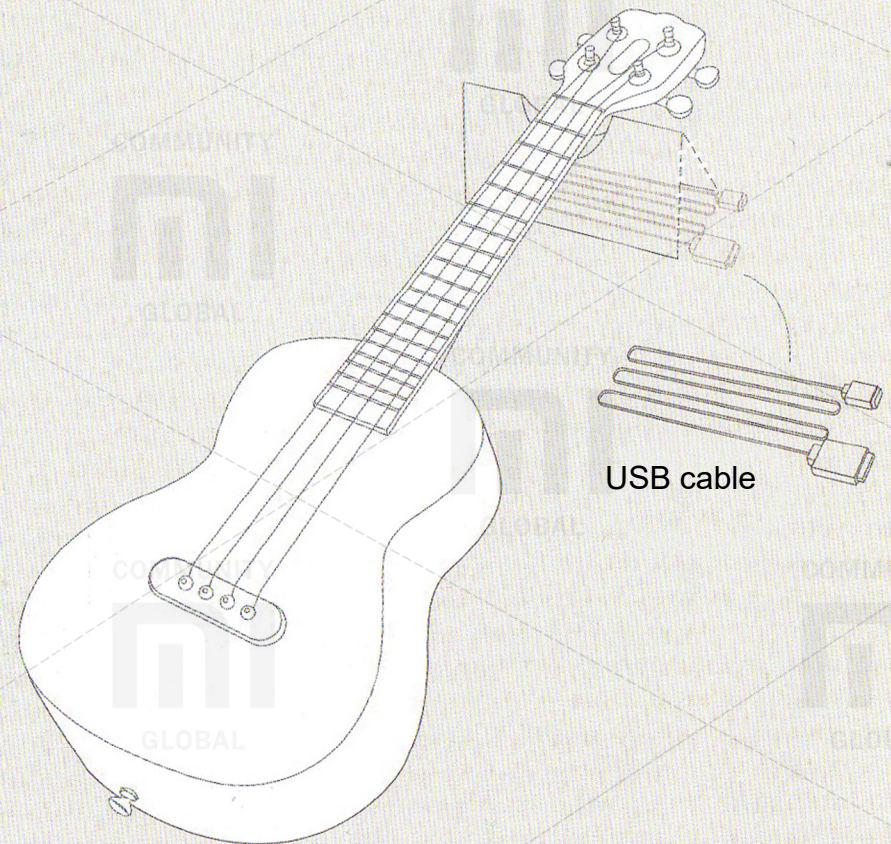

A charging cable is not included  
The battery is charged by USB port

## How to charge Populele

1. Take the USB-cable plug into the Micro-USB Populele
2. During charging, the outermost LED indicator on the left to the right shows the battery charge level
3. Four indicators mean a full charge of the battery (it takes about 3 hours to fully charge)

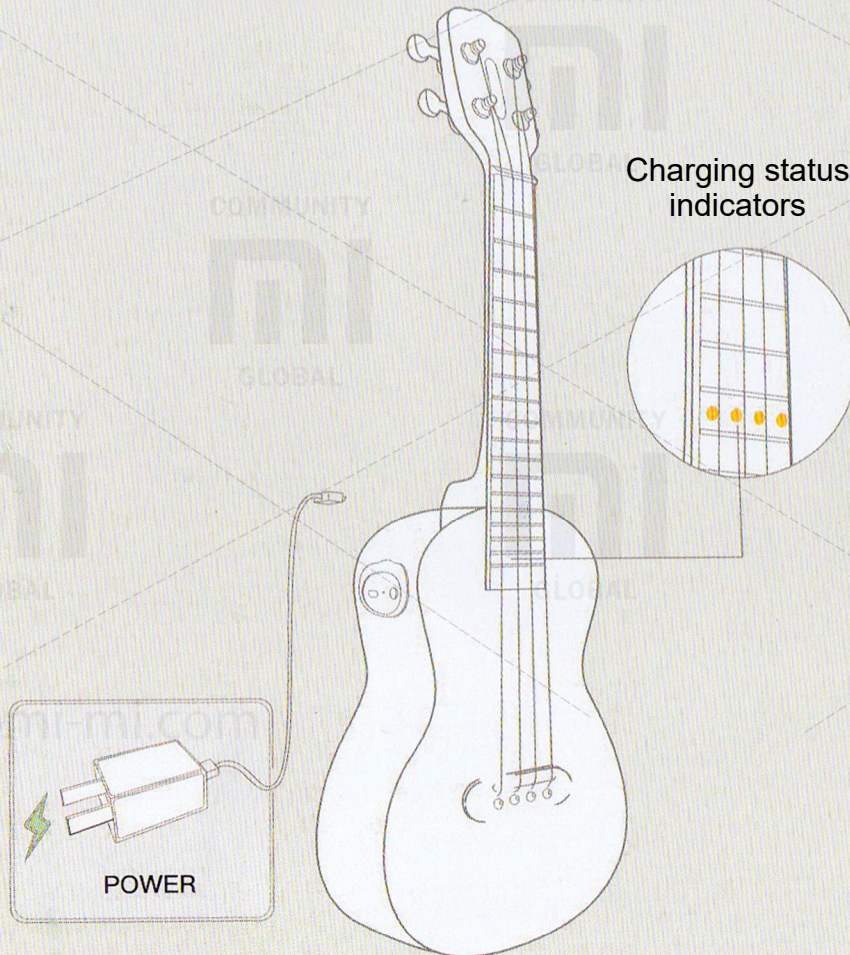

## Frequently asked Questions

### 1. What is the difference between a smart guitar and a conventional guitar?

Populele can interact with a mobile application. You can learn how to sing to your own accompaniment.

### 2. What would you do if you can not connect the bluetooth?

1. Make sure the device is turned on. Hold the power button for 4-5 seconds. After the bright blue light comes on, open the application to connect the bluetooth.
2. Press the button on the case to check the level of the ukulele charge. If the low indicator flashes on the fretboard of the guitar, this means a low battery, you need to connect a power source.
3. The Bluetooth is connected using the «Populele» application, and not using the Bluetooth interface on the phone.

### 3. Inaccurate sound recognition on Ukulele, if not playing on ukulele, will the recognition be correct?

1. Adjust the strings on the instrument, then try playing on it.
2. The sound recording environment affects the quality and accuracy of recognition, it is not recommended to record sound in noisy conditions.


### 4. What if, while playing the guitar, the application does not recognize the sound?

1. IOS: open Settings, find Populele, click on the application to check whether the microphone is turn on
2. Android: Find the Sound Recorder application in the settings, activate the sound recording function.

05

## Populele Maintenance Instructions

1. Do not expose the guitar to direct sunlight, or too high or low temperatures and excessive humidity.
2. Keep the instrument away from walls, windows, doors and heaters.
3. Do not disassemble the charger to avoid damaging the internal circuit.

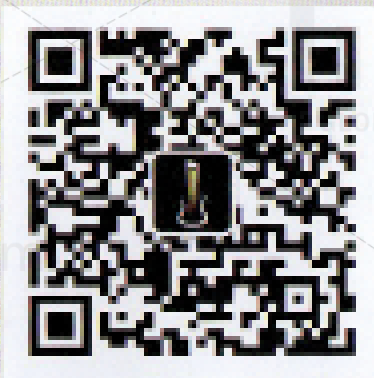

400-9002055  
PopuMistic

06

## Populele application




The user when buying a ukulele, receives a card of permanent Vip-client




Scan the QR code, then select Download application  
on Android / iOS

## How to connect Populele to a mobile application:


1. Before use, check if bluetooth is plug in on the mobile phone. Download the Populele application to your mobile phone.

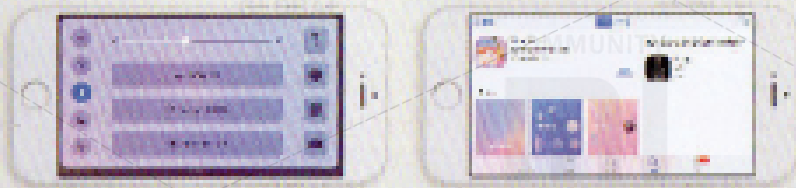


2. Open the application, then register. Enter the Bluetooth device interface, the application will automatically detect Populele.

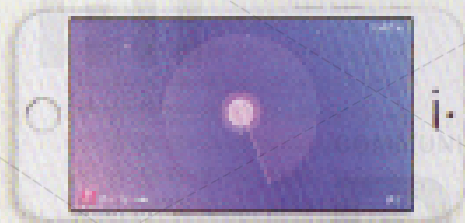


3. Press and hold the power button for 4-5 seconds. When the blue indicator starts flashing, it means that the Populele bluetooth is already successfully connected. (If the bluetooth is not connected within a minute, restart the device).

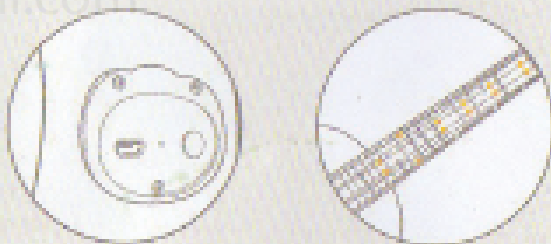


4. If the device does not turn on, the indicators blink constantly, this means Low battery, i.e. It is impossible to connect the bluetooth. Connect the power supply, then try to turn on the device again.

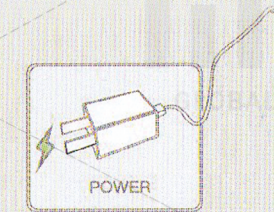

5. When the bluetooth interface detects Populele in the application, a «graphic image of the guitar» will appear. Click on the « graphic image of the guitar » interface to connect it. With the correct connection, the Bluetooth interface appears, as well as the «Connected» window (as shown in the figure).

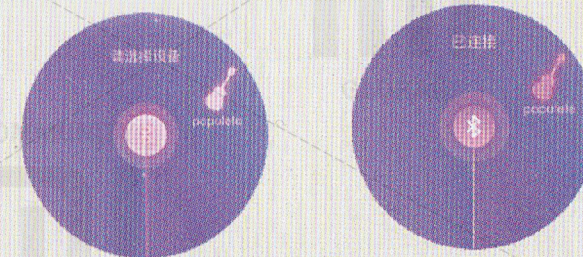

6. After successful connection, the blue indicators stop blinking, the LED indicators should be constantly lit (as shown in the figure). Now you can start the application and continue playing the instrument.

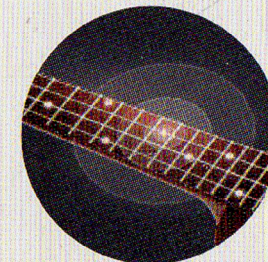

## Conditions of warranty service

If there are any questions about the quality of the goods, within 7 days from the date of purchase of the product Populele, in the presence of a commodity check, the Buyer at an invoice price can make a one-time return and replacement of the goods, or exchange of the goods purchased by him.

Name	Warranty period	List of faults
Populele	1year	1. Production fault, external housing damage 2. can not turn on the device 3. reactive indicators 4. The device buttons do not work 5. The battery does not work Populele

### Warranty service is not performed in the following cases:

Maintenance, improper use; Blows, negligence, mistaken use, damage, alterations, misuse of components, broken label, unauthorizing access, marking.

Exceeding the warranty period of the «Three Guarantees».

Fire, flood, thunder and other force majeure circumstances that resulted in damage to products.

Damage resulting from unauthorized maintenance.

Created by the user all sorts of problems, installing a new system and components that are not included in the «List of faults».

## Warranty card

User information:

Full name: \_\_\_\_\_

Contact number: \_\_\_\_\_

Address: \_\_\_\_\_

Index: \_\_\_\_\_

E-mail: \_\_\_\_\_

### Information about the product:

The ukulele model: \_\_\_\_\_

Seller: \_\_\_\_\_

Seller's Name: \_\_\_\_\_

Contact number: \_\_\_\_\_

Address: \_\_\_\_\_

Date of sale: \_\_\_\_\_ Invoice number: \_\_\_\_\_

Repair record: \_\_\_\_\_

Please keep the warranty card properly.

Date of repair service	Description / reason	Product name and model	Repair date	Repairman's signature



**I'M FUN, AND YOU?**

**Learn and play in 15 minutes**