 


# ON OFF WiFi Smart Switch

model: S1

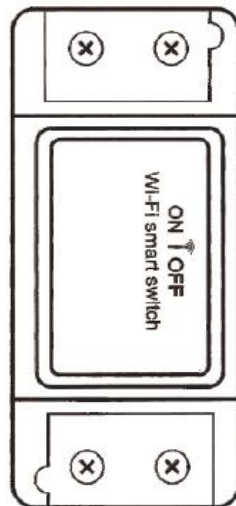

## Parameter:

Power supply: AC100-240V, 50/60HZ  
Max Current: 3A  
WiFi Standard: 2.4GHz b/g/n  
Material: ABS V0  
Size: 88\*38\*22mm

 
## checklist: before using the device

Your smart phone or tablet has connected to a 2.4G WiFi with internet

Your have the correct WiFi PWD

Your smart phone or tablet must have access to APP Store, Google play.

Your router is MAC-open

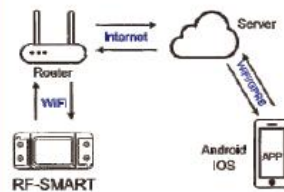

## User Guide

1 Start with "Intelligent life" APP.



 
2 Register an Intelligent life account.

3 If you have Intelligent life account just log in.


4 Power up.

ON/OFF operating principle

The connected appliances work/stop through live wire power on/off.

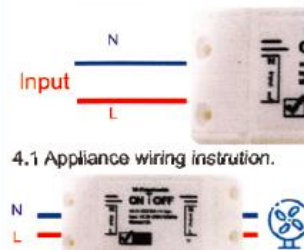

## 4.2 Ceiling lamp wiring instruction.

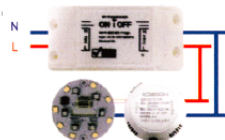 


## 4.3 One wire wiring instruction.



Note: The ON/OFF switch must be powered up by N and L wires.

 5 Press and hold the button for about 5 seconds until the WiFi LED blinks fast.

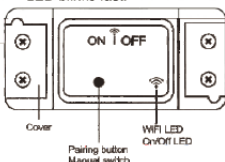

6 Enter the App, tap "+" in the upper right of the page to enter network connection page.

7 There are two network connection methods (Normal mode and AP mode). Normal mode is default. Users could tap the upper right corner to switch the connection method to AP mode.

8 please make sure the device's indicator light rapidly flashes (2 times per second), tap to go on to the next step

9 If indicator light is not rapidly flashing, tap "How to set indicator light as rapid flashes" to view operation processes

10 Input your WiFi password.

11 Name your device.

12 the device is online.

## TROUBLESHOOTING

Q: How to set indicator light as rapid flashing?

1 Power on device, power off after 10s and then power on.

2 hold the reset button for 5s.

3 Confirm indicator light is now rapidly flashing.

Q: How to set indicator light as slow flashing?

1 Power on device, power off after 10s and then power on.

2 hold the reset button for 5s.

3 Confirm indicator light is now rapidly flashing.

4 Hold reset button for 5s until indicator light is slowly flashing.

The new added device needs 1min to connect to WiFi and the Internet

If it stays offline for a long time please judge the problem by the WiFi LED status.

WiFi LED quickly blinks one time every second;

Sonoff failed to connect to your WiFi

1 Maybe you have entered wrong WiFi password.

2 Sonoff is too far away from your WiFi please take it closer.

3 Make sure your router is MAC-open, if still failed, try to open a mobile hot spot and add again.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

