


Bluetooth Microphone

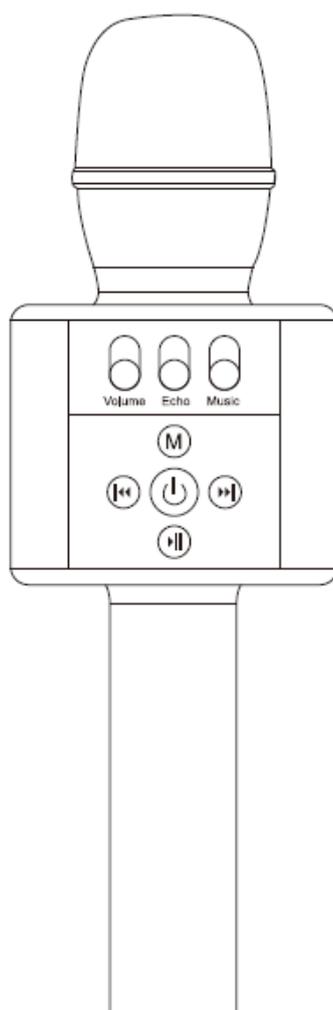


K9

Instruction for use

English

Microphone Button Functions

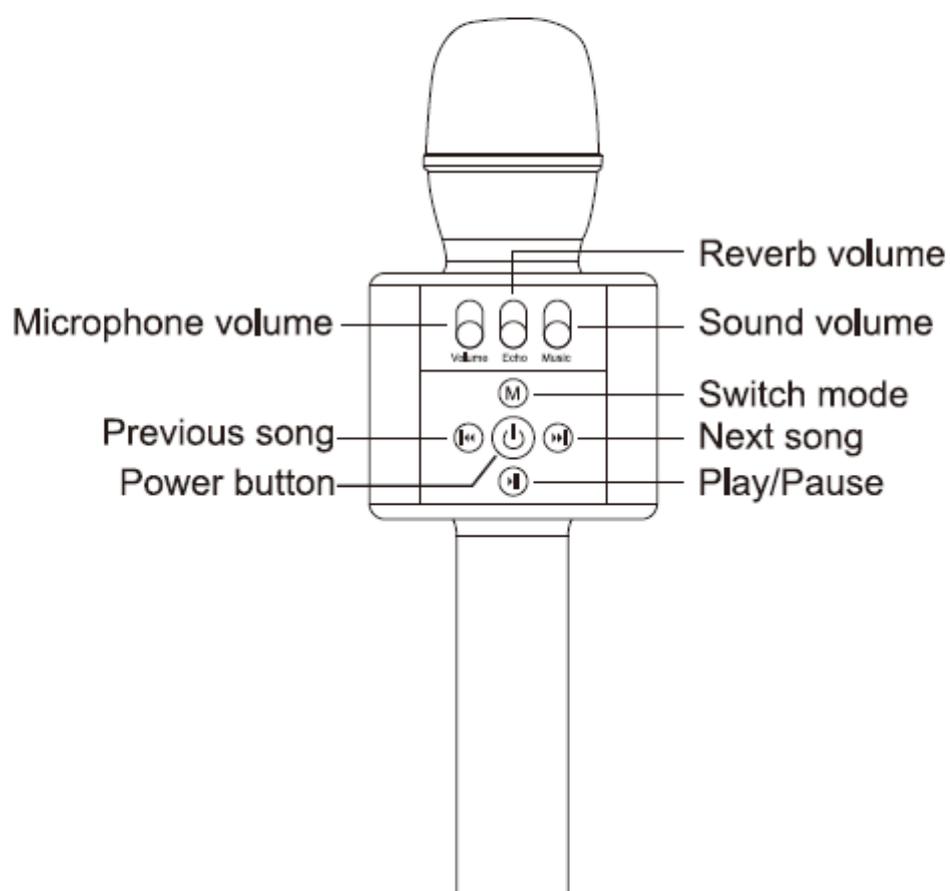

Button Operation

1. "  "

Long press: Power on/off;

Short press: Eliminate audio sound.

2. "  "

Short press: Previous (MP3/FM mode);

Long press: Shooting (Photography mode).

3. "  "

Short press: Next (MP3/FM mode);

Long press: Shooting (Photography mode).

English

4. " ▶|| "

Short press: Play/pause in MP3 mode, automatic search channel/stop search channel in FM mode;

Long press: In Bluetooth, FM and TF card mode, it is Voice Changer.(Magic Sound)

5. " M "

Short press: Switch mode, Bluetooth mode, Recording mode (Displayed only when the recording cable is inserted);

Long press: Turn on/off the ambient light.

Wireless Karaoke

1. Turn on the power: Long press " ⏻ " to boot.
2. Bluetooth connection: Turn on the mobile phone Bluetooth, search for the device named "D18" and click to pair, then a prompt tone indicates that the connection is successful.
3. Adjusting vocals: Adjust the vocal and reverb volume to the appropriate position.
4. Start karaoke.

FM Function

1. Short press " M " to switch radio mode.
2. Short press " ▶|| " to automatically search for channels, and press again to stop searching.
3. Short press " ⏪ " and " ⏩ " to select a channel.

Phone Recording Song

1. Connect the recording cable: Insert the MICRO head of the recording cable into the MICRO interface of microphone, and insert the 3.5mm interface into the earphone jack of the mobile phone.

English

2. Recording song: Open karaoke software in the mobile phone such as Tianlai karaoke, KuGou music or other recording songs APP. Select a song you like and start singing as method above, recording the song.

Camera Function

1. Open the mobile phone Bluetooth and search equipment named "D18" ,
2. Open camera function of the mobile phone and long press " |◀◀ " or " ▶▶| " to take photos.

Note

1. In the camera function, the Android system requires version 4.2.2 or higher, IOS requires version 6.0 or higher, other versions are not supported temporarily . And the mobile phones with independent camera physical buttons are not supported generally .
2. In the recording mode, the microphone cannot switch songs and adjust the sound volume, which can only be adjusted by devices such as mobile phones.
3. Microphone LED colors, brightness and flicker frequency depend on the sound and vibration frequency of the audio and microphone.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.