


145X210mm

Bluetooth Rock Speaker

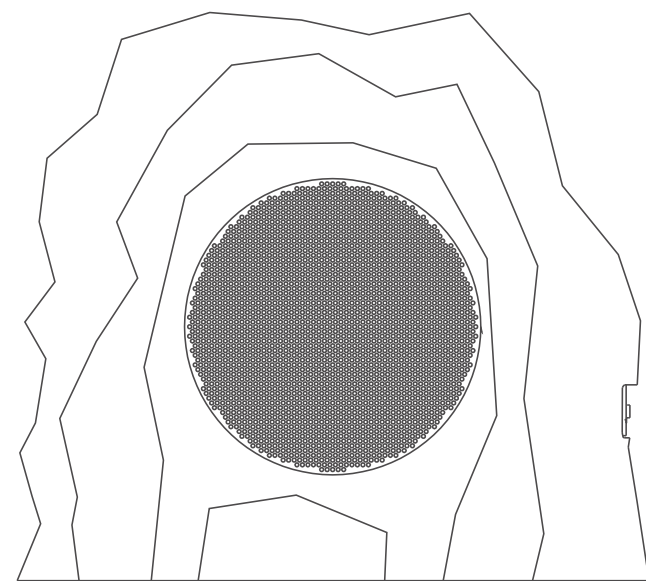

USER MANUAL
MODEL: BTS-570B



Goodmans

1 Welcome

2 Your Bluetooth Rock Speaker

- 2.1 In the box
- 2.2 Front view
- 2.3 Side view
- 2.4 The control panel

3 Quick Setup

- 3.1 Charging your Bluetooth rock speaker
- 3.2 Pairing with a Bluetooth device
- 3.3 Playing your music
- 3.4 Using the AUX-In connection

4 Troubleshooting

5 Technical Specifications

6 Customer Support

1 Welcome

Thank you for choosing this Goodmans product. We've been making electronics products for the British people for over 90 years. Each of our products has been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your Bluetooth speaker.

2 Your Bluetooth Rock Speaker

2.1 In the Box

Carefully remove your Bluetooth rock speaker from the box.


Inside the box you will find:

- 1 x Bluetooth rock speaker
- 1 x Micro USB cable
- 1 x Aux cable
- Instruction Manual
- Safety & Guarantee Leaflet

If any of these items are missing contact customer support at Goodmans@bmstores.co.uk


2.1 Front View

- ① Speaker

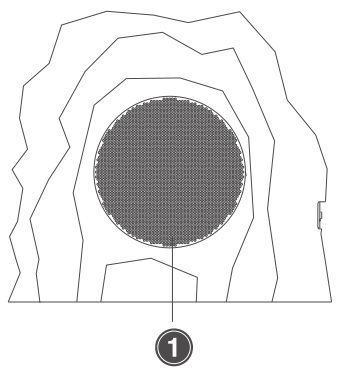

2.2 Side View

- ② Mode indicator light
- ③ Power ON / OFF button
- ④ Micro USB charging socket
- ⑤ AUX-In port

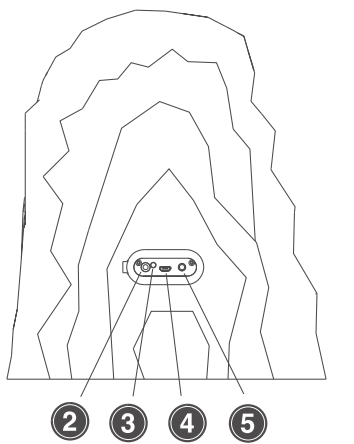

2.3 The Control Panel

Keypad	Operation	Function
③	Power ON / OFF button	Press and hold the button for three seconds to switch the power On or Off.

3 Quick Set Up

3.1 Charging Your Bluetooth Rock Speaker

1. Your Bluetooth rock speaker has a built in rechargeable battery so it can be used anywhere indoors or outdoors. Before using it for the first time please fully charge the battery.
2. To charge, open the silicone control panel cover on the right hand side of your Bluetooth rock speaker.
3. Connect the USB cable provided to the USB port on your Bluetooth rock speaker.
4. Connect the other end of the USB cable to a USB port on your computer, or a 5V 1A USB wall charger. A wall charger is not provided with this product. When your Bluetooth rock speaker is charging the LED indicator will be red.
5. When the Bluetooth rock speaker is fully charged the red LED indicator will turn off.
6. When charging is complete, remove the USB cable and make sure that the silicon cover is closed.

Note: When the battery is getting low, the low battery warning alert will sound. When you hear this, please re-charge the battery.

3.2 Pairing With a Bluetooth Device

1. Press the On/Off button for three seconds until you hear 'Pairing'. The LED indicator will show a blue flashing light.
2. Using your Bluetooth phone or tablet, turn on Bluetooth and search for Bluetooth Devices.
3. In the available list you will see 'BT ROCK SPK'. Select this device. If you are asked for a pass code, enter 0000.
4. When successfully paired, the LED indicator will stop flashing and you will hear 'Connected'.

3.3 Playing Your Music

1. When your phone or tablet is paired to the Bluetooth Rock Speaker, use your music app to playback your music.
2. To adjust the volume, use the volume controls on your phone or tablet.

3.4 Using the Aux-In Connection

1. If your music device doesn't have Bluetooth, you can use the Aux-In connection.
2. Open the silicone control panel cover on the right hand side of your Bluetooth rock speaker. When using the Aux-In connection your Bluetooth Rock Speaker will not be waterproof.
3. Connect the Aux cable provided to the Bluetooth Rock speaker and connect the other end to your music device.
4. Select your music on your music device and select 'Play'.

Note: When an Aux cable is connected your Bluetooth Rock Speaker will automatically disconnect from your Bluetooth phone or tablet.

FCC Instructions

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4 Troubleshooting

Problem	What to do
I can't pair the Bluetooth Rock Speaker with my Bluetooth device.	<ul style="list-style-type: none"> • Turn the Bluetooth Rock Speaker On. • Make sure that the Aux cable is not connected. • Make sure that the Indicator LED is flashing blue. • If it is not flashing blue, it is already paired to another device. Un-pair that device and try again.
I can't hear my music.	<ul style="list-style-type: none"> • Turn the Bluetooth Rock Speaker On. • Using the volume controls on your music device, turn the volume up.
I can't turn my Bluetooth Rock Speaker On.	<ul style="list-style-type: none"> • Make sure that the Bluetooth Rock Speaker is fully charged. • Press the On/Off button for three seconds to turn it On.
My music device keeps on disconnecting from the Bluetooth Rock Speaker	<ul style="list-style-type: none"> • Make sure that the Bluetooth Rock Speaker is fully charged. • If the Aux cable is connected, remove it. • Make sure that your music device is not further than 10 metres away from the speaker.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5 Technical Specifications

Model Number	BTS-570B
Built-in Battery	3.7V / 2000mAh
Charging Input	DC 5V / 1000mAh
Bluetooth Specification	Bluetooth V4.2
Maximum Bluetooth Operating Distance	10 metres
Frequency Response	80-18KHz
Product Size	225 x 245 x 270mm (APPROX.)

6 Customer Support

For all product support enquiries, please email: goodmans@bmstores.co.uk

This Product is intended for use within the UK

Declaration of Conformance

The full text of the EU declaration of conformity is available at the following internet address:

<http://www.bmstores.co.uk/technical-information>

Goodmans