

SYLVANIA

PORTABLE TRUE WIRELESS BLUETOOTH SPEAKER

Model No.: SP832 **USER MANUAL**





INSTRUCTION MANUAL

*The picture is only provided for reference. Please refer to the actual unit! SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

Getting Started

- Remove the product from the box
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- . 1pc USB Charging Cable (with 2 Micro USB outputs)
- 1ncs Aux Cable
- Instruction Manual

Features

- · Portable True Wireless Bluetooth Speaker
- Double up your music beats with this Portable True Wireless Speaker, turn them on and pair with each other wirelessly
- · Connect with your mobile device and stream wireless true wireless music double
- Wirelessly connect both speakers for true right & left stereo play back
- Works independently or together as paired true wireless speaker.
- Built-in magnet at the bottom that sticks to each other
- Wireless range up to 10 meter

Safety Instructions

Keen the unit away from heat sources, direct sunlight, humidity, water and any other liquids Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

Do not put objects into any of the openings.

Keep the unit free from dust, lint etc.

Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This product is not a toy

Do not use the headset at excessive volume levels, as damage to hearing may occur.

Charging the speaker

Description of Parts

Charging Slot

INSTRUCTIONS FOR LISE

LED Light Indicator

uilt-In Microphone

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

MF (Multi-Function) / Phone button/Play and Pause button

Built in magnet on bottom to suck 2 units together

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes about 1 hour to fully charge the speaker. Once the speaker is fully charged, LED Light

Please charge it completely before the first time use.

Turning on/off the Bluetooth Speaker

Press and hold the MF button for 2-3 seconds to turn ON or OFF the device.

Connecting two Speakers and a Bluetooth device for TWS pairing function Activate the TWS pairing function:

1. Press and hold the MF button on both Speakers for 2-3 seconds simultaneously to turn on, you would hear an indication tone and blue LED flashes rapidly from each

2. After few seconds, both Speakers will pair together with another indication tone. The LED light indicator on the host Speaker will flash blue rapidly, while the subordinate Speaker will flash blue slowly.

Remark: If they do not pair together automatically, short press the MF button on any one speaker, and the speakers will automatically pair with each other within few seconds. Once paired successfully, you will hear an indication tone, and the LED light indicator on the host Speaker will flash blue rapidly, while the subordinate Speaker will flash blue slowly.

- At this point, activate the Bluetooth function on your mobile device, and search for Bluetooth devices near you. Your mobile device should show one of "Sylvania SP832" instead of two in list, (This is the host Speaker. The reason you do not see subordinate Speaker in the list of available devices is that it is already paired with the host Speaker). Choose it to start the TWS pairing function.
- 4. Once paired successfully, an indication tone will be heard and the LED on the host Speaker will stay on.

Making a call with the Bluetooth Speakers in TWS pairing mode

Function	Operation	Button
Answer incoming call	Incoming Call	Short press the Phone button of one Speaker to answer an incoming call.
Reject Incoming Call	Incoming Call	Press only the Phone button of the host Speaker for 1-2 seconds
End call	Incoming Call	After your phone conversation, short press the Phone button of one Speaker
Redial last number	Standby mode and connected to a device	Short press the Phone button of one Speaker twice

- 1. Only host Speaker supports phone conversations.
- 2. The host speaker is the left channel after paired with each other.

Listening to Music Wirelessly in Stereo pairing mode

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speakers to stream music wirelessly. Once it is paired, play music from your

Function	Operation	Button
Pause	Playing music	Short press the MF button of one Speaker will pause the music
Play	Pausing	Short press the MF button of one Speaker will resume the music

Note: Other functions including volume increase/decrease, next/previous track, you may need to control through your source device.

Pairing either one Bluetooth Speaker with Bluetooth devices (phone or tablet that support call-answering) Ensure the Bluetooth Speaker is turned off, press and hold the MF button for 2-3

- seconds to turn on, you would hear an indication tone and blue LED flashes rapidly. · Place the Bluetooth Speaker and Bluetooth device (phone or tablet that support call
- answering) no further than 1 meter apart from each other: · Activate the Bluetooth function on your mobile device. Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- . Once you have activated Bluetooth on your mobile device, select the "Sylvania SP832" from the list of available Bluetooth devices.
- If required, enter the password '0000' to confirm & finalize pairing.
- . Once paired successfully, another indication tone will be heard and the blue LED will stay on.
- · You can now start to use the Speaker.
- If pairing is unsuccessful, turn off the device first and then re-pair following the
- Once you have paired the Bluetooth Speaker with a mobile device, the Speaker will remember this mobile device and will pair automatically when its Bluetooth is activated within the range, during subsequently pairing. You do not need to re-pair any previously connected devices.
- . The Bluetooth Speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Making a call with the Bluetooth Speaker in Bluetooth mode

Dasic Operation	saic operation		
Function	Operation	Button	
Answer incoming call	Incoming Call	Short press the Phone button to answer an incoming call.	
Reject Incoming Call	Incoming Call	Press and hold the Phone button for 1-2 seconds	
End call	Incoming Call	After your phone conversation, Short press the Phone button	
Redial last number	Standby mode and connected to a device	Short press the Phone button twice	

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Pause	Playing music	Short press the MF button will pause the music
Play	Pausing	Short press the MF button will resume the music

Note: Other functions including volume increase/decrease, next/previous track, you may need to control through your source device.

Play music through "Auxiliary" mode

- Turn ON the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port, and the other end to the audio device (such as phone / MP3 Player / computer / tablet /etc.).
- Select your favorite song at the source device to play.

Note: Play, Pause, Skip Forward, Skip Backward, Volume Increase/decrease can only be controlled through the source devices, while playing music in Auxiliary mode.

Note: When inserted the AUX in cable to this product, it will be disconnected the Bluetooth.

Read the following recommendations before using the Bluetooth Speakers. Following these you will be able to enjoy the product for many years

- . Do not expose the Bluetooth Speakers to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- . Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not dispose of the device in a fire as it will result in an explosion.
- . Do not expose the device to contact with sharp objects as this will cause scratches and
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not

Sr

pecifications	
Bluetooth specification	Bluetooth 4. 2
Operating distance	10 meter
Working time	up to 2 hours (moderate volume)
Charging input voltage	DC 5V
Charging time	about 1 hour
Speaker output	3W (each)
Built-In Battery	400mAh (each)
Size	67.5x64x89mm (each)
Weight	230g (each)

(Note: Battery life & charging time may vary based on usage & types of devices used.)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Regrient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the

-Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information, please call: 1-800-968-9853.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

receiver is connected.