

SOUNDLOGIC™ XT

RAINBOW Bluetooth SPEAKER



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Rainbow Wireless LED Speaker
- USB charging cable
- 3.5mm auxiliary cable
- Instruction Manual


Key Features

- Rainbow Wireless LED Speaker
- Built-in Bluetooth – connect & stream wireless music anytime, anywhere
- Awesome LED layers light-up to your music beats
- Color changing LED lights
- Built-in microphone for hands-free calls
- Great for any occasion or everyday use
- Built-in rechargeable battery
- Micro USB recharge cable included

Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Description of Parts

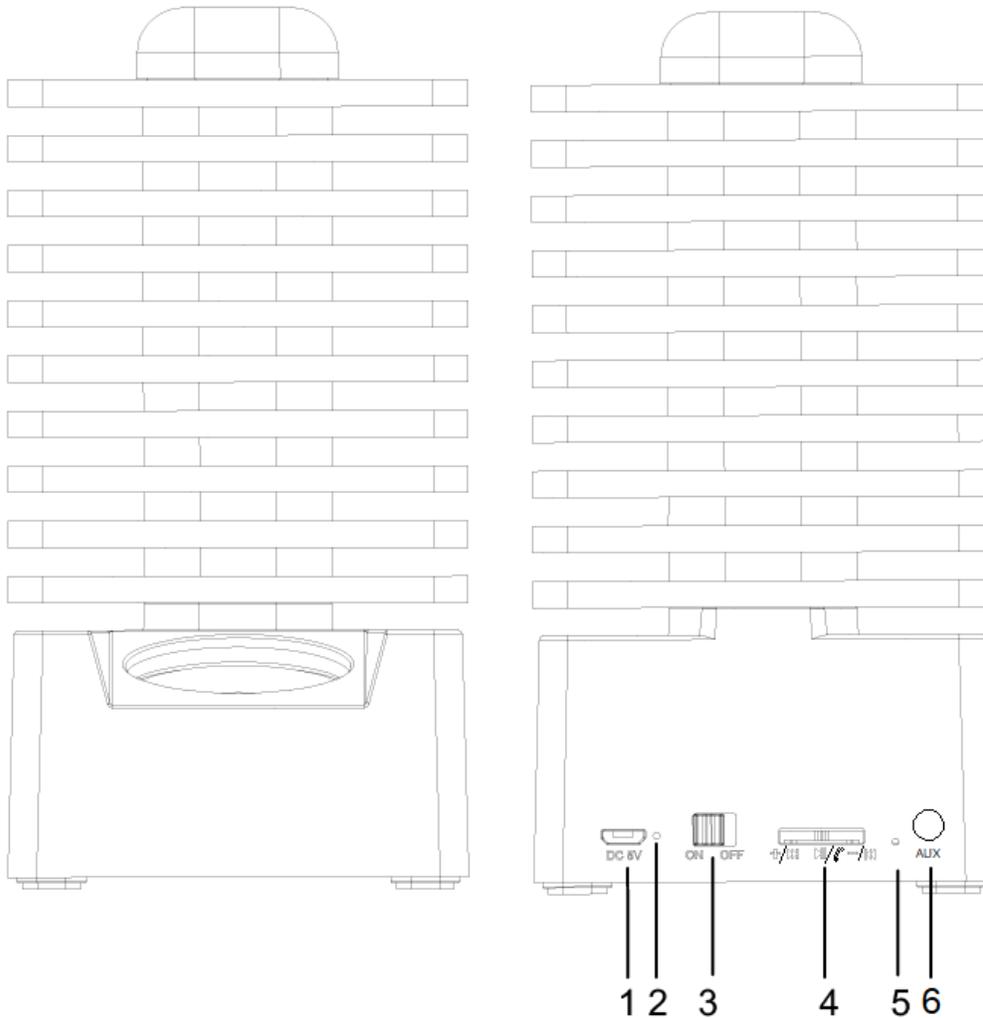

Item	Function	Operation
1	DC Charging Port	DC Charging Port – To charge the speaker
2	LED indicator	Red light stays on during charging, and turns off when speaker is fully charged. Bluetooth mode - Blue LED indicator blinks.
3	Power Switch	To turn ON/OFF the speaker.
4	Prev / Volume - / Next / Volume + / play/pause / phone button	Push the button to right will move to the previous track, and long push to right will decrease the volume. Push the button to left will move to the next track, and long push to left will increase the volume. Play / pause button - Short press will pause or restart the music. Phone button - Answer / end call / redial last number
5	Built-In Mic	For Hands-Free Conversation
6	Auxiliary port	Auxiliary mode playing

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take around 2-3 hours to fully charge the battery.

Turn On/Off the Speaker with LED layers light

Slide the “Power” Switch to ON/OFF position to turn on/off the unit.

Turn the speaker to Bluetooth pairing mode -

1. Slide the “Power” Switch to ON position to turn on the unit.
2. You would hear an indication tone, and Blue LED indicator light will blink rapidly, your speaker is now ON and is entering “pairing” mode.

(Note: Speaker automatically pairs with the previously paired devices.)

Pairing your device with Bluetooth Speaker –

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within the distance of 26-33 Feet. Simply follow below steps.

1. Slide the “Power” Switch to ON position to turn on the unit.
2. You would hear an indication tone, and Blue LED indicator light will blink rapidly, your speaker is now ON and is entering “pairing” mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is “**SL RAINBOW**”, pair it with this device.
6. If required, enter the password ‘0000’ to confirm the finalized pairing.
7. Once paired successfully, you would hear an indication tone and the blue LED indicator light will blink slowly.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song on your Bluetooth device and the music should then stream through the Bluetooth speaker.

Talking using the Bluetooth Speaker

Please ensure that your mobile phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the Phone button to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the Phone button
Volume Increase	During a call	Long push the Volume + to left will increase the volume
Volume Decrease	During a call	Long push the Volume - to right will decrease the volume

Redial last number	Standby mode and connected to a device	Short press the Phone button twice
--------------------	--	------------------------------------

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Long push the Volume + to left will increase the volume or long push the Volume - to right will decrease the volume
Pause	Playing music	Short press the play/pause button once will pause the music
Play	Pause	Short press the play/pause button once will resume the music
Skip Forward / Skip Backward	Playing music	Short push the Next track button to left will skip forward the track. Short push the Previous track button to right will skip backward the track.

(Note: An indication tone will alert you when the volume is adjusted to the maximum or minimum level.)

Play music through “Auxiliary” mode

- Turn ON the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port, and the other end to the audio device (such as phone / MP3 Player / computer / tablet /etc.).
- Select your favourite song at the source device to play.
- Long push the Volume + to left will increase the volume or long push the Volume - to right will decrease the volume.

Note: Play, Pause, Skip Forward, Skip Backward etc can only be controlled through the source devices, while playing music in Auxiliary mode.

Do’s and Don’ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result.

Do not use outdoors in excessive rain or extreme weather conditions.

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume Charge Battery

Sound distorted	Battery nearly dead	Charge Battery
No sound at all	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.
Battery Won't Charge	Charging cable not connected well Charger does not function	Secure the ends of the USB charging cable Try another charging source

Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

Specifications –

Bluetooth® Version: 5.0

Wireless Streaming Range: 26-33 Feet

Speaker output: 3W

Size: Dia. L3.1" x H6.0" x D3.2"

Weight: 18.3 Oz approx.

Power Input: DC 5V

Charging Time: 2-3 hours

Play time: up to 2 hours

Built-In Rechargeable Battery: 3.7V / 1200mAh

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

FCC Instructions

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST. Address: 1400 Centre Circle, Downers Grove, IL 60515.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.