

SP3304

BLUETOOTH SPEAKER

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Argento SC is under license. All other trademarks and trade names are those of their respective owners.
 ©2018 Argento SC.
 All Rights Reserved. Distributed by Argento SC, New York, NY 10018
 Designed in New York. Made in China.
 www.argentosc.com | support@argentosc.com

CHARGING

- To begin charging your speaker, connect the provided charging cable to the speaker's charging port. Then connect the other end of the charging cable to your power source. The indicator light will turn on in red when it's charging.
- The red LED indicator light will turn off once your speaker has reached a full charge.
- Always disconnect the cable when charging is finished.

Note: Make sure you charge your Bluetooth speaker for at least 4 hours before using it for the first time.

WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

- Fire and Electric Shock Hazard**
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
 - Do not expose your speaker to extremely high or low temperatures. Dosing so can cause malfunction.
 - Do not play music at excessive levels. Damage to hearing and/or the speaker may result.
 - Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
 - Do not use outdoors in excessive rain or extreme weather conditions.

Fall Hazard
 Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off of the edge.

CAUTION

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the units internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage your speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

SPECIFICATIONS

Model No: SP3304 Ice Bucket LED Speaker
Working Distance: Approx. 33 ft
Playback Time: 3 Hours
Charge Time: 4 Hours
Speaker Output Power: 5 W
Frequency: 80 Hz - 15 KHz
Profile: HSP / HFP / A2DP / AVRCP

Note: Battery life & charging time may vary based on usage & types of devices used.

BLUETOOTH SPEAKER

SP3304

CONTENTS


- Bluetooth speaker
- Charging cable
- Remote control (1xCR2025 battery included)
- User manual

FEATURES

- Bluetooth speaker with multi-colored LED light
- Bluetooth wireless connection
- Built-in rechargeable battery
- IPX4 waterproof for indoor and outdoor use

LOCATION OF CONTROLS

- LED light
- Speaker
- DC charging port
- Power button

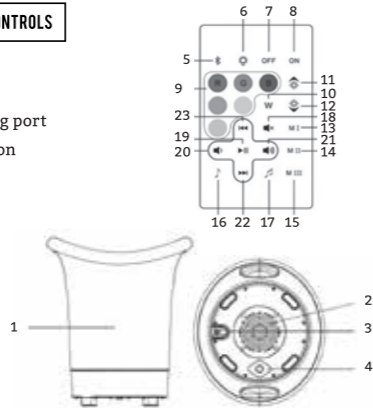

CONTROL PANELS

5.		Connect / Disconnect Bluetooth
6.		Light ON / OFF
7, 8.	ON / OFF	Speaker ON / OFF
9.		Change LED light color
10.	W	Change LED light to white
11, 12.		Increase / Decrease the brightness of LED light
13.	M I	Mode 1: Color changing light
14.	M II	Mode 2: Color changing light with changing light brightness
15.	M III	Mode 3: Color changing light with rapid flash


16.		Music with solid color light
17.		Music with color changing light
18.		Mute
19.		Play / Pause
20, 21.		Increase / Decrease the volume
22.		Next track
23.		Last track

BATTERY

First time use: remove the insulation tab from the battery compartment of the remote control.

Battery Installation

 - Pull the battery tray out of the battery compartment of remote control.
- Place new CR2025 Lithium button cell battery in the tray slot, as per the indicated polarity.
- Close the battery tray.



BLUETOOTH® CONNECTION

- Power the speaker on by pressing and holding the power button. The speaker will automatically enter pairing mode when powered on.

- Turn on your device's Bluetooth from the Bluetooth menu and select "SB_SP3304" speaker.
- When paired successfully the device will make a tone to confirm the connection has been made.
- Remember to turn the speaker off after each use.

Note: The speaker will reconnect automatically if your device has been paired previously. Depending on your device's type and configuration, manual reconnection may be required each time.

Note: If a password is needed, type in 0000.
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
 Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) this device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.