

itek™

BTS-K3 TOUCH PLANTER Bluetooth Speaker



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

1

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Smart flower pot with Bluetooth speaker
- USB charging cable
- Instruction Manual

Key Features

 
- Smart flower pot with Bluetooth speaker
- Elegant plastic flower pot – great for small plants
- Touch the plant and it plays music
- Built-in Bluetooth speaker, connect & wireless stream your favorite tunes
- Built-in color changing LED light
- Built-in rechargeable battery

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids. Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not use the unit if it has been dropped or damaged in any way. Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Do not use the unit with wet hands. Do not put objects into any of the openings. Keep the unit free from dust, lint, etc. Do not use this unit for anything other than its intended use. Keep the unit out of reach of children. This product is not a toy. Do not use the handset at excessive volume levels, as damage to hearing may occur.

2

Description of Parts:



INSTRUCTIONS FOR USE

Charging Instructions

The Bluetooth Flowerpot comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully. Only use the supplied USB Card to charge the device. Please charge for about 2-3 hours. Connect the USB charging cable to a computer USB port and the Micro USB plug to the charging port of the device.

Never exceed the recommended charging time. Never leave product unattended whilst charging.

Turning on the Light

Key mode: Gently press the Light button each time to turn on the light (including night light and color changing lights patterns). In OFF -> night light -> color changing lights. Press the Light button again to turn off the light.

Touch mode: Long press the Light button and the green light will flash several times to turn on the touch mode. The light (including night light and color changing lights patterns) can be switched or turned off by touching the plant each time. Long press the Light button again will turn off the touch mode with red light flashing a few times.

Switching on/off the device

Long Press the Power Button to turn on the device, you'll hear musical tone to indicate unit has been turned On.

Once the flowerpot is turned On, Long Press the Power Button to turn off the unit.

Setup Guide

- Remove the product and check to ensure the product & accessories are complete
- Plant your favorite plant in the flowerpot. Water them regularly to keep the soil moist
- Turn On the flowerpot and by default you are now in the Musical mode
- Touch the plant now and you'll hear the plant tune. Short press the Next Tune button and next tune would be selected.

3

Pairing the device with Bluetooth devices (phone or music device)

Ensure the flower pot is turned On. Short Press the Power / Mode button once and you'll hear beep sound to confirm you're now in Bluetooth pairing mode.

Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the "TOUCH PLANTER" from the list of available Bluetooth devices.

If required, enter the password "0000" to confirm & finalize pairing.

Once paired successfully, you'll hear beep tone to confirm the connection. You can now start to use the device.

If pairing is unsuccessful, turn off the device first and then re-pair following the above steps. Once you have paired the flowerpot with a device, the flowerpot will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

Listening to Music

Once the flowerpot is paired with your device you can stream music wirelessly. Should you encounter any problems while streaming please refer your device's user manual for further information.

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices. Destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

4

Specifications

Bluetooth specification	Bluetooth 4.0
Operating distance	8-10 Meters
Working time	Up to 2.5 hours (max. volume)
Charging input voltage	DC 5V
Charging time	About 2-3 hours
Speaker Output	3 Watts
Built-in Battery	1200mAh

[Note: Battery life & charging time may vary based on usage & types of devices used.]

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer's warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other

5

causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contract or common law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90-day warranty period, a product with a defect will be either repaired or replaced with a reasonable comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at its@midwesttradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to retape the following details with the product: your full name, return address and daytime phone number; a note describing the problem you experienced; a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

6