

Bluetooth® Speaker

YM-100



Please read these instructions thoroughly before use and retain for future reference.

Instructions for use

Please read all instructions carefully.

Getting started

- Remove the Bluetooth® speaker & accessories from the box.
- Remove all packaging from the Bluetooth® product.
- Retain instructions for future reference.
- Place the packaging inside the box to either store or dispose of safely.

In the box

- Mini Lightup Wireless Speaker
- Micro USB plug to 3.5mm and USB plug
- Instruction manuals

Features

- Enjoy music wirelessly.
- Every time the speaker turns on, it connects to last connected device automatically.
- Built-in Lithium rechargeable battery.
- Working time : 2~3 hours

P.1

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a

P.2

- qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of small children.
- This product is not a toy.
- Do not use abrasive cleaning solvents to clean.

P.3



Micro USB charging slot

ON / OFF switch

P.4

Instructions for Use

Charging Instructions

- The speaker comes with a built in rechargeable battery before using it for the first time it is recommended you charge the battery fully.
- Connect the Micro USB charge cable to a computer USB port or a USB wall charger (not included). And, connect the Micro USB plug to the charging slot of the speaker. The Red battery charging LED indicator illuminates while the speaker is being charged. It takes around 3-5 hours for the unit to fully charge. When the battery is low, you can hear the indicated sound from speaker, please charge the speaker.

Turning on/off the speaker

There is an on/off switch at the bottom of the speaker. You can turn on/off the speaker with this switch. In order to save power, put the switch to off position when the speaker is not in use.

Pairing the speaker with Bluetooth® devices (phone or music device)

- Switch on the speaker, you can hear the indicated sound from speaker.
- Place the speaker and Bluetooth® device (phone or music device) so that they are no further than 3 feet apart; Activate the Bluetooth® function on your Bluetooth® device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth® on your device.
- Once you have activated Bluetooth® on your device, select the speaker "SONAR076720" from the list of available Bluetooth® devices.

P.5

<ul style="list-style-type: none"> • If required, enter the password "0000" to confirm and finalize pairing. • Once paired successfully, you can hear the indicated sound from speaker. • You can now start to use the speaker. • If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps. • Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth® is activated and in range. You do not need to re-pair any previously connected devices. • The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above. • Once the speaker is paired with your device, the music will transmit directly to the speaker. Please refer to our device's user manual for further information. • If the speaker cannot pair up with a device, turn off the speaker and reboot to pair. <p>Using the FM radio Turn on the metal speaker, and press the Mode button to select the FM radio mode. Must be inserted the charging cable as an antenna.</p> <p>(1) Press the Play/Pause button, FM radio will automatic search and will save automatically (2) Press the Volume up & Volume down button to select the desired radio station</p> <p style="text-align: center;">P.6</p>	<p>TF card playback After the metal speaker is turned on, insert the TF card slot, it will switch to micro SD card mode and start playing the music and the Bluetooth mode will be disconnected. Hold the volume buttons down to adjust the volume level and press the volume buttons once to adjust to the previous or next track.</p> <p>Using Line - in After the metal speaker is turned on, connect one end of the Micro USB cable (included) into charging port/Line in jack, the other end of the 3.5mm Line in cable to connect MP3/Smartphone, press the Mode button to select the Line in mode to play music.</p> <p>Please note</p> <ul style="list-style-type: none"> • Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information. • Certain functions and indication tones may vary depending on your mobile phone. • When the volume is adjusted to max, you will hear an indication tone. <p>LED indicators</p> <p>(1) When switch on, blue LED will quickly flash, and waiting for pairing. (2) After pairing, blue colour LED will slowly flash. (3) When play music, blue colour LED will be on.</p> <p style="text-align: center;">P.7</p>												
<p>Power Supply Mode The wireless speaker is powered by the built-in 3.7V lithium battery. Push the "OFF/ON" switch to the "ON" position to power on the speaker.</p> <p>Remarks :</p> <p>(A) We recommend you to charge the battery for 3 – 4 hours before first use, and remember to charge the battery at least once every month. (B) In any state or during any time, you can charge the built-in battery by connecting one end of the attached USB charging cable to the PC and the other end to the USB port of the wireless speaker (it takes about 3 – 4 hours to fully charge an empty battery). (C) You can use any DC 5V (1A) power adaptor with USB output port to charge (not included). (D) The wireless speaker may not work properly during charging, so please fully charge the battery and disconnect the USB charging cable before use.</p> <p>Cleaning & Maintenance Please use soft cloth to clean the speaker and do not attempt to disassemble the speaker.</p> <p>Do's and Don'ts Read the following recommendations before using the speaker.</p> <ul style="list-style-type: none"> • Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected. • Don't use abrasive cleaning solvents to clean the speaker. <p style="text-align: center;">P.8</p>	<ul style="list-style-type: none"> • Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts. • Don't dispose of the speaker in a fire as it will result in an explosion. • Don't expose the speaker to contact with sharp objects as this will cause scratches and damage. • Don't let the speaker fall on the floor. The internal circuit might get damaged. • Don't attempt to disassemble the speaker as this can damage the speaker or cause injury. <p>Technical Specification</p> <table border="1" data-bbox="834 1126 1267 1305"> <tr> <td>Bluetooth® Specification</td> <td>Bluetooth® V4.2</td> </tr> <tr> <td>Operating Distance</td> <td>Max. 10m (approx.)</td> </tr> <tr> <td>Working Time</td> <td>2-3 hours (may vary, depend on music type and volume)</td> </tr> <tr> <td>Charging Input</td> <td>DC5V</td> </tr> <tr> <td>Speaker Power</td> <td>3W</td> </tr> <tr> <td>Built-in Rechargeable Lithium Battery</td> <td>400mAh</td> </tr> </table> <p>Note : Battery life & charging time may vary based on usage & types of devices used.</p> <p style="text-align: center;">P.9</p>	Bluetooth® Specification	Bluetooth® V4.2	Operating Distance	Max. 10m (approx.)	Working Time	2-3 hours (may vary, depend on music type and volume)	Charging Input	DC5V	Speaker Power	3W	Built-in Rechargeable Lithium Battery	400mAh
Bluetooth® Specification	Bluetooth® V4.2												
Operating Distance	Max. 10m (approx.)												
Working Time	2-3 hours (may vary, depend on music type and volume)												
Charging Input	DC5V												
Speaker Power	3W												
Built-in Rechargeable Lithium Battery	400mAh												
<p>Troubleshooting</p> <table border="1" data-bbox="264 1485 759 1868"> <thead> <tr> <th style="text-align: center;">t l u a F</th> <th style="text-align: center;">s n o i t u l o S</th> </tr> </thead> <tbody> <tr> <td>Bluetooth® pair and connection fall</td> <td>Other mobile phone or equipment has been connected before connection, and has not left yet and Bluetooth® cannot be switched off. When connection feature is employed again, the Bluetooth® unit will automatically search for this Bluetooth® equipment for connection. First turn off the Bluetooth® feature of Bluetooth® equipment and the next Bluetooth® equipment can search, pair and connect normally.</td> </tr> <tr> <td>Poor Bluetooth® connection</td> <td>There is a barrier between the mobile phone and Bluetooth® speaker, please remove.</td> </tr> <tr> <td>Bluetooth® may be connected and playing normally, but sometimes, there is an interruption</td> <td>1. There is a barrier between the mobile phone and Bluetooth® speaker, please clear it away. 2. The distance between the Bluetooth® unit and connected mobile phone is too far away, out of normal connection range. Please put them nearer.</td> </tr> </tbody> </table> <p style="text-align: center;">P.10</p>	t l u a F	s n o i t u l o S	Bluetooth® pair and connection fall	Other mobile phone or equipment has been connected before connection, and has not left yet and Bluetooth® cannot be switched off. When connection feature is employed again, the Bluetooth® unit will automatically search for this Bluetooth® equipment for connection. First turn off the Bluetooth® feature of Bluetooth® equipment and the next Bluetooth® equipment can search, pair and connect normally.	Poor Bluetooth® connection	There is a barrier between the mobile phone and Bluetooth® speaker, please remove.	Bluetooth® may be connected and playing normally, but sometimes, there is an interruption	1. There is a barrier between the mobile phone and Bluetooth® speaker, please clear it away. 2. The distance between the Bluetooth® unit and connected mobile phone is too far away, out of normal connection range. Please put them nearer.	<p> Bluetooth® is a trademark on a registered trademark of Bluetooth® SIG Inc.</p> <p>Guidelines for protection of the environment</p> <p> This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.</p> <p>    Made in China</p> <p><small>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</small></p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p><small>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</small></p> <p><small>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</small></p> <p style="text-align: center;">P.11</p>				
t l u a F	s n o i t u l o S												
Bluetooth® pair and connection fall	Other mobile phone or equipment has been connected before connection, and has not left yet and Bluetooth® cannot be switched off. When connection feature is employed again, the Bluetooth® unit will automatically search for this Bluetooth® equipment for connection. First turn off the Bluetooth® feature of Bluetooth® equipment and the next Bluetooth® equipment can search, pair and connect normally.												
Poor Bluetooth® connection	There is a barrier between the mobile phone and Bluetooth® speaker, please remove.												
Bluetooth® may be connected and playing normally, but sometimes, there is an interruption	1. There is a barrier between the mobile phone and Bluetooth® speaker, please clear it away. 2. The distance between the Bluetooth® unit and connected mobile phone is too far away, out of normal connection range. Please put them nearer.												