

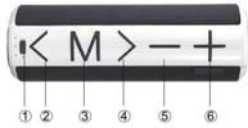


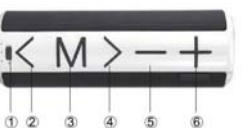


size:100X140mm

<p style="text-align: center;">SYLVANIA ENCEINTE portable SANS FIL MODE D'EMPLOI Modèle: SP190</p>  <p style="font-size: small;">*La photo n'est fournie qu'à titre indicatif. Veuillez vous référer à l'unité actuelle! SYLVANIA est une marque déposée d'OSRAM Sylvania Inc. utilisée sous licence.</p> 	<p>COMMENCER Pour bénéficier des fonctionnalités de la connexion et de l'utilisation du système, l'installation est essentielle. Veuillez lire attentivement le manuel d'utilisation du produit. Conservez ce manuel dans un endroit sûr pour une référence ultérieure.</p> <p>INTRODUCTION Ce Bluetooth® Orateur vous permet d'écouter de la musique sans fil à partir de votre téléphone portable, tablette ou autre appareil compatible Bluetooth®. Il offre un son puissant et clair. Le microphone intégré vous permet de répondre aux appels du téléphone portable.</p> <p>CONSEILS DE SÉCURITÉ Ce produit avec la tension max 5,25V et le courant électrique 2A pour le chargement, et il sera endommagé si la charge est effectuée au-delà de cette tension et courant maximum (N'insérez aucun objet métallique dans l'appareil). Pour éviter une charge statique, n'utilisez pas l'appareil dans un climat extrêmement sec. N'essayez pas d'ouvrir ou de réparer l'appareil vous-même. Évitez les gros chocs du produit et ne le déposez pas. Les piles (batteries ou piles installées) ne doivent pas être exposées à un chauffage excessif, comme le soleil, le feu ou d'autres. Ne pas exposer ce produit à la lumière directe du soleil. Sinon, le produit peut être endommagé.</p> <p>INTRODUCTION DU PANNEAU DE PRODUITS ET DES FONCTIONS</p>  <ol style="list-style-type: none"> 1. Bouton On/Off 2. PREV 3. Bouton de multifonction: Play/Arêt/Mode (Bouton entre Bluetooth et Carte TF) 4. EN SUITE, Vol+ 5. Vol- 6. Micro USB 7. Micro SD carte 8. Entrée d'AUX 9. Entrée d'AUX <p style="text-align: center;">1</p>	<p>Contenu de la boîte Orateur Câble de recharge de Micro USB Câble d'entrée AUX Mode d'emploi</p> <p>RECHARGER LE BLUETOOTH® ORATEUR Connectez le port de micro USB du câble de chargement USB au port d'USB situé sur le côté du haut-parleur. Connectez l'autre extrémité du câble USB au port USB de votre ordinateur ou à un chargeur mural USB (non inclus). L'indicateur LED devient ROUGE, indiquant que la batterie est en cours de chargement. L'indicateur LED s'éteint lorsque le haut-parleur est complètement chargé. (Environ 3 heures).</p> <p>ENTRETIEN DE L'ORATEUR AVEC UN DISPOSITIF HABLETE BLUETOOTH® Gardez votre haut-parleur Bluetooth® et votre périphérique compatible Bluetooth® à moins de 1 mètre pendant le processus d'appariement. Allumez votre haut-parleur Bluetooth®. Les voyants LED bleus et rouges clignotent alternativement, et auront une tonalité Ding-dong. Cela signifie en mode couplage. Le voyant LED à l'avant du haut-parleur clignote. Votre haut-parleur est maintenant en mode couplage. Configurez votre périphérique compatible Bluetooth® pour rechercher des périphériques Bluetooth®. Lorsque le périphérique trouve le SYLVANIA SP190, sélectionnez-le. Sélectionnez "Pair" pour connecter le haut-parleur Bluetooth® à votre appareil compatible Bluetooth®. Il aura une double tonalité Duo duo lors de la connexion avec succès. Selon le périphérique sur lequel vous essayez de connecter le haut-parleur, il peut être nécessaire d'entrer un code d'accès. Entrez le mot de passe "0000" si le périphérique le demande. Votre appareil compatible Bluetooth® confirmera que l'association a été complétée. Vous invite à accepter la connexion. Répondez OUI pour connecter le haut-parleur Bluetooth® à votre appareil compatible Bluetooth®. Remarque: Une fois que le haut-parleur est apparié et connecté à votre appareil Bluetooth®, il se connecte automatiquement le prochain fois tant que Bluetooth® sur votre appareil est allumé. Lors de la lecture de musique par Bluetooth®, le LED bleue clignote lentement.</p> <p style="text-align: center;">2</p>	<p>UTILISER VOTRE BLUETOOTH® ORATEUR POUR JOUER DE LA MUSIQUE Pour profiter de la musique sans fil sur votre Bluetooth® orateur, assurez-vous d'être connecté à un périphérique compatible Bluetooth®, Une fois connecté, vous pouvez appuyer sur PLAY sur votre appareil Bluetooth® ou vous pouvez appuyer sur la touche M de l'orateur. Une fois la musique jouée, vous pouvez la contrôler à partir des boutons de commande de l'orateur.</p> <p>Contrôle du volume Appuyez sur le bouton "+" ou "-" pour régler le volume au niveau désiré. Remarque: Vous pouvez également régler le volume du contrôle de volume de votre périphérique Bluetooth®.</p> <p>Play/Pause Appuyez sur le bouton M pour mettre la musique en pause. Pour reprendre la musique, appuyez de nouveau sur ce bouton.</p> <p>Changer de la musique (Avec des périphériques avec profil AVRCP Bluetooth®) Appuyez sur le bouton "+" pour accéder à la prochaine chanson. Appuyez sur le bouton "-" pour accéder à la chanson précédente.</p> <p>FONCTIONS DU BOUTON TÉLÉPHONIQUE Remarque: Vous pouvez répondre et mettre fin à l'appel en écoutant de la musique, La musique ne s'arrête pas pendant que vous êtes en train de parler et redemander lorsque l'appel est terminé.</p> <p>Répondre / Terminer un appel Pour répondre à un appel: Appuyez brièvement sur le bouton M. Pour terminer un appel: Appuyez à nouveau sur la touche M. Pour refuser un appel: Maintenez la touche M enfoncée pendant environ 2 secondes. Pour appeler: Composez le numéro et appuyez sur le bouton ENVOYER sur votre téléphone portable. L'appel est automatiquement transféré vers l'orateur. Pour recomposer le dernier numéro appelé: Appuyez sur le bouton M deux fois rapidement.</p> <p style="text-align: center;">3</p>	<p>Comment jouer à la carte Micro SD Insérez la carte Micro SD au produit. Le bouton en mode carte SD est éteint et la musique se joue automatiquement. Le LED bleue clignote lentement. Appuyez sur le bouton "+" ou "-" pour la prochaine chanson ou la chanson précédente. Appuyez sur le bouton "+" ou "-" pour régler le volume au niveau désiré. Appuyez sur le bouton "M" peut changer en mode Bluetooth ou en mode AUX lorsque vous installez un câble de 3,5 mm.</p> <p>Comment jouer au mode AUX Insérez le câble de 3,5 mm sur le produit. Le bouton en mode AUX et le voyant rouge clignote lentement. Vous pouvez profiter de la musique à partir du téléphone portable connecté. Appuyez sur le bouton "+" ou "-" pour régler le volume au niveau désiré. Appuyez sur le bouton "M" peut passer en mode Bluetooth ou en mode Carte Micro SD lorsque le Micro SD est inséré.</p> <p>Le dernier numéro appelé sans redémarrage, SPECIFICATIONS TECHNIQUES Bluetooth® version: 4.1 Distance du travail: Jusqu'à 10 mètres en espace ouvert Profils de soutien: AVRCP, A2DP, Profil de mains libres (HFP) Et Profil de casque (HSP) Gamme de fréquences: 2,4-2,48GHz Puissance de sortie: 2x3Watts Distortion: ≤ 1,0% Fréquence de réponse: 180Hz – 20KHz Fonction de mains libres pour répondre aux appels depuis le mode Sensibilité du microphone: -40dB Temps de lecture: Temps de musique 6 heures, temps de conversation 10 heures Puissance d'entrée de recharge: DC 5V (micro USB) Temps de recharge: Presque 3 heures Dimension d'unité: 196x76x79mm Poids unité: Presque 332g.</p> <p>Remarque: La durée de vie de la batterie et le temps de charge peuvent varier en fonction de l'utilisation et des types de périphériques utilisés. La conception et les spécifications du produit peuvent être modifiées sans préavis!</p> <p style="text-align: center;">4</p>
---	--	---	--	--

<p style="text-align: center;">SYLVANIA Portable WIRELESS SPEAKER USER MANUAL Modèle: SP190</p>  <p style="font-size: small;">*The picture is only provided for reference. Please refer to the actual unit! SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.</p> 	<p>GETTING STARTED To make a correct use of the functions and know well about the system connection and usage, please read this user's manual carefully before using the product. Keep this manual in a safe place for future reference.</p> <p>INTRODUCTION This Bluetooth® speaker will allow you to listen to your music wirelessly from your mobile phone, tablet or other Bluetooth® enabled device. It delivers powerful and clear sound. The built-in microphone allows you to answer calls from mobile phone.</p> <p>SAFETY INSTRUCTIONS This product with Max voltage 5.25V, and electric current 2A for charging, and it will be damaged if charging is done beyond this max voltage and current. Do not insert any metal object in the device. Do not attempt to open or repair the device yourself. Avoid heavy shocks to the product and do not drop it. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. Do not expose this product to direct sunlight. Otherwise, the product may be damaged.</p> <p>INTRODUCTION OF PRODUCT PANEL AND FUNCTIONS</p>  <ol style="list-style-type: none"> 1. On/Off switch 2. PREV 3. Multifunction button: Play/Pause/Mode (Switch between Bluetooth and TF card playing) 4. NEXT 5. Vol+ 6. Vol- 7. Micro USB charging port 8. Micro SD card 9. AUX input <p style="text-align: center;">1</p>	<p>Box content Speaker Micro USB charging cable AUX input cable User's manual</p> <p>CHARGING THE BLUETOOTH® SPEAKER Connect the micro USB port of the USB charging cable into the USB port on the side of the speaker. Connect the other end of the USB cable to your computer's USB port or an USB wall charger (not included). The LED indicator turns RED, indicating the battery is being charged. The LED indicator will turn off when the speaker is fully charged. (Approximately 3 hours).</p> <p>PAIRING THE SPEAKER WITH A BLUETOOTH® ENABLED DEVICE Keep your Bluetooth® Speaker and Bluetooth® enabled device within 1 meter of each other during the pairing process. Turn on your Bluetooth® Speaker. The blue and red LED lights will flash alternately, and will have a tone Ding-dong. It means in Pairing Mode. Set your Bluetooth® enabled device to search for Bluetooth® devices. When the device finds the SYLVANIA SP190, select it. Select "Pair" to connect to the Bluetooth® Speaker to your Bluetooth enabled device. It will have double tone Duo duo when connection successfully. Depending on which device you are trying to connect the speaker, it may be necessary to enter a passcode. Enter passcode "0000" if prompted by the device. Your Bluetooth® enabled device will confirm that the pairing was completed, and prompt you to accept the connection. Please respond YES to connect the Bluetooth® Speaker to your Bluetooth® enabled device. Note: Once the speaker is paired and connected to your Bluetooth® device, it will automatically connect the next time as long as the Bluetooth® on your device is turned on. When playing music by Bluetooth, the blue LED will flash slowly.</p> <p style="text-align: center;">2</p>	<p>USING YOUR BLUETOOTH® SPEAKER PLAYING MUSIC To enjoy wireless music on your Bluetooth® Speaker, make sure you are connected to a Bluetooth® enabled device. Once connected you can press PLAY on your Bluetooth® device or you can press the M button on the speaker. Once the music is playing, you can control it from the control buttons of the speaker.</p> <p>Volume control Press the "+" or "-" button to adjust the volume in the desired level. Note: You may also adjust the volume from your Bluetooth® enabled device's volume control.</p> <p>Play/Pause Press the M button to pause the music. To resume the music, press this button again.</p> <p>Changing Songs (with devices that have AVRCP Bluetooth® profile) Press the "+" button to go to the next song. Press the "-" button to go to the previous song.</p> <p>TELEPHONE BUTTON FUNCTIONS Note: You may answer & end call while listening to music. The music will stop when a call is answered, and will restart when the call is ended.</p> <p>Answer / End a call To answer a call: Short press the M button. To end a call: Short press the M button again. To reject a call: Press and hold the M button for about 2 seconds. To make a new call: Dial the number and press the SEND button on your mobile phone, the call is automatically transferred to the speaker.</p> <p>To redial the last number called: Press the M button twice quickly. The last number called will be redialed.</p> <p style="text-align: center;">3</p>	<p>How to Play Micro SD card Insert the Micro SD card to the product. It will go into the SD card mode and play the music automatically. The blue LED will flash slowly. Press the "+" button and "-" button to the next song or previous song. Press the "+" or "-" button to adjust the volume in the desired level. Hold the "M" button can change to Bluetooth mode or AUX mode when 3.5mm cable inserted.</p> <p>How to Play AUX mode Insert the 3.5mm cable to the product. It will go into the AUX mode and the red led will flash slowly. You can enjoy the music from the cell phone or multi media player. Press the "+" or "-" button to adjust the volume in the desired level. Hold the "M" button can change to Bluetooth mode or Micro SD card mode when the Micro SD inserted.</p> <p>TECHNICAL SPECIFICATIONS Bluetooth® version: 4.1 Working distance: up to 10 meters in open space Supporting Profiles: AVRCP, A2DP, Hands-Free Profile (HFP) and Headset Profile (HSP) Frequency range: 2.4-2.48GHz Output power: 2x3Watts Distortion: ≤ 1.0% Frequency response: 180Hz – 20KHz Hands-free function for answering calls from mobile Microphone sensitivity: -40dB Playback time: Music time 6 hours, talk time 10 hours Charging input power: DC 5V (micro USB) Charging time: Approx 3 hours Unit size: 196 x 76 x 79 mm Unit weight: approx. 332g.</p> <p>Note: Battery life & charging time may vary, based on usage & type of devices used. The product design and specifications may be changed without prior notice!</p> <p style="text-align: center;">4</p>
---	--	--	---	---

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.