

USER MANUAL

Model No.: YM-500

BLUETOOTH SPEAKER



PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Bluetooth Speaker
- USB rechargeable cable
- Auxiliary cable
- Instruction Manual

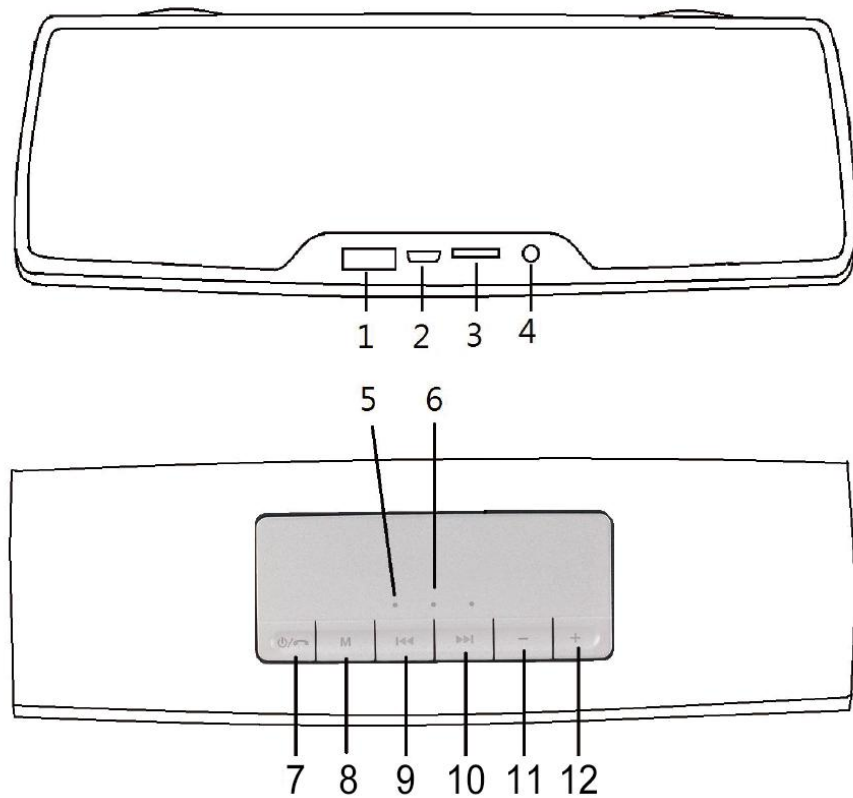
Key Features

 

- Portable Bluetooth Speaker
- Connect Bluetooth enabled devices such as Smart Phones, Tablets, etc. to stream wireless music
- Built-in Mic for hands-free speaker phone
- FM Radio
- Built-In USB Drive Slot and Micro SD (TF) Card Slot to play music from USB Drive and Micro SD (TF) Card respectively. (USB Flash Drive & Micro SD Card not included)
- 3.5mm AUX universal connectivity for MP3/MP4 Players, iPods, computers, netbooks, laptops etc.
- Built-in rechargeable battery

SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunshine, fire or the like.

Description of Parts



1	USB (Flash Drive) Slot
2	Charging Port
3	Micro SD (TF) Card Slot
4	Auxiliary Port
5	Blue LED Indicator
6	LED Charging Indicator
7	ON/OFF/Play/Pause/Phone Button
8	Mode Button
9	Skip Backward/  Button
10	Skip Forward/  Button
11	Volume Decrease/- Button
12	Volume Increase/+ Button

INSTRUCTIONS FOR USE

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes 3-4 hours to fully charge the speaker. Once the speaker is fully charged, LED Light would turn OFF.

Turning ON/OFF the Speaker –

Before Turning ON the speaker, please ensure that it is fully charged.

Press and hold the ON/OFF button 1-2 seconds to turn on with sound message “Enter to Bluetooth”.

Press and hold the ON/OFF button 1-2 seconds to turn off.

Connect using Bluetooth Technology

- Press and hold the ON/OFF button 1-2 seconds to turn on with sound message “Enter to Bluetooth”, Blue LED would flash, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer’s instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find “YM-500” – Pair it with this device.
- If required, enter the password “0000” to pair with the device.
- Once paired successfully, you will hear sound message “Bluetooth connected”, and only Blue LED stays on.
- You can now stream wireless music on your speaker through your source device.

Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject incoming call	Incoming Call	Press and hold the Phone button for 1 second
End Call	Incoming Call	After your phone conversation, short press the Phone button
Increase Volume	During a call	Press and hold the + button to increase the volume
Decrease Volume	During a call	Press and hold the - button to decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the - button to decrease the volume
Pause	Playing music	Short press the Play/Pause button will pause the music
Play	Pausing	Short press the Play/Pause button will resume the music
Previous track	Playing music	Short press the ⏮ button will return you to the previous track
Next track	Playing music	Short press the ⏭ button will take you to the next track

(Note: An indication tone will alert you when the volume is adjusted to the maximum level. In Aux mode, besides the volume increase/decrease, you will need to control through your source device.)

Stream music from Micro SD (TF) Card or USB Flash Drive –

- Turn ON the speaker.
- Insert the Micro SD (TF) Card or USB Drive preloaded with songs, into the Micro SD (TF) Card Slot or USB Card Slot of the speaker respectively, sound message “Music” will be heard and Blue LED would flash.
- Speaker would automatically start playing songs from the Micro SD (TF) Card or USB Drive.
- To Skip Track Forward – Short press the ⏭ button.
- To Skip Track Backwards – Short press the ⏮ button.
- To Pause the Track – Short press the Play/Pause button.
- To Play the Track – Short press the Play/Pause button.
- Long press + to increase the volume or - to decrease the volume.

Note: USB Flash Drive & Micro SD Card not included

Listening to FM radio

- Turn ON the speaker.
- Insert the Micro USB end of the included USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM Antenna while in FM Radio mode.
- Press the Mode button each time until it reaches FM radio mode, sound message “Enter Radio in playing” will be heard and Blue LED would flash.
- To AUTO-SCAN the stations, press Play/Pause button once.
- It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Press ⏮ or ⏭ to skip selected stations.
- Long press + to increase the volume or - to decrease the volume.

Play music through “Auxiliary” mode

- Turn ON the speaker.
- Insert one end of the Auxiliary cable (included) into the Auxiliary port, sound message “Enter Aux-in playing” will be heard and Blue LED would flash. Plug the other end to the audio device (such as phone / MP3 Player / computer / tablet /etc.).
- Select your favourite song at the source device to play.
- Long press + to increase the volume or - to decrease the volume.

Note: Media can be controlled only through the source devices, while playing music in Auxiliary mode.

Tips!!

1. Press the “Mode button” to switch different functions of the speaker between – Bluetooth / USB-Micro SD (TF)/FM radio / AUX-In.
2. When the speaker is not in use, turn it OFF in order to save the battery power.

Specifications –

Bluetooth® Version: 4.2

Wireless Streaming Range Distance: 8-10 Metres

FM frequency range: 87.5-108MHz

Size: L220 x H68 x D70mm

Weight: 673g approx.

Power Input: DC 5V

Charging Time: 3-4 Hours

Play time: up to 2 hours (max. volume), 4 hours (moderate volume)

Built-In Rechargeable Battery: 3.7V / 1800mAh

Micro SD (TF) Card/USB Drive: Support up to 32GB

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Volume turned down source.	Adjust volume source.
	Media paused on source.	Play media from source.

Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.